





DEXTER
LAUNDRY

Detergent Measurements By Washer Model

Double Load
T-300
Washer

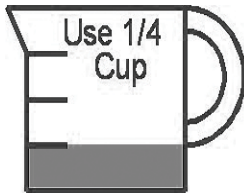

Triple Load
T-400
Washer

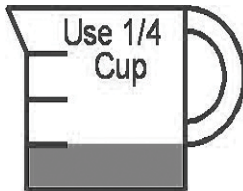

Maxi Load
T-600
Washer



Mega Load
T-900
Washer



Magnum Load
T-1200
Washer



Operating Instructions for Dexter A-Series Commercial Washers

Microprocessor

Prior to operation, the micro computer should be set to display the amount of vend price being offered and the cycle to be given to the user. **NOTE: Should a power loss occur during cycle and when power returns, P U S H will be displayed in window and customer must push the START button to continue the cycle.**

Starting the Washer

- A. Load the clothes loosely in the cylinder and latch the door securely. Be sure clothing does not get caught between the door gasket and tub front when closing the door.
- B. Pour low-sudsing powdered detergent in the amount shown below into the detergent dispenser on top of the machine. Rinse conditioners may also be added to the dispenser. The correct location is shown on the dispenser lid.

NOTE: To close the door the handle must be in the horizontal position and then moved to the vertical position. After moving the door to the closed position, the handle must be turned down to the vertical position to latch the door for machine operation.

- C. Using the TEMPERATURE SELECT buttons on the front, select the desired temperature. If temperature pricing is being used you will display price changes as you push the desired temperature selection. THIS SELECTION MUST BE MADE BEFORE INSERTING COINS TO SATISFY TEMPERATURE PRICE SELECTED. IF COINS OR VALUE ARE ADDED AFTER EXTENDED PLUS CYCLE VEND PRICE IS MET IT WILL BE LOST WITHOUT CREDIT. IF WATER TEMPERATURE PRICING FEATURE IS ACTIVE AND VEND PRICE MET AND MACHINE STARTED THE CUSTOMER MAY CHANGE TEMPERATURE SELECTIONS OF EQUAL TO OR LOWER PRICED

(Continued on next page)

Operating Instructions for Dexter A-Series Washers (Continued)

IT WILL BE LOST WITHOUT CREDIT. IF WATER TEMPERATURE PRICING FEATURE IS ACTIVE AND VEND PRICE MET AND MACHINE STARTED THE CUSTOMER MAY CHANGE TEMPERATURE SELECTIONS OF EQUAL TO OR LOWER PRICED TEMPERATURE SELECTIONS ALREADY INSERTED INTO MACHINE.

- D. Insert coins, tokens or activate card reader to meet displayed vending price. The washer will start, the display will read PUSH and the green “on” led will glow. **THE GREEN START PUSHBUTTON MUST BE PUSHED TO START CYCLE TIME COUNTDOWN AND MACHINE STARTING TO RUN.** “DOOR” will display if loading door is not closed and handle locked.
- E. If utilizing **ADD PLUS CYCLE** \$.000 option The front display will scroll, **ADD PLUS CYCLE .25** (example), amount to be added. User will have 1 minute to insert proper amount to activate this option.
- F. At the correct time in the wash bath cycle the green “**ADD BLEACH**” light will come on indicating the time and showing a diagram of the location for adding bleach if desired. The timing is 2 1/2 minutes after start of wash bath the light will come on and stay on for 2 1/2 minutes or end of wash bath .

End of Cycle

When the cycle is completed, the end of cycle buzzer will sound and the “on” light will go off. The loading door can now be opened by turning the door handle to the indicated position and pulling. Leave the clothes door open when the machine is not in use. Also, at the end of cycle the display will reset to the original amount required to start.

