


BEFORE CONNECTING TO POWER  
READ THIS NOTE.

IN CONTROL ENCLOSURE ON  
THE BACK OF MACHINE:  
SELECT TRANSFORMER TAP TO  
MATCH THE LINE VOLTAGE.  
FAILURE TO DO SO WILL  
CAUSE EQUIPMENT DAMAGE.

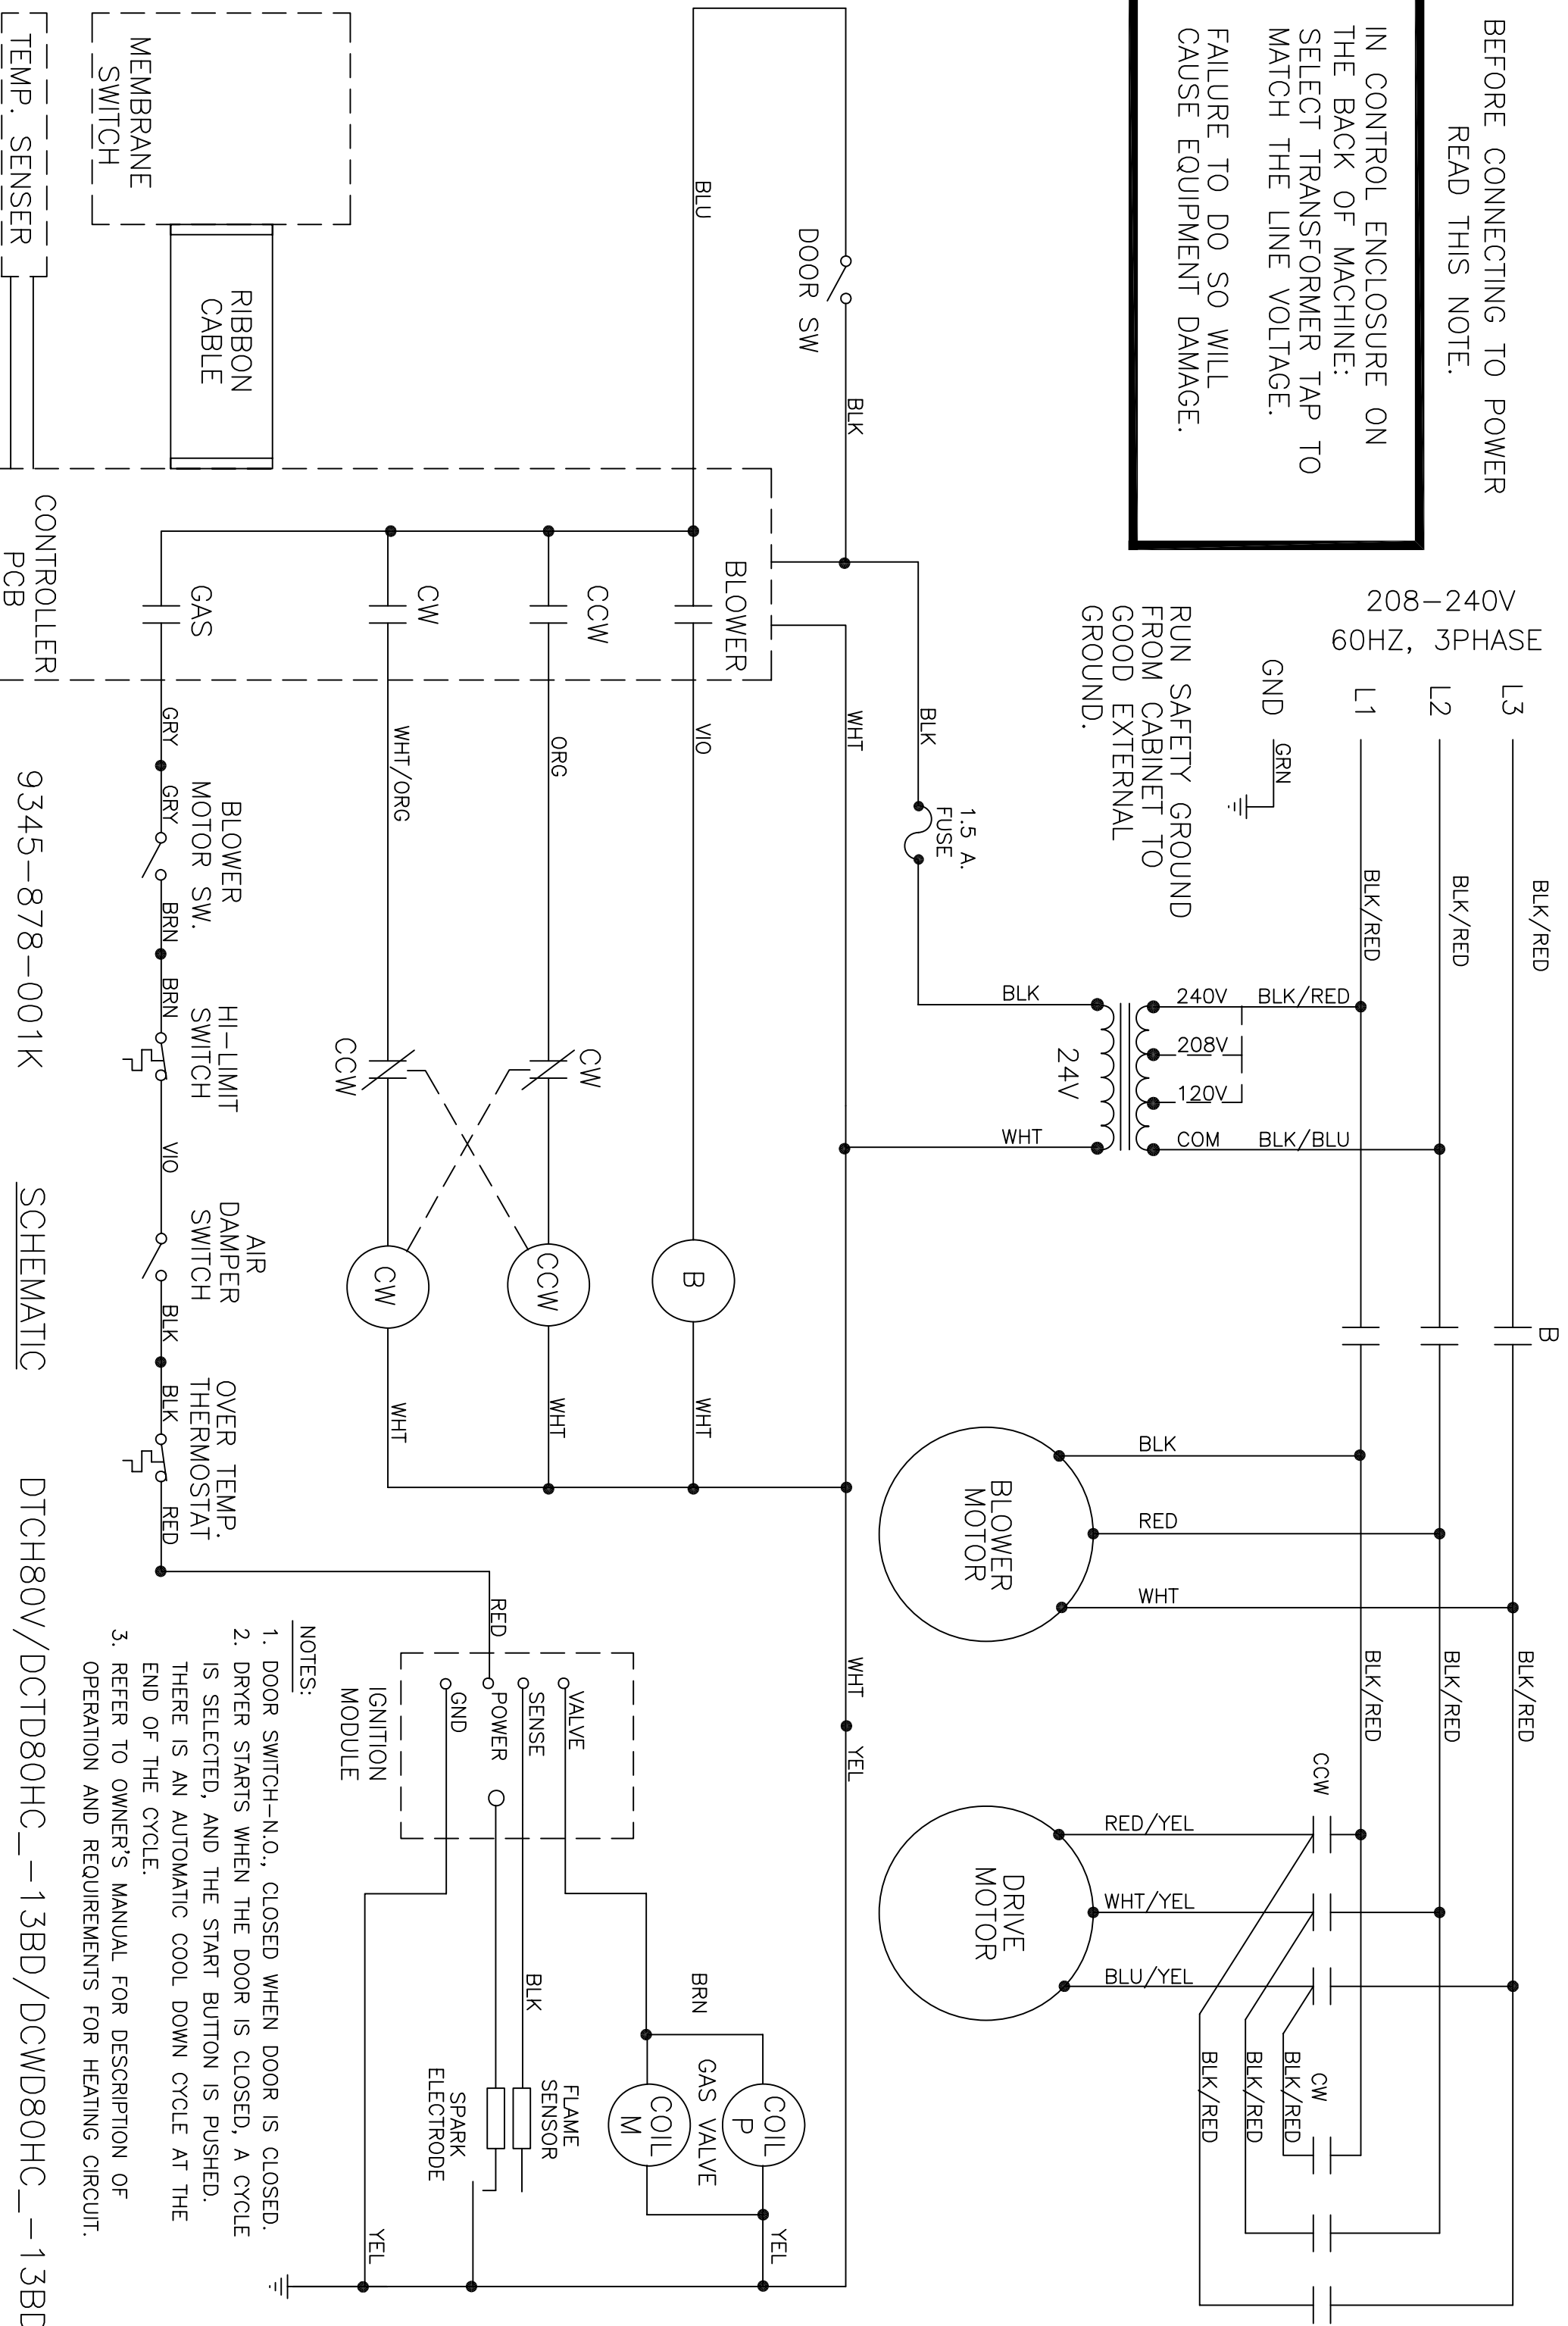

9345-878-001K

SCHEMATIC

DTCH80V/DCTD80HC\_--13BD/DCWD80HC\_--13BD

- NOTES:
1. DOOR SWITCH-N.O., CLOSED WHEN DOOR IS CLOSED.
  2. DRYER STARTS WHEN THE DOOR IS CLOSED, A CYCLE IS SELECTED, AND THE START BUTTON IS PUSHED. THERE IS AN AUTOMATIC COOL DOWN CYCLE AT THE END OF THE CYCLE.
  3. REFER TO OWNER'S MANUAL FOR DESCRIPTION OF OPERATION AND REQUIREMENTS FOR HEATING CIRCUIT.