



NOTES:

1. SWITCHES SHOWN WITH MACHINE OFF AND DOOR OPEN. DRYER STARTS WHEN COIN COUNT IS SATISFIED, DOOR IS CLOSED AND START BUTTON PUSHED.
2. COIN METER AND COOL DOWN SWITCHES CHANGE POSITION WHEN COIN IS INSERTED AND KNOB TURNED. COOL DOWN SWITCH OPENS APPROX. 1 MIN. FROM END OF CYCLE. COIN METER SWITCH OPENS AT END OF CYCLE.
3. CENTRIFUGAL SWITCH CHANGES POSITION WHEN MOTOR IS UP TO SPEED.