

MAINTENANCE HINTS

DAILY

- Clean the top and the cabinet to remove residue.
- Clean the soap dispenser and soap lid.
- Check the drain for leaking and proper draining.
- Check the loading door for leaks. Clean the door seal of all foreign material.
- Leave the loading door open to aerate the washer when not in use.

QUARTERLY

- Make sure the power is disconnected before making the following checks.
- Check the drive belt for wear and proper tension.
- Clean lint and other foreign material from around drive motor.
- Check all water connections for leaks.
- Wipe and clean the inside of the washer and check all electrical components for moisture and dust.
- Remove and clean water inlet hose filters. Replace if necessary.
- After any service always replace all panels before reconnecting electrical power.

WARNING

WARNING — THIS WASHER IS EQUIPPED WITH DEVICES AND FEATURES RELATING TO ITS SAFE OPERATION. TO AVOID INJURY OR ELECTRICAL SHOCK, DO NOT PERFORM ANY SERVICING, UNLESS QUALIFIED TO DO SO.

A machine should not be allowed to operate if any of the following occur:

- Excessively high water level.
- Machine is not connected to a properly grounded circuit.
- Loading door does not remain securely locked during the entire cycle.
- Vibration or shaking from an inadequate mounting or foundation.

WARNING - FOR SAFETY

1. Always shut off power and water supply and also discharge capacitors before servicing.
2. Do not overload the washer.
3. Do not open door if cylinder is in motion or contains water.
4. Do not mechanically force or override door lock in any way.
5. Do not bypass any safety devices of this washer.
6. Do not use volatile or flammable substances in or near this washer.
7. Keep all panels in place. They protect against shock and injury and add rigidity to the washer.