

## Final Check out

**Always disconnect electrical power to the machine before opening the top. Avoid contact with capacitor or other electrical terminals.**

### Open the top of the machine as follows:

- A. Remove the four screws that hold the dispenser to the top panel.
- B. Unlock the top panel, slide to the rear to release and remove the top panel from the machine.

### Setting the Accumulator

**Always disconnect electrical power to the machine before setting the accumulator. Avoid contact with capacitor or other electrical terminals.**

The accumulator board contains the digital coin count and time remaining display and is attached to the front of the machine. The **amount to start** is set by depressing the 6 small switches on the top edge of the accumulator in the correct combination for the desired number of coins. The **time remaining** is set by depressing the other six small switches on the top edge of the accumulator in the correct combination for the desired cycle time. (See chart for correct combinations) The switch numbers and names are printed on the clear cover over the coin accumulator circuit board. The switches are actuated by pushing the switch operator toward the back of the machine. As the switches are very small, a golf tee or some other nonmetallic tool is desirable for this process.

**Note: For use in Canada, the coin acceptor magnet must be removed. See drop coin acceptor in Service Procedures Section for location of magnet.**

## Coin Accumulator Chart

Number of Coins or Minutes	Switch Number					
	1	2	3	4	5	6
1	X					
2		X				
3	X	X				
4			X			
5	X		X			
6		X	X			
7	X	X	X			
8				X		
9	X			X		
10					X	
11	X				X	
12		X			X	
13	X	X			X	
14			X		X	
15	X		X		X	
16		X	X		X	
17	X	X	X		X	
18				X	X	
19	X			X	X	
20						X
21	X					X
22		X				X
23	X	X				X
24			X			X
25	X		X			X
26		X	X			X
27	X	X	X			X
28				X		X
29	X			X		X
30					X	X
31	X				X	X
32		X			X	X
33	X	X			X	X
34			X		X	X
35	X		X		X	X
36		X	X		X	X
37	X	X	X		X	X
38				X	X	X
39	X			X	X	X

