



**DEXTER**

## Dryer Troubleshooting Guide

### Quick Solutions For Do-It-Yourself Repairs

Dryer Symptom	Probable Cause
Basket Does Not Turn	1, 2, 3, 4, 10
No Flame On Burner	3, 5, 6, 7, 8, 9, 10, 12, 14
Take Too Long To Dry	8, 9, 11, 10, 13, 14
Display Fades Out On Computer	10
Sudden Loss Of Customer Time	10
Accepts Coins, Gives Credit, But Won't Start	4, 16, 10
Accepts Coins, No Credit	15, 10

### Legend

1. Broken belt
2. Defective motor
3. Tripped safety thermostat, reset
4. Defective door switch
5. Inoperative ignition control
6. Inoperative air flow switch
7. Fuse defective
8. Spark probe defective
9. Temperature sensor defective
10. Replace computer board
11. Lint blockage or clogged screen
12. Defective transformer (single pocket)
13. Inadequate make up air
14. Back draft damper stuck closed
15. Defective coin switch
16. Touch pad

### Where Can I Find Additional Help?

1. Contact Your Distributor
2. Contact Dexter by phone (641) 472-5131
3. Contact Dexter by FAX (641) 472-6336
4. Dexter Website - [www.dexterlaundry.com](http://www.dexterlaundry.com)