

STACK DRYER TROUBLESHOOTING MOTOR RELAY CONTACTOR

- When the start button is pushed on the control board the contactor should pull down and sends voltage to the dryer motor.
- Check to insure the contact is pulling down when machine is started. If contact is not pulling down check the incoming voltage.
- Check for proper voltage 120VAC on the Black/Red wire coming into the relay contactor when machine is in run mode.
- If voltage is present and contact is not engaging or pulling down then replace relay contactor.
- If contact engages and motor does not start check voltage to the motor on the red wire. If voltage is not present replace relay contactor. If voltage is present on red wire and motor doesn't start then there is a motor issue.

