

DOOR HANDLE SPINS AROUND

If the door hands spins around completely, the washer should be put out of service until a solution has been put in place.

It is likely that the positive stops on the door ring have become damaged.

The recommended solution is replacing the door ring





