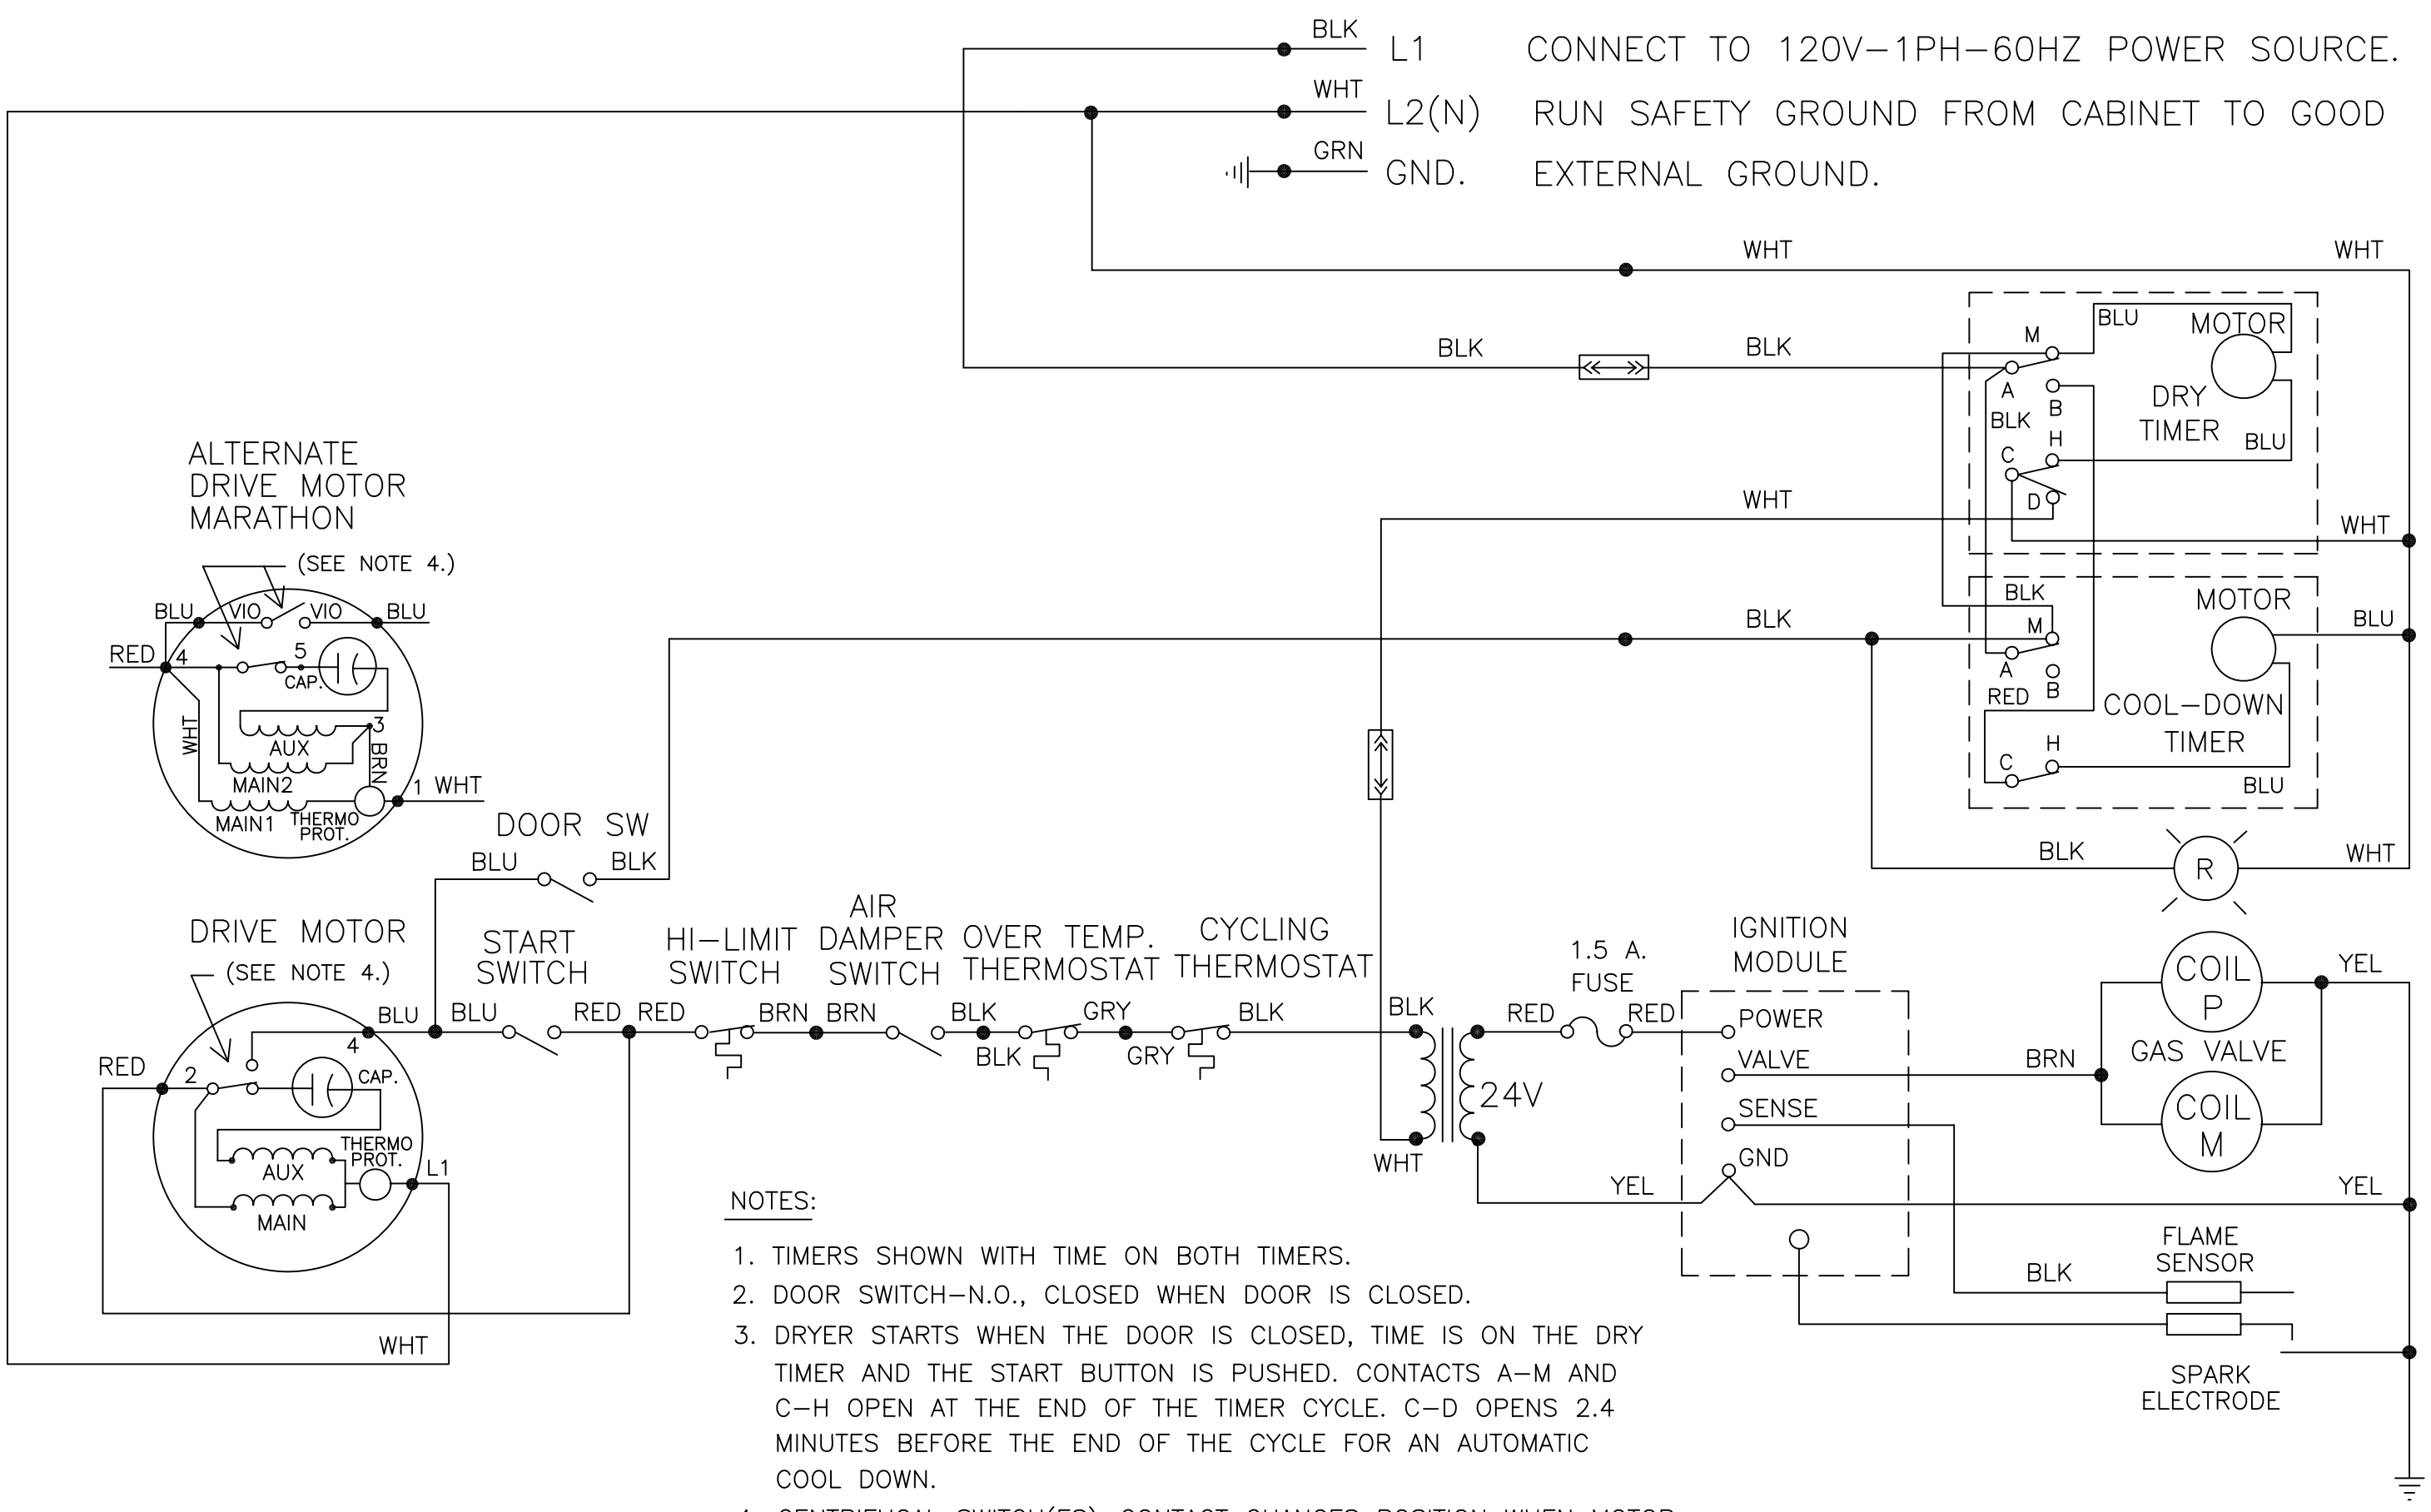

NOTES:

1. TIMERS SHOWN WITH TIME ON BOTH TIMERS.
2. DOOR SWITCH–N.O., CLOSED WHEN DOOR IS CLOSED.
3. DRYER STARTS WHEN THE DOOR IS CLOSED, TIME IS ON THE DRY TIMER AND THE START BUTTON IS PUSHED. CONTACTS A–M AND C–H OPEN AT THE END OF THE TIMER CYCLE. C–D OPENS 2.4 MINUTES BEFORE THE END OF THE CYCLE FOR AN AUTOMATIC COOL DOWN.
4. CENTRIFUGAL SWITCH(ES)–CONTACT CHANGES POSITION WHEN MOTOR IS UP TO SPEED.
5. REFER TO OWNER'S MANUAL FOR DESCRIPTION OF OPERATION AND REQUIREMENTS FOR HEATING CIRCUIT.

SCHEMATIC