


### USE THE BLUE TABS LOCATED ON THE RIGHT AND LEFT SIDES OF THE FOLLOWING DOCUMENT TO ADVANCE TO EACH SECTION.







Dexter O-Series DN0170 Reversing XL Door On Premise Dryer

Parts & Service Manual

Part # 8533-123-001 11/23

### Equipment Safety Warnings Symbols and Terminology Used in this Equipment

| A DANGER | Indicates an i<br>not avoided, v   |
|----------|--|
|          | Indicates a po<br>avoided could  |
|          | Indicates a po<br>avoided, may<br>also be used t<br>burns, pinch p   |
| NOTICE   | chemical irrita<br>Indicates info<br>directly or ind<br>tion of proper   |
|          | This is the use<br>where damage<br>the operator of<br>not followed.<br>INJURY, refer<br>steps or proce                 |
| A        | This is the ele<br>there are DAN<br>the enclosure<br>FIRE OR ELEC<br>enclosure or g<br>instructed to o<br>SERVICE PERS |
|          | Caution! There<br>parts internal   |





Caution! To reduce the risk of fire or explosion, do not operate this equipment in any hazardous classified (ATEX) environment.

imminently hazardous situation, which if will result in death or serious injury.

otentially hazardous situation, which if not I result in death or serious injury.

otentially hazardous situation which, if not result in minor or moderate injury. It may to alert against unsafe practices. Minor points that result in bruises and minor ation.

ormation or a company policy that relates directly to the safety of personnel or protecrty.

er caution symbol. It indicates a condition ye to the equipment resulting in injury to could occur if operational procedures are TO REDUCE THE RISK OF DAMAGE OR r to accompanying documents; follow all edures as instructed.

ectrical hazard symbol. It indicates that NGEROUS HIGH VOLTAGES PRESENT inside of this product. TO REDUCE THE RISK OF CTRIC SHOCK, do not attempt to open the gain access to areas where you are not do so. REFER SERVICING TO QUALIFIED SONNEL ONLY

Caution! There are sharp edges on various sheet metal parts internal to the enclosure. Use safety consciousness when placing or moving your hands while working in the interior of this equipment.

Caution! To reduce the risk of damage to the Water Inlet Valve, do not supply inlet water with a temperature that exceeds 70° C.

### Equipment Safety Warnings Symbols and Terminology Used in this Equipment



Warning! Do not operate equipment if door glass is damaged in any way.



Warning! Keep clear of rotating parts.



Prohibited! Do not enter this equipment or space.



Prohibited! Do not step or stand on this equipment.

Prohibited! Do not operate without all guards and covers in place.



Prohibited! Do not operate without all guards and covers in place.



Prohibited! Do not wash or Dry clothing impregnated with flammable liquids (petrochemical).



Prohibited! Do not allow children to play in or around equipment.

|   | Indicates an               |
|---|----------------------------|
|   | which if not               |
|   | ous injury.                |
| A WARNING   | Indicates a                |
|   | which if not               |
|   | serious inju               |
|   | Indicates a                |
|   | which, if not              |
|   | moderate in                |
|   | against unsa               |
|   | points that r              |
|   | Indicates in               |
| NOTICE  | relates direc              |
|   | sonnel or pr               |
|   | This is the u              |
| ^   | condition w                |
|   | sulting in inj             |
|   | operational                |
|   | TO REDUCE                  |
|   | refer to acc               |
|   | steps or pro               |
|   | This is the e              |
| ^   | that there a               |
| 14  | PRESENT in                 |
|   | TO REDUCE                  |
| The second se | SHOCK, do r                |
|   | gain access                |
|   | ed to do so.<br>SERVICE PE |
|   | Caution! To                |
| <b>A</b>  | do not opera               |
|   | classified (A              |
| /EX   |                            |
|   |                            |
|   |                            |
|   |                            |
|   |                            |
| L   |                            |

n imminently hazardous situation, t avoided, <u>will result</u> in death or seri-

potentially hazardous situation, avoided <u>could result</u> in death or ry.

potentially hazardous situation of avoided, <u>may result</u> in minor or njury. It may also be used to alert afe practices. Minor burns, pinch result in bruises and minor chemical

formation or a company policy that ctly or indirectly to the safety of perrotection of property.

iser caution symbol. It indicates a here damage to the equipment rejury to the operator could occur if procedures are not followed. THE RISK OF DAMAGE OR INJURY, companying documents; follow all ocedures as instructed.

electrical hazard symbol. It indicates are DANGEROUS HIGH VOLTAGES aside the enclosure of this product. THE RISK OF FIRE OR ELECTRIC not attempt to open the enclosure or to areas where you are not instruct-REFER SERVICING TO QUALIFIED ERSONNEL ONLY

reduce the risk of fire or explosion, rate this equipment in any hazardous ATEX) environment.

|          | • All washers and Dryers must be installed in ac-<br>cordance to all applicable electrical, plumbing and all<br>other local codes.  |
|----------|---|
|          | • These installation and operation instructions are<br>for use by qualified personnel only. To avoid injury<br>and electrical shock, do not perform any servicing<br>other than that contained in the installation and op-<br>eration instructions, unless qualified. |
| EX       | Do not install washers or Dryers in an explosive at-<br>mosphere.   |
| $\wedge$ | •Care must be stressed with all foundation work to<br>ensure a stable unit installation, eliminating pos-<br>sibilities of excessive vibration.   |
|          | •Foundation must be level within 13 mm to ensure proper washer operation.   |
|          | Do not operate Dryer if door glass is damaged in any<br>way.  |
|          | Do not wash or Dry clothing impregnated with flam-<br>mable liquids (petrochemical).  |



ensure they do not operate or play in or around equipment. Keep all panels in place to protect against electrical shock and injury and add rigidity to washer.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

A washer should not be allowed to operate if any of the following occur:

- Excessive high water level.
- Machine is not connected to a properly earthed circuit. •
- •

6

Door does not remain securely locked during the entire cycle. Vibration or shaking from an inadequate mounting or foundation

| Warning! Do not operate equipment if door glass is<br>damaged in any way.                        |
|--|
| Warning! Keep clear of rotating parts.   |
| Prohibited! Do not enter this equipment or space.  |
| Prohibited! Do not step or stand on this equip-<br>ment.   |
| Prohibited! Do not operate without all guards and covers in place.                               |
| Prohibited! Do not operate without all guards and covers in place.                               |
| Prohibited! Do not wash or Dry clothing impreg-<br>nated with flammable liquids (petrochemical). |
| Prohibited! Do not allow children to play in or<br>around equipment.                             |
|  |

|     | Prohibited! Do n<br>ceed before refe<br>fied. |
|-----|---|
|     | Mandatory! Read<br>fore operating o           |
|     | Mandatory! Disc<br>equipment.                 |
|     | Mandatory! Lock<br>this equipment.            |
| xÅ. | Mandatory! Child<br>they do not ope           |

8

not attempt to open, touch, or proerring to the manual or unless quali-

ad all supporting documentation beor maintaining equipment.

connect power before servicing

k out and tag out before servicing

Idren should be supervised to ensure erate equipment.

## Dexter Safety Guidelines



These washers are equipped with devices and features relating to their safe operation. To avoid injury or electrical shock, do not perform and service, unless qualified to do so.



For your safety, the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or loss of life.

#### **IF YOU SMELL GAS:**

- Do not try to light any appliance.
- Do not touch any electrical switch: do not use any telephone in your building.
- · Clear the room, building or area of all occupants.
- Immediately call your gas supplier from a neighbor's telephone.
- Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department. Installation and service must be performed by a qualified installer, service agency or the gas supplier.

Dry only fabrics washed in water to avoid the risk of fire, including spontaneous combustions, do not dry:

- Items containing foam rubber, or any similarly textured rubber-like materials.
- Any items on which you have used a cleaning solvent or which contain flammable liquids or solids, such as naptha, gasoline, or other oils or waxes.

To activate your warranty, be sure to return your warranty form to the factory. Please have serial number and model ready when calling for assistance.

## Table of Contents

**Section 1: Specifications & Installation** Specifications, Mounting Dimensions

#### Section 2:Installation Instructions

| Dryer Installation & Clearances | 18    |
|---------------------------------|-------|
| Dryer Make up air               | 19    |
| Electrical Requirements         | 19    |
| Gas Requirements                | 20    |
| Exhaust Installation            | 20-21 |
| Dryer Ignition & Testing        | 21    |

#### Section 3: Dryer Operating & Programming Instructions

| Dryer Operating Instructions | 26 & 27 |
|------------------------------|---------|
| Dryer Program                | 28-42   |

#### Section 4:

| Dryer Service, Troubleshooting and Schematics |  |
|---|--|
| Dryer Service Procedures46-68                 |  |
| Dryer Troubleshooting70-77                    |  |
| Dryer Schematics & Diagrams 60hz              |  |

#### Section 5:

| Dryer Parts Data<br>Dryer Cabinet Group | 84-91   |
|---|---------|
| Dryer Rear View                         | 92-97   |
| Dryer Bearing Housing                   | 98      |
| Dryer Tumbler Group                     | 99      |
| Dryer Burner Assembly                   | 100-101 |
| Dryer Air Flow Switch Assembly          | 102     |
| Dryer Electrical Box & Informative      | 104-105 |
| Dryer RMC                               | 106-107 |
| Dryer Fire Suppression                  |         |
| (Option)108-109                         |         |

#### Section 6:

| 50hz Gas Dryers       |         |
|-----------------------|---------|
| 50hz Dryer Parts      | 118-119 |
| 50hz Dryer Schematics | 120-121 |

#### Section 7:

Maintenance

Dryer.....124

### Notes

| <br> |
|------|
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |

### Machine Specifications: 170 Lb.

#### **Dimensions / Capacity**

Dry Weight Capacity - Ib (kg) Cabinet Height - in (cm) Cabinet Width - in (cm) Overall Depth - in (cm) Door Opening - in (cm) Cylinder Diameter - in (cm) Cylinder Depth - in (cm) Cylinder Volume - cu.ft. (liters) Tumbler Speed

#### Airflow - cfm (M3/min)

60Hz W/12" Outlet Lint Screen Area Net Weight - Ib (kg)

#### **Shipping Dimensions:**

Shipping Weight Height - in (cm) Width - in (cm) Depth - in (cm)

### BTU's / Circuit Breaker / Running Amps / Wire Size

Gas Models 60Hz Gas Supply Connection Natural Gas Supply - (water column) Manifold LP Gas Supply - (water column) Manifold

Gas Models

-13 (208-240/60/1 - 2 wire + ground)

#### **Installation Recommendations**

Clearance Behind Machines Make-up Air Req. (per dryer) Exhaust Size - in (cm)

# Section 1:

Dryer Specifications and Mounting


| 170 lb<br>94"<br>53.125"<br>63"<br>30"<br>50.25"<br>43.5"<br>50 cu.ft.<br>32.5 RPM | (77.1 kg)<br>(238.8 cm)<br>(134.9 cm)<br>(160 cm)<br>(76.2 cm)<br>(127.6 cm)<br>(110.5 cm)<br>(1415.8 l) |  |  |
|--|--|--|--|
| 1900 cfm   | (53.8 M3/min)  |  |  |
| 1021 sq.in.  | (6587 sq.cm)   |  |  |
| 1361 lbs   | (617.3 kg)   |  |  |
| 1440 lbs   | (653.2 kg)   |  |  |
| 97.125″  | (246.7 cm)   |  |  |
| 54.625″  | (138.7 cm)   |  |  |
| 71.375″  | (181.3 cm)   |  |  |


| 400,000 BTU/hr | (117.2 kW)       |
|----------------|------------------|
| 1″             | (25.4 mm)        |
| 5 - 8″         | (12.7 - 20.3 cm) |
| 3.5″ Max       | (8.9 cm)         |
| 11.5 - 13.5″   | (29.2 - 34.3 cm) |
| 11″            | (27.9 cm)        |

20 amp / 8.5 amp / #12

| 18″      | (45.7 cm)    |
|----------|--------------|
| 3 sq.ft. | (2787 sq.cm) |
| 12″      | (30.5cm)     |


### **Machine Dimensions Front View**

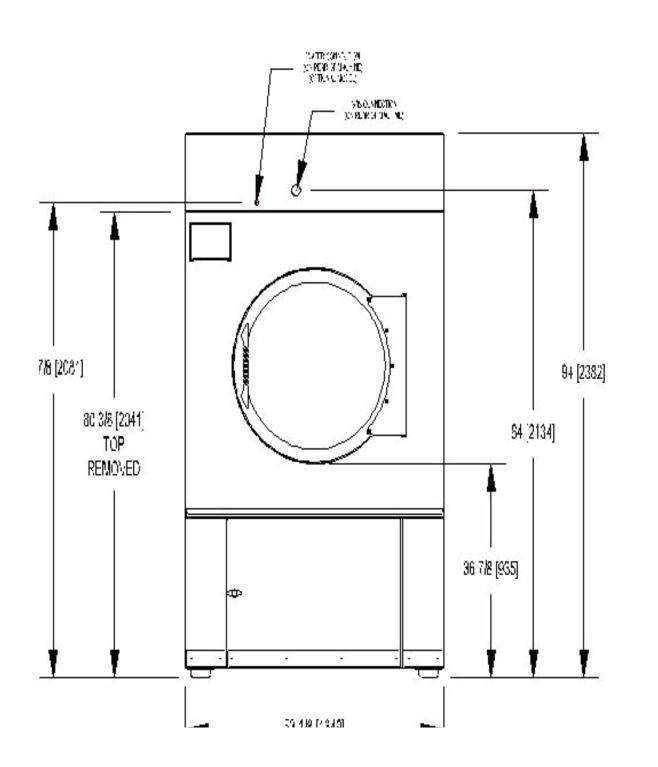

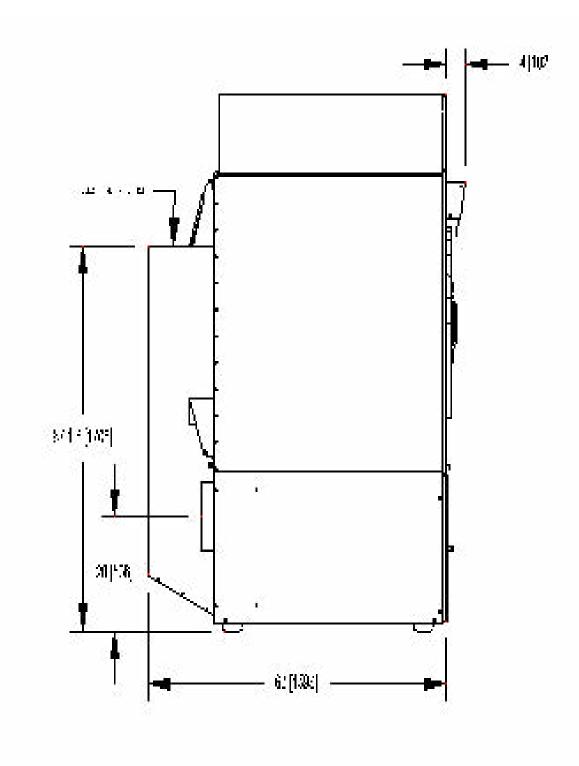

### Machine Dimensions: 170Lb

### Machine Dimensions: 170Lb

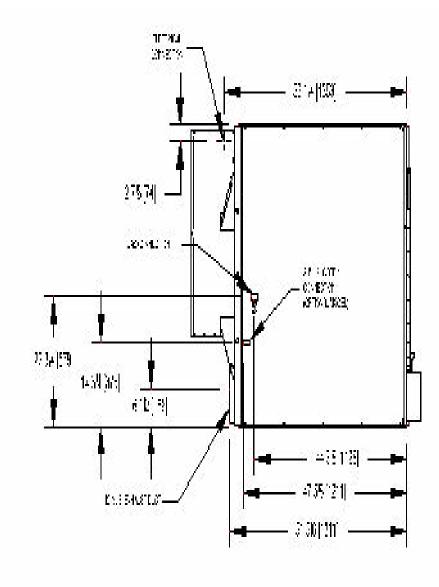

## Notes

| <br> |
|------|
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |


**Dryer Installation** All commercial dryer installations must conform with local codes or, in the absence of local codes, with the latest edition of the National Fuel Gas Code ANSI Z223.1A. Canadian installations must comply with current Standard CAN/CGA-B149 (.1 or .2) Installation Code for Gas Burning Appliances or Equipment, and local codes if applicable. Australian installations must meet installation requirements and pipe sizing requirements of AS/NZA 5601. The appliance, when installed, must be electrically grounded in accordance with the latest edition of the National Electrical Code, ANSI/NFPA70, or, when installed in Canada, with Standard CSA C22.1 Canadian Electrical Code Part 1.

To connect the dryer to the supply piping, use a listed connector in compliance with the Standard for Connectors for Gas Appliances, ANSI Z21.24 • CSA 6.10.

#### **Installation Clearances:**

This unit may be installed at the following alcove clearances. (millimeters)

| 1. Left side-  | 0″   |
|----------------|--|
| 2. Right side- | 0″ *   |
| 3. Back-       | <b>1</b> 8" (457) (Certified for sary behind the belt gu   |
| 4. Front-      | 48" (1220) (to allow use   |
| 5. Тор-        | Refer to figure labelled<br>Certification allows 0" of<br>1/4" (6)clearance is reo<br>clearance is required fr                       |
| 6. Floor-      | This unit may be install<br>*Units may be installed<br>ing allowance is made in<br>not obstruct the flow o<br>minimum of 1" (25) cle |
|                |  |

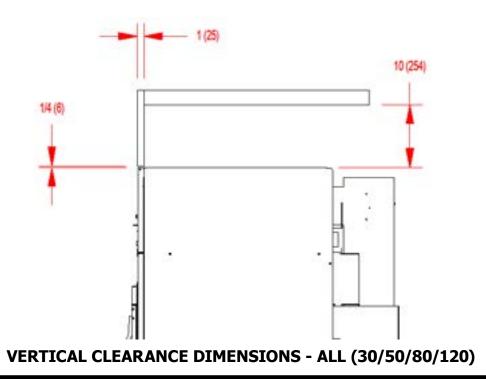

# Section 2:

Dryer Installation r 1" (25) clearance; however, 18" (457) clearance is necesuard to allow servicing and maintenance.)

se of dryer)

"Vertical Clearance Dimensions".

clearance at the top 1" (25) back from the front. However, a equired to allow opening the upper service door. A 10" (254) from the top at all other points.

lled upon a combustible floor.

ed in direct contact with an adjacent dryer, provide for opening upper and lower service doors. Do of combustion and ventilation air. Maintain earance between duct and combustible material.

#### **MAKE-UP AIR**

Adequate make-up air must be supplied to replace air exhausted by dryers on all types of installations. Refer to specifications for the minimum amount of make-up air opening to outside for each dryer. This is a net requirement of effective area. Screens, grills or louvers, which will restrict the flow of air, must be considered. Consult the supplier to determine the free area equivalent for the grill being used. The source of make-up air should be located sufficiently away from the dryers to allow an even airflow to the air intakes of all dryers. Multiple openings should be provided.

The sources of all make-up air and room ventilation air movement to all dryers must be located away from any dry cleaners. This is necessary so that solvent vapors will not be drawn into the dryer inlet ducts. Dry cleaner solvent vapors will decompose in contact with open flame such as the gas flame present in clothes dryers. The decomposition products are highly corrosive and will cause damage to the dryer(s) ducts and clothes loads

#### ELECTRICAL REOUIREMENTS.

The electrical power requirements necessary to operate the unit satisfactorily are listed on the serial plate located on the back panel of each dryer and in the specifications section of this manual. The electrical connection should be made to the terminal board, on the rear of the unit. It is absolutely necessary that the dryer be grounded to a known ground. Individual circuit breakers for each dryer are required.

Individual circuit breakers for each unit are recommended. Do not use ground-fault circuit breakers or ground-fault circuit interrupter outlets. The wiring diagram is located on the belt guard on the back of the machine.

#### TRANSIENT VOLTAGE SURGE SUPPRESSORS

Like most electrical equipment your new machine can be damaged or have its life shortened by voltage surges due to lightning strikes which are not covered by factory warranty. Local power distribution problems also can be detrimental to the life of electrical components. We recommend the installation of transient voltage surge suppressors for your new equipment. These devices may be placed at the power supply panel for the complete installation and don't require and individual device for each machine.

These surge protectors help to protect equipment from large spikes and also from small ongoing spikes in the power that occur on a day to day basis. These smaller surges can shorten overall life of electrical components of all types and cause their failure at a later date. Although they can't protect against all events, these protective devices have a good reputation for significantly lengthening the useful life of electronic components.

Electronic Components are helped to have a longer useful life when they are supplied with the clean stable electrical power they like.

We are including the following names and links to a few suppliers of these devices for those who don't currenty have a source.

| MANUFACTURER           | LINK                |
|------------------------|---------------------|
| MCG Surge Protection   | mcgsurge.com        |
| Eaton Corporation      | eaton.com/us/en-us  |
| Schneider Electric     | se.com/us/en        |
| Asco Power Technolgies | ascopower.com/us/en |
| Emerson Electric Co.   | emerson.com/en-us   |

#### GAS REQUIREMENTS.

The complete gas requirements necessary to operate the dryer satisfactorily are listed on the serial plate located on the back panel of the dryer. An individual gas shutoff valve is recommended for each dryer and may be required by local code (not supplied). The inlet gas connection to the unit is 1/2 inch [12,7] pipe thread for T-30/T-50 and 3/4 inch [19.1] for the T-80/T-120. A joint compound resistant to the action of liquefied petroleum gases should be employed in making pipe connections. A 1/8 inch NPT plugged tapping, accessible for test gage connection, must be installed immediately upstream of the gas supply connection to the dryer. A drip tee should be provided in the gas piping entering the unit to catch dirt and other foreign articles. All pipe connections should be checked for leakage with soap solution. Never check with an open flame. The recommended natural gas supply pressure is 7 inches water column (17.8 cm) at each dryer.

With the burners in operation, check the gas pressure at the threaded port in the end of the burner manifold. Adjust the dryer's gas control valve for 3.5 inches water column (8.89 cm w.c.) pressure at the manifold (Adjust T-30 -39 models to 3.4 in. w.c. (8.64 cm w.c.)).

For altitudes above 2,000 feet (610m) it is necessary to de-rate the BTU input. Contact your local distributor for instructions. L.P. gas conversion kits are available for this dryer. Contact your local distributor.

**CAUTION:** The dryer must be disconnected from the gas supply piping system during any pressure testing of that system. Do not expose the dryer's gas control value to testing pressure.

#### Burner Set-Up

All gas burner manifolds should be checked for proper gas pressure while burning. Dryer manifold pressure should be set at 3.5 W.C. for Natural Gas while burner operating.

#### EXHAUST INSTALLATION. (Refer to Figure 2 at the end of section 6.)

Exhausting of the dryer(s) should be planned and constructed so that no air restrictions occur. Any restriction due to pipe size or type of installation can cause slow drying time, excessive heat, and lint in the room.

From an operational standpoint, incorrect or inadequate exhausting can cause a cycling of the high limit thermostat which shuts off the main burners and results in inefficient drying. Individual exhausting of the dryers is recommended. All heat, moisture, and lint should be exhausted outside by attaching a pipe of the proper diameter to the dryer adapter collar and extending it out through an outside wall. This pipe must be very smooth on the inside, as rough surfaces tend to collect lint which will eventually clog the duct and prevent the dryer from exhausting properly. All elbows must be smooth on the inside. All joints must be made so the exhaust end of one pipe is inside the next one downstream. The addition of an exhaust pipe tends to reduce the amount of air the blower can exhaust. This does not affect the dryer operation if held within practical limits. For the most efficient operation, it is recommended that no more than 14' (4.3m) of straight (8" (20.3cm) for T-30/50/80, 10 or 12" (25.4 or 30.5cm) for T-120) diameter pipe be used with two right angle elbows. When more than two elbows are used, 2' (61cm) of straight pipe should be removed for each additional elbow. No more than four right angle elbows should be used to exhaust a dryer.

Maintain minimum 1" (25) clearance between duct and combustible material.

If the exhaust pipe passes through a wall, a metal sleeve of slightly larger diameter should be set in the wall and the exhaust pipe passed through this sleeve. This practice is required by some local codes and is recommended in all cases to protect the wall. This type of installation should have a means provided to prevent rain and high winds from entering the exhaust when the dryer is not in use. A hood with a hinged damper can be used for this purpose. Another method would be to point the outlet end of the pipe downward to prevent entrance of wind and rain. In either case, the outlet should be kept clear, by at least 24" (610), of any objects which would cause an air restriction.

Never install a protective screen over the exhaust outlet.

When exhausting a dryer straight up through a roof, the overall length of the duct has the same limits as exhausting through a wall. A rain cap must be placed on top of the exhaust and must be of such a type as to be free from clogging. The type using a cone shaped "roof" over the pipe is suitable for this application.

Exhausting the dryer into a chimney or under a building is not permitted. In either case there is a danger of lint build-up which can be highly combustible.

Installation of several dryers, where a main discharge duct is necessary, will need the following considerations for installation. Individual ducts from the dryers into the main discharge duct should be at a 45 degree angle in the direction of discharge air flow.

**NOTE:** Never install the individual ducts at a right angle into the main discharge duct. The individual ducts from the dryers can enter at the sides or bottom of the main discharge duct. The main duct can be rectangular or round, provided ad equate air flow is maintained. For each individual dryer, the total exhausting (main discharge duct plus duct outlet from the dryer) should not exceed the equivalent of 14 feet (4.3m) and two elbows. The diameter of the main discharge duct at the last dryer must be maintained to exhaust end.

**NOTE:** A small diameter duct will restrict air flow; a large diameter duct will reduce air velocity – both contributing to lint build up. An inspection door should be provided for periodic clean-out of the main duct.

**NOTE:** STATIC BACK PRESSURE should be a maximum of 0.3 in. w.c (7.6 mm w.c) at the rear exhaust outlet of the dryer. If multiple dryers are connected to the common duct, ensure the back draft damper is installed properly.

#### DRYER IGNITION (SOLID STATE IGNITION).

The solid state ignition system lights the main burner

gas by spark. The gas is ignited and burns only when the gas-valve relay (in the electronic controller) calls for heat. The procedure for first-time starting of a dryer is as follows:

**A.** First, review and comply with the "WARNINGS ABOUT USE AND OPERATION" found on the inside front cover of this manual. Be sure the electrical power supply is connected correctly. The dryer MUST be properly grounded.

**B.** Make sure all gas supply lines are purged of air. Close the main gas shut-off valve and wait for five minutes before turning the valve back on.

**C.** Turn on main electrical power switch. The dryer may be started by following the "OPERATING INSTRUCTIONS" found later in this manual.

**D.** Natural gas and liquefied petroleum gas fired dryers both operate in the same manner. When gas-valve relay contacts are closed (indicating a demand for heat), the solid state ignition control will automatically supply energy to the redundant gas valve. Spark will continue until a flame is detected by the sensing probe, but not longer than 10 seconds. If the gas fails to ignite within 10 seconds, the gas will shut off for 15 seconds. The control will attempt to ignite two more times in a similar manner. If the gas fails to ignite after three tries, the gas valve closes and the system will "lock out". No further attempts at ignition will be performed automatically. It is then necessary to interrupt electrical power to the ignition system before making another attempt to light the burners. This can be done by opening the dryer door, allowing the dryer to come to a stop for 15 seconds, closing the door, and pushing the "Start" button. The dryer will then repeat the ignition trial cycle.

#### WATER CONNECTION – OPTIONAL MODEL

An uninterrupted water supply is required for models with the optional water dispensing fire response system. See the dryer dimension section for the location of the water line connection on the rear of the dryer. The thread size on the water valve is 3/4 - 11.5 NHT. The water supply pressure should be 40-120 psi (2.8-8.2 bar). The system will spray at a rate of 6 gallons of water per minute while spraying. A flex-ible supply line to the dryer is required to prevent damage to the water valve. It is critical to ensure that the room temperature is kept above freezing in the area of the water pipes.

#### **DRYER SHUTDOWN**

To render the dryer inoperative, turn off the main gas shut-off valve and disconnect electrical power to the dryer.

## IT IS RECOMMENDED THAT THE INSTALLER TEST THE DRYER FOR OPERATION AND INSTRUCT THE USER BEFORE LEAVING THE INSTALLATION.

| Notes |  |
|-------|--|
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |

## Notes

| <br> |
|------|
| <br> |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |

### **OPERATING INSTRUCTIONS**

#### STARTING THE DRYER

### 1) Turn on power to the dryer.

#### 2) Load the laundry.

Place laundry in tumbler and close the door securely. Be sure laundry does not get caught between the door gasket and front panel when closing the door. Maximum load is the dry weight capacity listed in the specification sheet. Do not exceed the listed capacity weight.

#### 3) Select dry cycle.

Select the appropriate cycle for the type of load being washed. Use the "UP" and "DOWN" keys to change the cycle on the display to the desired cycle and press the enter button to select.

#### 4) Start dry cycle.

Press enter to start the cycle. The display will show cycle information throughout the cycle.

### 5) Pause dry cycle / End dry cycle

Press the red pause button to pause the cycle. Select Start to restart the cycle or select Cancel Cycle to end the dry cycle.

#### END OF CYCLE

A tone will sound (if programmed) and the display will indicate that the cycle has ended. Immediately remove contents of dryer. Leave the door open when the machine is not in use.

### **PROGRAMMING / MANAGEMENT VIEW**

#### ENTER PROGRAMMING MODE

1. In the cycle selection screen, scroll to Management View at the beginning

- of the cycle list and select enter.
- 2. Enter Passcode and confirm by pressing enter.
- 3. Select desired option.

#### **EDIT CYCLES**

Cycles may be edited in the Edit Cycles selection. Within Edit Cycles, cycles may be edited, copied, reordered or deleted. After making edits, select Back/Exit until out of the option. Confirm changes when prompted to do so. When finished, select Back/Exit until you have returned to the cycle selection screen.

# Section 3:

Dryer **Operating &** Programing Instructions

#### **AUTODRY CYCLES**

Autodry cycles will dry the load to the programmed percent remaining moisture. Available moisture selections are: 25%, 20%, 15%, 10%, 7%, 5%, 3%, 1% and 0%. These can be changed by editing cycles within the Management View. When the desired moisture remaining target has been met, the dryer will advance to the next drying stage. The drying temperature for an Autodry cycle is determined by the programmed selection for Material.

- Cotton 190 degrees F .
- Blend 160 degrees F
- Synthetic 140 degrees F
- Wool 140 degrees F
- Delicate 120 degrees F
- Ultra-delicate no heat

**NOTE:** Autodry cycles will perform best with loads of the same material. Performance will vary with mixed-material loads.

#### **OVERHEAT SENSING**

All O-Series dryers are equipped with an Overheat Sensing System that will detect abnormally rising temperatures. If rising temperatures are detected, the control screen will display OVERHEAT TEMPERATURE DETECTED and an alarm will sound. If the loading door is closed, dryer models with reversing tumblers will begin tumbling after 5 seconds. A 24 VAC output signal will also be sent to the auxiliary terminal block in the control box on the rear of the dryer. This signal is available for customers to use with a supplementary system of their choice. For dryer models with the optional water-based fire suppression system, water will also intermittently be sprayed into the tumbler. If the Overheat Sensing System has been activated, the dryer should be inspected safely and appropriately. After inspecting the dryer, it may be returned to service by resetting the controller by pressing the RESET button on the main control board.

### **O-SERIES DRYERS PROGRAMMING WITH DEXTERLIVE**


Our O-Series dryers are simple and easy to program using DexterLive.com. This guide will provide an overview of some of the features DexterLive offers and how to create the cycles that fit your location's specific needs.

### **Set-Up an Account and Location**

If you don't already have a DexterLive account, it is easy to register at DexterLive.com.

Once you have an account, you can create a new location and customize that location by a specific application. Simply select on-premise laundry as your location type and the application type option will be available.


Tip: If you have multiple applications, you can provide a generic name (e.g., Motel) and use the same custom programs across multiple locations.

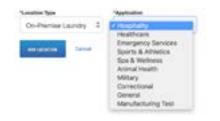

### **Add Equipment**

Before programming cycles, you need to add equipment. Because functionality differs between model types, it is important to select the right model. You can name your machine, input the serial number, and add the DexterLive ID if you choose. However, this information is not required.

Tip: To create a generic program to be used in many locations, leave the serial number and DexterLive ID blank.

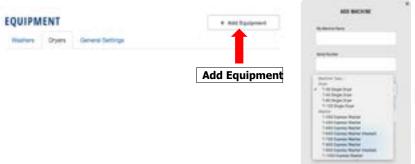



### **General Settings**

General settings will set the global parameters for your location. These parameters will impact all washers and dryers added to that location.

| Equipment   | EQUIPMENT             |                          | + AM    | Equipment |
|-------------|-----------------------|--------------------------|---------|-----------|
|             | Rischers Dryer        |                          |         |           |
| Users       | General Settings - Al | Machine Types            |         |           |
| Programming |                       |                          | 1000    |           |
|             | Wathen and Digen      | Marrice Depley Language  | English | :         |
|             |                       | End of Cycle-Bound.      | 01      | :         |
|             |                       | Butter Boord             | Off     | :         |
|             |                       | Digity Temperature Scale | 44      | 0         |
|             |                       | Passiole                 | 0000    |           |
|             |                       | Ves No-Orlias Bran       | Oh      | :         |
|             |                       | Tree Former              | Wear    | ;         |

| Setting                  | Options       | Notes   |
|--------------------------|---------------|---|
| Machine Display Language | Multiple      | Changes the language of cycles, stages, and<br>prompts that are displayed on the control.<br>Individual cycles can still be set for different<br>languages.             |
| End of Cycle Sound       | On / Off      | Buzzer will sound when cycle is complete.   |
| Button Sound             | On / Off      | Audible feedback when buttons are pressed.  |
| Display Temperature      | °F / °C       | Choose between Fahrenheit or Celsius.   |
| Passcode                 | 0000 – 9999   | Select a code for management screen access  |
| View Non-Critical Errors | On / Off      | Will display errors such as Slow Fill / Slow Drain<br>during cycle. If OFF, these errors will still register in<br>the cycle log, but will not be shown on the display. |
| Time Format              | 12 hr / 24 hr | Changes how time is displayed on the control.   |

### Cycles

The cycle page allows you to add, edit, copy, delete, or reorder cycles.

|         | CYCLE NAME      | TARGET TEMP | MATERIAL | TARGET        |   |    |   |
|---------|-----------------|-------------|----------|---------------|---|----|---|
| Cycle 1 | Towels          | 190%F       | Cotton   | Auto Dry - 1% | = | 2  | 8 |
| Cycle 2 | Sheets - Cotton | 190'F       | Cotton   | Auto Dry - 5% | = | 21 | 8 |
| Cycle 3 | Sheets - Blend  | 160'F       | Blend    | Auto Dry - 5% | - | 2  | 8 |
| Cycle 4 | Simple Cycle    |             |          |               | = | Ē  | R |

|              | Edit Cycle    | Select anywher material, or tar   |
|--------------|---------------|---|
| ■            | Reorder Cycle | Select and hold<br>change the ord   |
| 2            | Copy Cycle    | This will duplications<br>instead of creating<br>want to create a<br>select "Add Cycle<br>can always chan |
| Ū            | Delete Cycle  | This will delete  |
| + Add Sycles | Add Cycle     | This will allow another locatio   |

### **Simple Cycle**

Simple Cycle is a quick and easy way to set a time dry cycle on the control. Choosing Simple Cycle allows a user to set the time and temperature of a cycle. It is recommended to keep Simple Cycle as an option within the cycle list.

### **Machine Settings**

Most programming functions are available under the individual machine settings. Under this selection, you can review, edit, create, or delete cycles. There even is an option to enable or disable the ability to add time to a cycle.

| Washers | Dryers General Settings                      |                                  |  |
|---------|--|----------------------------------|--|
| - 10    | T-80 Single Dryer<br>1 unit at this location | 0 T-ti Settings Machine Settings |  |

#### Legend

re on the cycle description (cycle name, target temp, rget) to open the cycle details for editing.

d to move a cycle up or down in the listing. This will der it is displayed on the control.

cate the cycle. Tip: It is easiest to edit an existing cycle sing a new cycle. Copy the cycle that is closest to the cycle you and edit that cycle. If a default cycle doesn't meet your needs, de" and choose a default cycle from another application. You nge the cycle name in the edit section.

an existing cycle.

you to add a preset cycle from another industry or on.

### **Cycle Settings**

A cycle can be edited by selecting on the cycle name in the Cycles page. The name and language can be customized for that specific cycle.

Cycle 1 - Towels Settings

| Cycle Name             | Towels           |    |
|------------------------|------------------|----|
| Language 0             | English          | \$ |
| And-Whinkle Photection | On               | \$ |
| Cycle Type             | Auto Dry         | 4  |
| Material Type          | Cotton           | \$ |
| Temperature Recording  | Stage 1: Heating | \$ |
| Reversing Delay        | Off              |    |

| Setting                    | Options  | Description  |
|----------------------------|--|--|
| Cycle Name                 | User Entered   | Preset cycles come loaded with a name, but the user can<br>customize the name, including using other languages. See tip<br>below for more information.   |
| Language                   | Multiple   | Sets the language prompts for a cycle. This does not change<br>the language displayed in other sections nor does it change<br>the language in DexterLive. See tip below for more information.  |
| Anti-Wrinkle<br>Protection | On / Off   | When activated, anti-wrinkle will automatically tumble a load<br>every 5 minutes from when a cycle is complete to when the<br>door is open or for 12 hours after cycle completion. It is<br>important to keep anti-wrinkle ON since it reduces instances<br>of spontaneous combustion. |
| Cycle Type                 | Auto Dry /<br>Time   | Auto Dry cycles will utilize the moisture detection system<br>to determine the moisture level in a load, reducing the risk<br>of overdrying. Auto Dry cycles are programmed based<br>on the type of material being dried. Time cycles can be<br>programmed for time and temperature.   |
| Material Type              | Cotton<br>Blend<br>Wool<br>Delicate<br>Synthetic<br>Ultra-Delicate | The type of material being dried is critical for Auto Dry cycles<br>as it determines the temperature and suggested relative<br>moisture remaining. See table below for temperatures by<br>material type.   |

| Temperature<br>Recording | Off / Stages                                     | Record<br>stage.<br>tempe              |
|--------------------------|--|--|
| Reversing<br>Delay       | Off<br>30 secs<br>60 secs<br>90 secs<br>120 secs | For rev<br>will ch<br>tumble<br>and ro |

Tip: If a location has multi-lingual employees, the same cycle can be duplicated and programmed for different languages. For example, in a location with English and Spanish speaking employees, program White Sheets to the desired settings. Copy that cycle, set that cycle language to Spanish, and note the name change to Sabanas Blancas. This will allow all employees to read the necessary prompts and descriptions on the control.

### **Material Type Settings**

| Material Type  | Temperature    |
|----------------|----------------|
| Cotton         | 190 °F / 88 °C |
| Blend          | 160 °F / 71 °C |
| Wool           | 140 °F / 60 °C |
| Delicate       | 120 °F / 49 °C |
| Synthetic      | 140 °F / 60 °C |
| Ultra-Delicate | No heat        |

rds the maximum temperature reached at the desired e. This is important for certain applications where erature is critical.

eversing dryers, this sets the time for which the tumbler hange directions. For instance, if set to 30 seconds, the ler will rotate clockwise for 30 seconds, then reverse rotate counterclockwise for 30 seconds.

Part # 8533-123-001 11/23

| 34 | Part # 8533-123-001 11/23 |  |
|----|---------------------------|--|

Stage

**Stages – Auto Dry** 

**Parameters** 

Temperature

| Heating  | Auto Dry Level        | 100% - 75%      | Auto Dry level and Moisture Remaining are   |  |
|----------|-----------------------|-----------------|---|--|
|          | Moisture<br>Remaining | 0% - 25%        | correlating numbers, giving you the option<br>to program towards a specific dryness level<br>(i.e., 95% dry) or to a moisture remaining<br>level (i.e., 5% moisture remaining). Both<br>numbers are shown to accommodate<br>different industry types. |  |
|          | Temperature           | Not selectable  | Auto Dry cycles are set for no heat on<br>Cooldown. Any heat during cooldown could<br>impact the moisture content of a load<br>missing the desired target level.  |  |
| Cooldown | Time                  | 2 – 120 minutes | Time in cooldown. Every cycle must include<br>a minimum two-minute cooldown to reduce<br>the risk of spontaneous combustion.  |  |

Auto Dry cycles are comprised of two stages – a heating stage and a cooldown stage.

Options

Preset

Notes

Preset based on material type

### **Stages – Time Dry**

Time Dry cycles are typically encompassed of two stages – a heating stage and a cooldown stage. However, time dry cycles also allow you to have multiple heating stages with different temperatures. You can program up to 19 heating stages and 1 cooldown stage.

| Stage     | Parameters  | Options                                       | Notes   |  |
|-----------|-------------|---|---|--|
| Heating   | Temperature | No Heat<br>100 °F – 190 °F /<br>38 °C – 91 °C | Sets the desired temperature for the stage.<br>Temperature is programmable in 5 °F / 3° C increments.             |  |
|           | Time        | 0 – 120 minutes                               | Maximum cycle time is 120 minutes,  |  |
|           | Temperature | Not selectable                                | Time Dry cycles are set for no heat on Cooldown.  |  |
| Cooldown  | Time        | 2 – 120 minutes                               | Every cycle must include a two-minute minimum cooldown to reduce the risk of spontaneous combustion.              |  |
| Add Stage |             |   | Adds a heating stage. The stage that is<br>added is a direct copy of the last heating<br>stage and can be edited. |  |

### **Optional Settings: Add Time**

These settings will only apply to that specific model type. For instance, optional settings for the T-80 will not apply to a T-50. These will need to be set individually by model.

| 0 T            | -80 SINGLE DR                 | YER                   |                       |
|----------------|-------------------------------|-----------------------|-----------------------|
| Cycles         | Optional Settings             |                       |                       |
| Settings for J | All Cycles on the T-80 Single | Dryer. These settings | will be applied to on |
| Add Time Opt   | ton                           | On                    | 0                     |

DexterLive can control time adjustment options for the end user. Turning Add Time off would restrict users from adding time once a cycle is complete or during a cycle.

### **Programming**

Once all cycles are set, the programming file (called userconfig.xml) can be downloaded following the instructions on the programming tab DexterLive.com.



#### At the machine, you can enter management view by pressing up on the idle screen.



| <b>Programming Mode</b>    |  |
|----------------------------|--|
| A                          |  |
| Edit Cycles                |  |
| Cycle Log                  |  |
| Error Code Log             |  |
| Download Cycle & Error Log |  |
| Import Deta                |  |
| •                          |  |

| nly thi | model type. |  |
|---------|-------------|--|
|         |             |  |

\$

| IES             |  |
|-----------------|--|
| ve.com          | [mail                                      |
| a in Equipment. |  |
| extert.les      | 12   |
|                 |  |
|                 |  |
|                 |  |
|                 | 19 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1     |
| set the file to | DOWNLOAD PROCESSMENTS FILE                 |
| a prior of      | And the second starter states are a second |
|                 |  |

Simply insert the USB, scroll to Import User Data, and begin using your customized dryer cycles.

### O-SERIES DRYER MANAGEMENT VIEW & MANUAL PROGRAMMING


### **Management View**

To enter Management View, select the up button while on the Ready screen. Management view is currently only available in English.

| Ready               | Select cycle |
|---------------------|--------------|
|                     | Minutes      |
| Management View     |              |
| 1 - Towels          | Auto         |
| 2 - Sheets - Cotton | Auto         |
| 3 - Sheets - Blend  | Auto         |
| <b>V</b>            |              |

#### Passcode

Enter the passcode. The default passcode is 0000. It can be updated in DexterLive or in the management screens. Once changed, the passcode cannot be recovered without performing a factory reset.

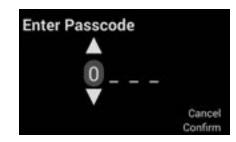

### **Programming Mode**

This section controls machine settings and programming, and allows you to upload firmware or download cycle logs.

| Programming Mode |  |  |
|------------------|--|--|
| Exit             |  |  |
| General Settings |  |  |
| Edit Cycles      |  |  |
| Cycle Log        |  |  |
| Error Code Log   |  |  |
| V                |  |  |

| Programming Mode Se        | elections                     |
|----------------------------|-------------------------------|
| Selection                  | Description                   |
| General Settings           | Provides bas<br>global machi  |
| Edit Cycles                | You can edit<br>program cycle |
| Cycle Log                  | Displays det                  |
| Error Code Log             | Displays the                  |
| Download Cycle & Error Log | Provides dat<br>ing idle time |
| Import User Data           | Allows you to                 |
| Download User Data         | Enables you<br>chine types    |
| Sync Auto Dry              | Syncs the st                  |
| System Upgrade             | Upgrades fir<br>can be found  |
| Factory Reset              | Resets all pa                 |
|                            |                               |

### **General Settings**

| General Settings |                |
|------------------|----------------|
| Back             |                |
| Model ID         | T-600 Heated   |
| Software         | 02.0.000       |
| Drive ID         | 169.133.6      |
| DexterLive ID    | 00:00:00:00:00 |

| Selection | Description                     |
|-----------|---------------------------------|
| Model ID  | Model identiti<br>control board |
| Software  | The version<br>DexterLive.c     |
| Drive ID  | Variable frec                   |

#### ion

sic machine information, time and date settings, and nine settings

it, copy, reorder, or delete cycles. Note: It is easier to les on DexterLive.

tailed information from the last 300 cycles

e code and timestamp of the last 300 error codes

ta that can be used for management reporting, include, lag time, cycles per shift, and error codes

to import a DexterLive.com programming file from a USB

to copy cycle information and upload to similar ma-

tationary and rotating moisture detection boards.

rmware from a USB. Updated versions of the firmware nd on DexterLive.com

arameters, including cycle settings, to factory default.

#### ion

ifier – this is determined by the model jumper on the rd

of firmware controller is using. Tip: Check on com or Go.Dexter for the latest firmware versions.

quency drive identification. Only on reversing models.

| DexterLive ID            | Unique DexterLive identification for the control  |
|--------------------------|---|
| Language                 | Sets the global language for the machine  |
| Passcode                 | Passcode for entry into the management screens. Default is 0000.  |
| Temperature Units        | Selects how the temperature will be displayed – Fahrenheit or Celsius   |
| Time Format              | Select between 12-hour or 24-hour time  |
| Time Zone                | Select the location's time zone. This will be updated for daylight savings time, depending on the time zone selected.   |
| Date                     | Set the current date  |
| Time                     | Set the correct time  |
| Out of Service           | Puts the machine out of service   |
| Motor1 Hours             | This tracks the hours the motor has been in use. If you change the motor, you can adjust this up or down as appropriate. 000000 – 999999                                      |
| Motor2 Hours             | This tracks the hours the motor has been in use and can be used to continue tracking total machine usage, even if Motor1 has been reset to 000000. Input is 000000 – 9999999. |
| Non-Critical Error Codes | Turns off display of non-critical error codes such as no heat rise.<br>These errors will still be recorded in the error log.  |
| Simple Cycle             | Sets where in the cycle list Simple Cycle is displayed. If set for "0", Simple Cycle will not be displayed.   |
| Button Sound             | Turns on / off audible feedback when button selections are made   |
| Add Cycle Time           | Turns on / off the ability to add time during or at the end of a cycle  |
| End of Cycle Sound       | Turns on / off end of cycle audible notification  |

### **Edit Cycle – Auto Dry**

Note: You cannot change between auto and time dry on the control. That can only be done using DexterLive.com.

To edit a cycle on the control, simply select the cycle you want to edit. See the reference below for definitions and parameters. Note: Cycles or stages cannot be renamed on the control.

| Cycle Details     | 1 - Towels |
|-------------------|------------|
| Back              |            |
| Language          | English    |
| Anti-Wrinkle      | On         |
| Material Type     | Cotton     |
| Record Stage Temp | Off        |
|                   |            |

#### **Definitions and parameters:**

| Parameters        | Options  | 1                |
|-------------------|--|------------------|
| Language          | Various  |                  |
| Anti-Wrinkle      | On / Off   | T<br>N<br>C      |
| Material Type     | Cotton<br>Blend<br>Synthetic<br>Wool<br>Delicate<br>Ultra Delicate | f<br>v<br>t      |
| Record Stage Temp | Off / Heating /<br>Cooldown  | ר<br>וו<br>t     |
| Reversing Delay   | Off<br>30 secs<br>60 secs<br>90 secs<br>120 secs                   | V<br>S<br>S<br>f |

### **Edit Cycles**

Note: We recommend using DexterLive.com to edit, copy, reorder, or delete cycles.

#### Edit Cycles Back Edit Cycle Copy Cycle Reorder Cycles Delete Cycle

#### Description

Changes the language of the prompts and information displayed within the cycle. It does not change the global language of the machine.

Turns anti-wrinkle on or off at the end of that cycle. Note: It is strongly recommended that anti-wrinkle remains ON to avoid spontaneous combustion.

Sets the material type (and subsequent temperature) for the load to improve the sensing capability of the wireless moisture detection system. See chart below for temperatures by material type.

The control will record the highest temperature reached in a stage. This is valuable for applications where temperature is critical.

Only available on reversing dryers, this sets the time for which the tumbler will change directions. For instance, if set to 30 seconds, the tumbler will rotate clockwise for 30 seconds, then reverse and rotate counterclockwise for 30 seconds.

### **Material Type Settings**

| Material Type  | Temperature    |
|----------------|----------------|
| Cotton         | 190 °F / 88 °C |
| Blend          | 160 ºF / 71 ºC |
| Wool           | 140 °F / 60 °C |
| Delicate       | 120 °F / 49 °C |
| Synthetic      | 140 °F / 60 °C |
| Ultra-Delicate | No heat        |

### **Edit Stage – Auto Dry**

Definitions and parameters:

| Parameters                | Options                                      | Description  |
|---------------------------|--|--|
| Temperature               | None   | Displays the set temperature for the cycle. Note:<br>This is controlled by the material type selected. |
| Moisture                  | 0%, 1%, 3%, 5%,<br>7%, 10%, 15%,<br>20%, 25% | Sets the target moisture remaining level for the cycle   |
| Cooldown — Drying<br>Time | 2 – 120 minutes                              | Sets the cooldown time. Every cycle must have a 2 minute cooldown.                                     |

### **Edit Cycle – Time Dry**

Note: You cannot change between auto and time dry on the control, use DexterLive.com

To edit a cycle on the control, simply select the cycle you want to edit. See the reference below for definitions and parameters. Note: Cycles or stages cannot be renamed on the control.

Definitions and parameters – Time Dry Cycles:

| Parameters   | Options  | Notes   |
|--------------|----------|---|
| Language     | Various  | Changes the language of the prompts and<br>information displayed within the cycle. It does not<br>change the global language of the machine.          |
| Anti-Wrinkle | On / Off | Turns anti-wrinkle on or off at the end of that cycle. Note: It is strongly recommended that anti-wrinkle remains ON to avoid spontaneous combustion. |

| Record Stage Temp | Off / Heating /<br>Cooldown                      |
|-------------------|--|
| Reversing Delay   | Off<br>30 secs<br>60 secs<br>90 secs<br>120 secs |

### **Edit Stage – Time Dry**


You can edit, copy, or reorder time dry stages.

Definitions and parameters:

| Parameters  | Options  | Notes   |
|-------------|--|---|
| Drying Time | 1 – 120 minutes                                    | Sets the drying time of that cycle. Note: The total cycle time cannot exceed 120 minutes, including cooldown. |
| Temperature | No Heat, 100 –<br>195F (in 5 degree<br>increments) | Sets the temperature of that stage.   |

### **Copy Cycle**

To copy a cycle, simply select the cycle you wish to copy, make any necessary edits to that cycle, and then save the changes. The cycle will then appear at the bottom of the cycle list named "Custom 1". The order in which the cycle is displayed can be adjusted following the steps to reorder a cycle. Note: Cycles or stages cannot be renamed on the control.

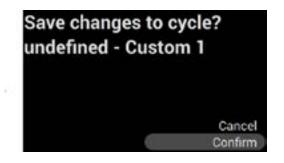

### **Reorder Cycle**

To reorder a cycle, simply select the cycle you wish to move, and then proceed to move it up or down in the cycle list. Once it is in the right order, hit enter again to confirm the location.

| The control will record the highest temperature reached in a stage. This is valuable for applications where temperature is critical.  |
|---|
| For reversing dryers, this sets the time for which<br>the tumbler will change directions. For instance,<br>if set to 30 seconds, the tumbler will rotate<br>clockwise for 30 seconds, then reverse and rotate |

counterclockwise for 30 seconds.

| Se | lect cycle to move       |
|----|--------------------------|
| Ba | ack                      |
| 1  | - Towels - Auto          |
| 2  | - Sheets - Cotton - Auto |
| 3  | - Sheets - Blend - Auto  |
| 4  | - Duvet - Cotton - Auto  |
| V  |                          |

### **Delete Cycle**

To delete a cycle, select the cycle you wish to delete and confirm your selection.



### Cycle Log

The Cycle Log will display detailed information of the last 300 cycles. This includes:

| Cycle Log           | 1 of                   |
|---------------------|------------------------|
|                     |                        |
| Oct-30-2017 1:29 PM | 35 - Medium - Reversin |
| Actual Time         | 0:00                   |
| Target Time         | 0:03                   |
| Idle Time           | 0:39                   |
| Max Temperature     | 147° F                 |
| <b>T</b>            |                        |

| Information     | Description  |
|-----------------|--|
| Date / Time     | Displays the day and time the cycle start. Cycles are listed with the most recent cycle first. |
| Actual Time     | Time from when the cycle is started to when the cycle ends.                                    |
| Idle Time       | Time from when the door is opened to the start of the next cycle.                              |
| Target Time     | Programmed cycle time. This is always set to 2:00 on auto dry cycles.                          |
| Max Temperature | The highest temperature reached during a cycle.  |

### **Error Code Log**

The Error Code Log will display the code most recent error first.

### **Download Cycle & Error Log**

You can download detailed data on cycle and error codes. This will allow you to analyze the productivity of your laundry, including downtime and productivity by shift. The control will populate all data into one file. If you have multiple machines at a location, all data will be populated in one file. See reporting information for instructions on how to utilize this feature.

### **Import User Data**

This setting enables you to import cycle settings configured on DexterLive.com. Simply insert a USB with the user file (userconfig.xlm), select "Import User Data", select Confirm, and the user file will be uploaded to the machine. It will replace all other cycles previously programmed.

### **Download User Data**

To copy cycles directly from one machine to another, insert a USB, select "Download User Data", and the user file will be copied. This file will only be applicable to similar model types.

### Sync Auto Dry

If a moisture detection board is replaced or becomes unpaired with the control board, a sync is required. Simply align both the stationary and rotating boards on the back of the machine and select Sync Auto Dry. If the sync is successful, the board will display "Auto Dry Sync Successful". Please reference the service manual for troubleshooting guides if the sync is not successful.

### System Upgrade

To upgrade firmware, select System Upgrade and confirm the upgrade. This will keep all programmed cycles and cycle and error code logs. Data, and the user file will be copied. This file will only be applicable to similar model types.

### **Factory Reset**

Select Factory Reset to return all settings, including programmed cycles and settings to the factory default settings. This will clear all cycle and error code logs, but will retain the motor hours.

The Error Code Log will display the code, date and time of the last 300 errors. It will display the

| Notes |  |
|-------|--|
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
| <br>  |  |
| <br>  |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |
|       |  |

## Notes

| <br> |
|------|
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
| <br> |
| <br> |
|      |


### **Service Procedures Removing Top for Low Clearance Entrances**

Remove front upper service panel by removing the four Phillips head screws. 1.





- 2. and the center six holding the cover to the burner housing.
- 3. Top side removal, remove the two 5/16 screws holding each side.

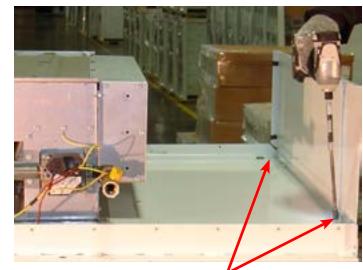

# **Section 4:**

Service Procedures,

Trouble Shooting, and Schematics

- Remove Burner Assembly. 4.
  - Α.

Phillips head screws


Remove top cover by removing the sixteen 5/16 screws holding the top cover, five on each side

5/16 head screws

Disconnect wires from gas valve, brown and yellow wires and remove yellow ground wire bolted to the burner housing. Remove brown and orange wires from high limit thermostat. Remove igniter high voltage lead and the black heat sense probe wire.

#### **Removing Top for Low Clearance Entrances Continued.**

Β. Remove the three 5/16 screws holding left side of burner.

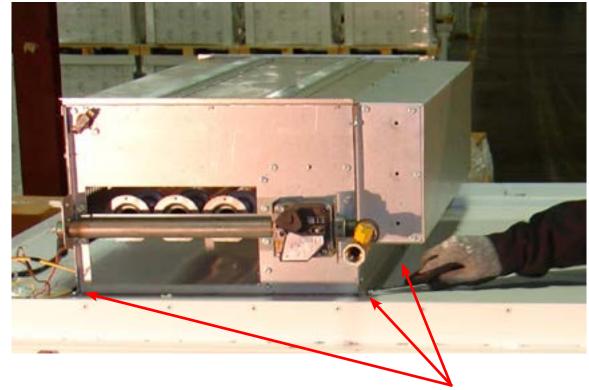

5/16 head screws


- C. Remove the two front 5/16 screws holding burner to top deck.
- Remove one Right rear 5/16 screw holding burner to top deck. D.
- Next lift left side of the burner 1/2" and slide to the left to free it from the right hold down bracket. 5.
- After freeing burner from hold down bracket slide burner assembly to the rear and with two 6. people lift burner assembly from top deck.



Re-assemble in reverse order 7.


#### **Pressure Testing**


The dryer and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of  $\frac{1}{2}$  psig (14" water column). The dryer must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than  $\frac{1}{2}$  psig.

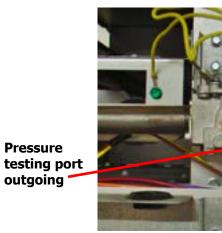

#### **Clothes Door Removal**

- 3. Next lean the door out of the top of the hinge bracket and lift the door from the bottom hinge pin.

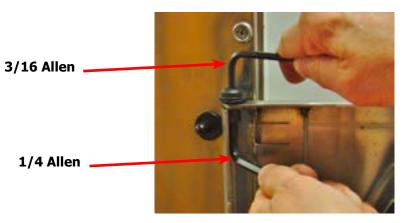

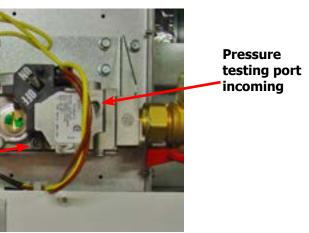

1. Open door and remove inner hinge plate cover by removing the two Phillips screws. 2. The clothes door may be removed from the hinge bracket by unscrewing and removing the top 3/16 allen head pivot screw located at the door upper hinge point, you will also need to use a 1/4 allen wrench in the lower fastener.

#### Front Panel Removal

- Power down machine 1.
- 2. Remove the two Torx "T10" screws and tilt down control & touch pad.


### Front Panel Removal Continued.

4.



Disconnect main harness and USB harness from board and feed through 2" plug. 3.

> Main Harness Main Harness Plug Plug

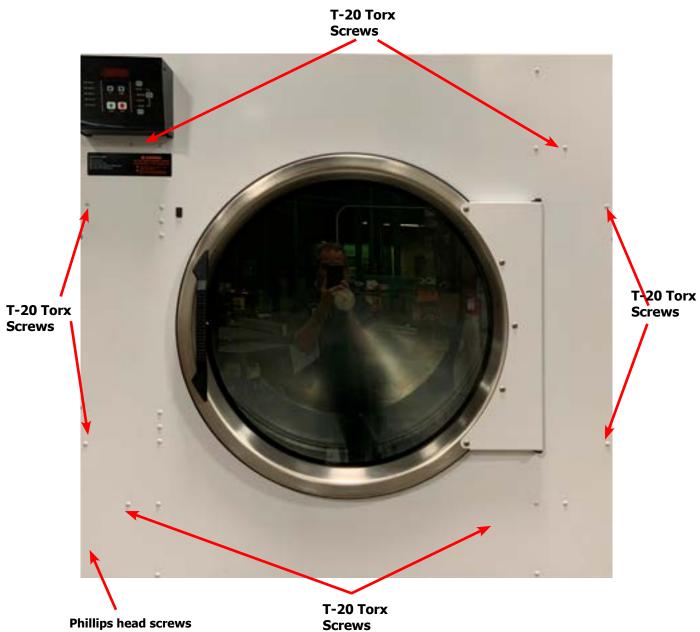

#### Phillips head screws

Screws


- cavity.
- 6. Re-assemble in reverse order.

Remove the eight white Torx "T-20" screws, Next remove the ten Phillips screws.

5. Disconnect red and black door switch wires from 1/4" connectors at main harness in upper right

#### **Door Switch Removal & Installation**

- Remove front panel (see Front Panel Removal). 1.
- Next disconnect door switch wires from back of loading door switch. Remove door switch 2. by depressing the two tabs on switch and remove from the front of the panel.
- 3. Re-assemble in reverse order.

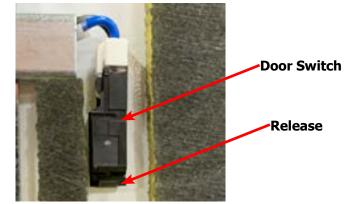

#### **Door Switch Operation & Testing**


The normally open door switch must be closed (0 ohms resistance) for the motor and heat circuit to operate. When the door is opened, the door switch opens the 24 volt control circuit.

> Ohm test across pins on switch






- Remove upper service panel by removing the four Phillips screws. 1.
- Remove cloths door, (see Clothes Door Removal). 2.
- Remove front panel, (see Front Panel Removal). 3.
- Remove the hinge strap by removing the four hinge strap Phillips head screws. 4.

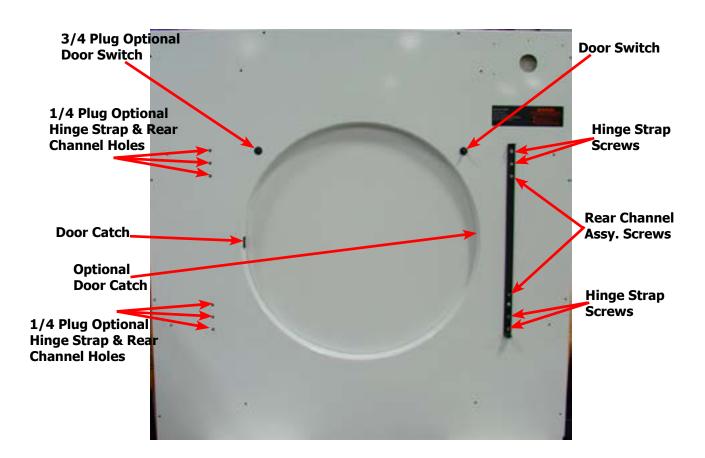


#### 170Lb Loading Door Reversal (Continued)

- Remove the chanel assembly Remove the two channel assembly Phillips head screws from the 5. front side of the panel.
- Remove door switch by depressing tab and removing through front. 6.

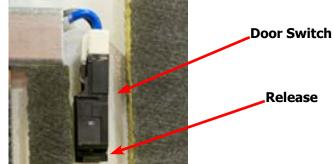

Remove plug on left side and insert into switch hole on the right side. 7.

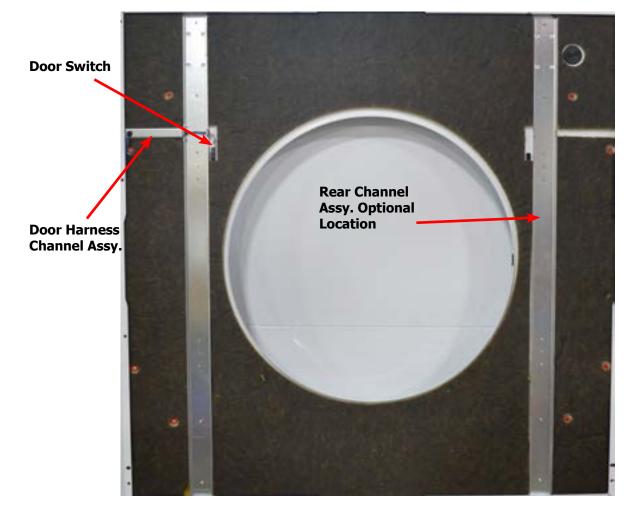

- Remove Door switch harness channel on the Left and move harness and chamnnel to the right. 8.
- Remove the six T-20 Torx screwsand transfer to the right side hinge strap and channel assembly 9. holes.
- Reinstall door switch into left side and connect harness. 10.

### 170Lb Loading Door Reversal (Continued)

- 11. Re-install channel assembly and two Phillips head screws, making sure door switch wires are routed to the outside of the machine.
- 12. Re-install hinge strap by installing the six Phillips head screws.
- 13. Install loading door catch (p/n 9086-015-002) by using two rivets (p/n 9491-009-004).
- 14. Reattach loading door and hinge plate, (see Loading Door Removal).

**Note:** Next is routing door switch wires.

15. You will have to reroute the Loading door switch wires from the right side to the left side reu the wires through the 3/4" Plugs in the top deck and connect ot the door switch wires coming out of the door harness channel on the front panel. Theplugs ore located on the front corners of the top deck.

16. Re-install front panel, (see Front Panel Removal).


#### Lint Screen Door Reversal

Also remove hinge strap from behind the right lower panel.

#### Hinge strap



the lower kick trim and switch lower kick trim from bottom to the top.

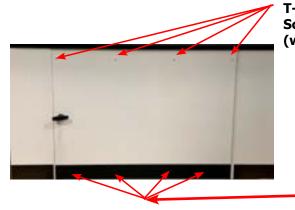

1. Open lower lint door and remove the four 5/16" screws holding the hinge to the lower side panel.


2. Next you will have to switch the lower kick pannel from the bottonm to the top of the door. remove the 4 T20 white torque screws from the top and remove the four Black T-20 screws from

> T-20 Torque Screws (white)

> > T-20 Torque **Screws** (Black)

#### Lint Screen Door Reversal (continued)

- 3. Next you will have to switch door switch paddle on the back side of the lint door. you will need to drill out the rivits and move to the lower left corner.
  - Note: you will not have to move the door switch on this model.

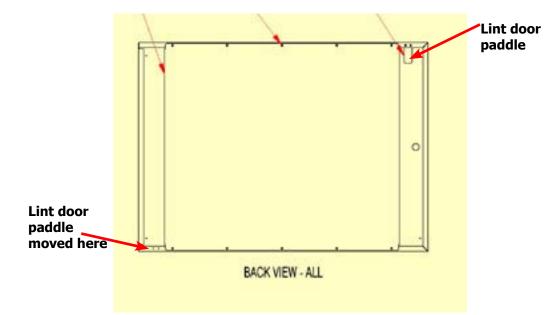

4. Next reinstall door to cabinet, first you must incert the hing strap on the left side then attach the hinge and door with the four 5/16" screws.



Hinge strap

### Notes

| <br> |
|------|
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
| <br> |
|      |

#### Installation of Clothes Door Window & Gasket

- Remove the loading door. 1:
- Place the clothes door, with its face down, on a solid surface. 2:

Note: Pre-warming the gasket under a heat lamp makes the installation much easier.

- Put the door glass gasket on the loading door with the ridges in the wide side up. 3: Locate the seam at the door latching stud.
  - **Note:** The gasket has one narrow opening on one side and a wide opening on the other. The narrow side mounts to the door. The wide side holds the glass. The wide side has ridges on one interior lip. This ridged side should go up with the door lying face down.
- Coat the inside and outside of the gasket with rubber lubricant or liquid soap. 4:
- Slide the glass into the middle of the gasket with half of the glass above the door and half below 5: the door.
- While pressing on the glass, use a modified screwdriver (grind the end off so that it is round and 6: put a slight bend in it) and run it around half of the glass.
- With half of the glass installed, turn the door over and repeat step 6. 7:
- Insert the modified screwdriver at the 6 o'clock position and pry the glass up enough to install the 8: door glass support spacer (small diameter rubber tube).




**Glass inserted half way** 

#### **Pressure Regulator Adjustment**

Use the following procedure whenever it is necessary to check the pressure regulator setting.

- the plug in the main burner manifold.
- Shut off the gas supply to the dryer. 1:
- 2: Remove the 1/8'' pipe plug from the end of the main burner manifold.
- Attach a manometer to the manifold end. 3:
- Remove the pressure regulator cover screw on the gas valve. 4:
- Open the shut-off valve, and operate the dryer. 5:
- 6:
- 7: manifold.
- 8:

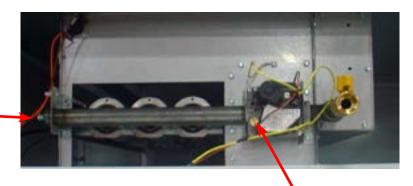

1/8" Pipe Plug

**NOTE:** Any adjustment of the pressure regulator must be made with a manometer attached at

Adjust the pressure for a manometer reading of 3.5" water column gas pressure.(11.0" for L.P.)

**NOTE:** The main burners must be operating when adjusting the pressure regulator.


Shut off the gas supply to the dryer. Remove the manometer and install the 1/8'' pipe plug in the

Open the shut off valve, start the dryer and check for gas leaks while the burners are ignited.

Adjustment Screw Under Plug


#### **Gas Valve Removal**

- Disconnect gas Line from gas shut-off union. 1.
- Remove the six 5/16 screws from the gas valve bracket and remove valve, manifold and bracket 2. assembly.

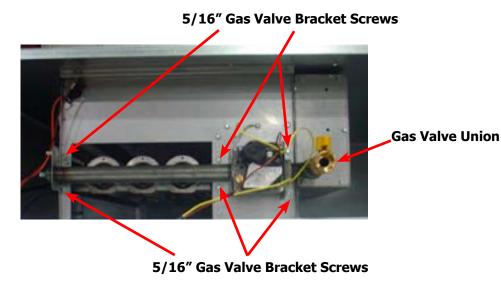


#### **Burner Tube Removal**

- Remove gas valve assembly, (See Gas Valve And Manifold Removal). 1.
- 2.
- 3. top).

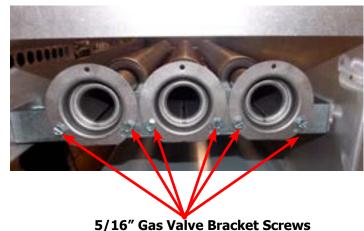

#### **Main Burner Orifice Removal**

- Remove gas valve assembly, (See Gas Valve And Manifold Removal). 1.
- 2. Using a 1/2 inch socket remove orifice.
- When re-installing use reverse operation, (no sealer recommended on office). 3.

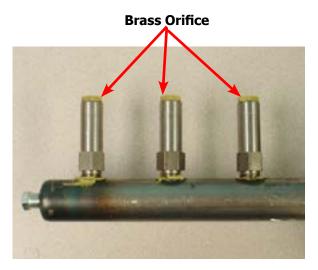


#### **High Limit Thermostat Locations & Functions Burner Housing**

This hi-limit is located on the rear of the burner housing.

- 1: of air flow over the burner area.
- 2: must be used to give proper operation.

**Removal** : To remove the hi-limit thermostat on the side of the burner housing, remove the terminal of each wires attached to the thermostat. Lastly, remove the mounting screws holding the thermostat to the burner housing.

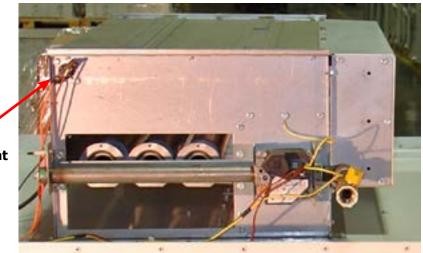

High Limit Thermostat

Remove the six 5/16 screws, lift up tube and slide out rear of burner housing.

Re-assemble in reverse order, (Note: when reinstalling burner tubes make sure gas holes are on


The thermostat opens the circuit to the main burners in the event of malfunction in the gas control area or temperature control. This thermostat will open quickly if there is a significant loss

It is held in place by two screws. There are spacers between the thermostat and bracket which

#### Manual Resettable Over Temperature Safety Thermostat

The second hi-limit thermostat is located outside the rear exhaust opening mounted on the left side of the exhaust duct at the rear outlet height.

- 1: The manually resettable thermostat limits the operating temperature a dryer can reach should some abnormal situation occur.
- Should the thermostat be tripped, the dryer will cease to heat until the thermostat 2: is reset. Once the dryer cools, the thermostat may be reset by pushing the button in.
- **REMOVAL:** To remove the manual resettable over temperature safety thermostat next to the exhaust duct. First, remove the terminals of each wire attached to the thermostat. Next, remove mounting screws holding the thermostat to the dryer cabinet.

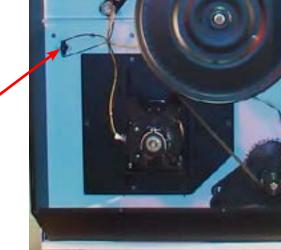


**Manual Reset**table Over Temp Thermostat

#### Airflow switch removal and adjustment

The air switch assembly is part of the ignition safety circuit and insures that the burner doesn't operate unless there is airflow. If this doesn't happen, ignition will not occur. The air switch assembly is located on the back of the dryer.

- To adjust the switch, loosen the lower screw on the micro switch. Moving it forward will allow the 1. switch to engage earlier.
- To remove the switch assembly. 2.
  - Disconnect wires. a.
  - Remove the five 5/16 screws. b.
- Re-assemble in reverse order. 3.

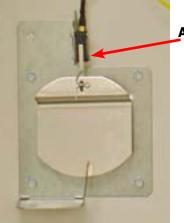


#### **Adjustment Screw**

#### **Electronic Ignition Module**

This machine uses an electronic spark ignition system to directly light the burners.

- 1:
- 2: into the module to operate the entire direct ignition system.
- 3: on the module, and the multi-wire plug fits into the side of the module.

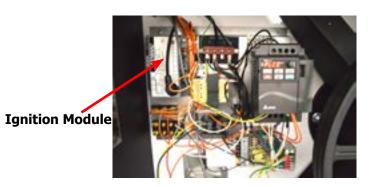

**NOTE:** Proper grounding of the ignition system (yellow wires) is very critical for proper ignition sequence. If there is no spark or intermittent spark, check black hi-voltage lead wire for damage or cracks in insulation. This lead wire must not be taped or connected to any metal edges along its length to prevent pinching and arcing. Also, do not bundle this wire with other wires.

#### Spark Electrode Assembly-Removal

- Disconnect wires to electrodes. 1:
- Remove two screws to detach electrode assembly. 2:



**Note:** Spark gap and electrode location are important. If the electrode is damaged or mounting is changed the spark gap may not be correct for ignition to occur. Check for cracks in the ceramic insulator. Replace electrode assembly if necessary. Also check for carbon or foreign material on the electrodes and clean if necessary.

The electronic ignition module (gray box) is located inside the rear control box.

The red wire from the transformer provides 24 VAC through the 1.5 amp fuse and

The black colored hi-voltage wire (spark plug type) plugs onto the post connector

Spark Electrode Located Right side of Burner

#### **Spark Electrode Assembly-Function**

- Step 1: The spark electrode and sensing electrodes are located directly at the side of the burner housing.
- Step 2: The electrode with the black hi-voltage wire conducts the spark to the center grounding probe, directly over the burner.
- Step 3: The electrode with the black sensing wire detects ignition and monitors flame by signaling the module.
- **NOTE:** Proper grounding of the ignition system (yellow wires) is very critical for proper ignition sequence.

#### **Ignition System-Function & Sequence**

During normal dryer operation, the following occurs: **1.** The dryer electronic control calls for heat.

**2.** From the 24VAC control transformer, voltage for the heat circuit is applied to the control through the door switch. If the control detects that the heat should be on, a circuit is closed providing power through the over-temp thermostat, the air damper switch, the high limit switch and the motor centrifugal switch to the ignition module.

**3.** Once the 24VAC reaches the ignition module on the red wire, sparking occurs at the ignition electrode and 24VAC is applied to open the gas valve.

**3.** Once the flame is established, the sensing electrode detects the presence of flame and the sparking stops.

**4.** If for any reason the flame is not established in a period of 10 seconds, the electronic control will try this sequence for 3 tries. Normally the 10 seconds "Trial For Ignition" period is ample to establish and prove flame.

**5.** If the flame is shutdown or blown out during operation, the ignitor will immediately go into "Trial. For Ignition" again for 10 seconds.

- Electrode ends are centered Electrode over the burner. Electrodes are positioned 5/16 Assembly above the burner +/- 1/16". Flame Sensor Electrode 00000 00000 00000 00000 0000 Spark Electrode Spark Gab 00000 1/8 (+/- .030) 00000 Main 🖌 00000 Burners Burner Support 0 Bracket

6. However, at the end of 3 separate retries of 10 seconds "Trial for Ignition", the flame is not established, the ignition system goes into "Safety Lock-Out" and will not reactivate the "Trial for Ignition" until there is a current interruption for a period of 15 seconds. This interruption can be provided by opening the dryer loading door and allowing the machine to come to a complete stop for 15 seconds.

#### **Motor Drive Belt Replacement**

The motor drive belt has a spring tension provided by the motor tension spring.

#### Final Drive Belt Replacement

1. pulley.

#### **Drive Motor Replace**

- Remove drive belt, (see Final Drive Belt Removal). 1.
- 2. Disconnect spring and chain.
- Using 1/4" Allen wrench remove motor rod locking collar. 3.
- Remove rod and motor. 4.
- 5. Re-assemble in reverse order.

#### **Idler Pulley removal**

- Remove drive and tumbler belts, (see Belt Removal). 1.
- Remove 15/16" nut and washer. Note: has loctite on nut may require heat. 2.
- 3. To remove bearings from pulley.
  - a. reassembling.
- 4 Re-assemble in reverse order.

15/16" Nut

1. To replace the motor drive belt the final drive belt should be removed by using a pry bar starting the belt over the edge of the pulley and rotating around until the belt works itself off

To replace the final drive belts turn the cylinder slowly by hand and work the belt off of the large

Locking Collar



spring & Chain

Remove inside snap ring and drive out bearings, note: Make sure spacer is replaced when



#### **Idler Arm Assembly Removal**

- Remove drive and tumbler belts, (see Belt Removal). 1.
- Remove idler pulley, (see Idler Pulley Removal). 2.
- Remove the two 3/4" tension adjustment bolts. 3.
- Remove Locking collar from idler arm pivot rod. 4.
- Remove rod and arm assembly. 5.
- Reassemble in reverse order. 6.




Tension Adjustment bolts, 3/4"

#### Motor Assembly and Blower Removal


- Remove belts, (see Belt Removal). 1.
- Remove idler pulley, (see Idler Pulley Removal). 2.
- Disconnect harness to motor from rear electrical box. 3.
- Remove the six 5/8" Nuts and remove assembly. 4.
- To remove blower impeller, remove set screw. Make sure to note position of set screw for 5. reassembly.

**Locking Collar** 

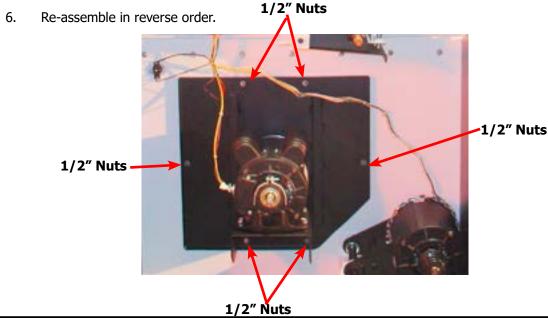

#### **Tumbler Pulley Removal**

- Remove drive and tumbler belts, (see Belt Removal). 1.
- Remove idler pulley, (see Idler Pulley Removal). 2.
- Use 3/4" socket to remove retaining bolt, washer, and star washer. 3.
- Using three jaw puller remove pulley and tolerance ring. 4.
- Re-assemble in reverse order. 5.

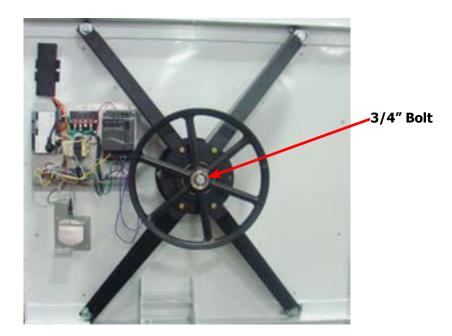

#### **Tumbler Adjustment**

You will need to first determine which direction the tumbler needs to be adjusted. The adjustment will be accomplished by installing or removing shims to the outer ends of the support arms.

- 1. Loosen outer support arm bolt.
- 2. desired movement is accomplished).



Insert shim and retighten bolt, (you will need to check and may need to repeat process until

#### **Tumbler Assembly Removal**

- 1. Remove drive and tumbler belts, (see Belt Removal).
- 2. Remove idler pulley, (see Idler Pulley Removal).
- 3. Remove tumbler pulley, (see Tumbler Pulley Removal).
- 4. Remove front panel, (see Front Panel Removal).
- 5. Use three jaw puller to push out tumbler assembly.
  - a. First re-insert bolt to protect shaft end.
  - b. Secure jaws onto bearing housing and drive tumbler assembly forward until off of shaft journal.

**Note:** the tumbler assembly weighs 190 Lbs / 86 Kg.

- 6. Using more than one person slide the assembly forward and tilt up on end.
- 7. Re-assemble reverse operation.

#### **Bearing Housing Removal**

- 1. Remove drive and tumbler belts, (see Belt Removal).
- 2. Remove idler pulley, (see Idler Pulley Removal).
- 3. Remove tumbler pulley, (see Tumbler Pulley Removal).
- 4. Remove front panel, (see Front Panel Removal).
- 5. Remove tumbler assembly, (see Tumbler Removal).
- 6. Remove the four support arm outer 7/16" bolts and nuts.
- 7. Remove the four outer support arm 5/8" bolts.
- 8. Remove the six inner bearing housing bolts and remove support arms and bearing housing.
- 9. Re-assemble reverse operation.

## **RMC Replacement and Adjustment**


The 3 main components are the Sensing strip mounted in the tumbler. The rotating sensor mounted on the trunnion, and the stationary sensor sending and receiving the signals from the sensing strip.

9558-034-001 Sensing Strip, Moisture

9857-248-001 Rotating PCB, RMC

9857-247-001 Stationary PCB, RMC




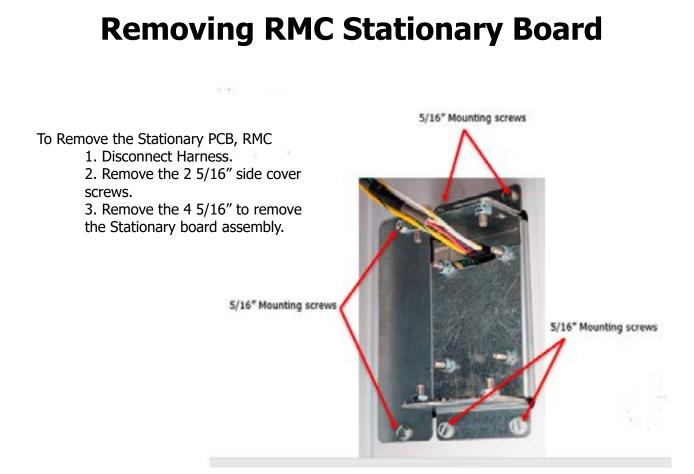

## **Removing RMC Rotating Board**


#### To Remove the Rotating PCB, RMC

- 1. Disconnect Harness.
- 2. Remove the front and rear 5/16" screws.
- 3. Remove the Rotating module from machine.
- 4. Reinstall in reverse order.

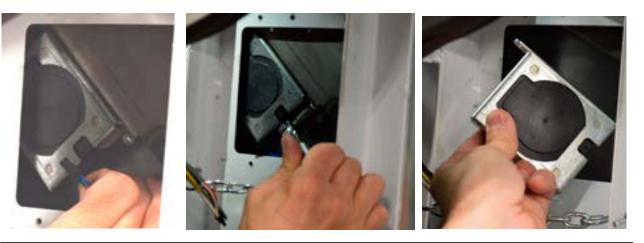

## **Adjusting the RMC Stationary PCB**

After replacing Stationary Board. 1. Loosen the 4, 3/8" adjustment nuts.

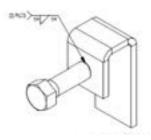

2. Install the adjustment gauge (8545-065-001) the gap is 3/16". (Make sure the stationary board cover is in place.)

3. With gap tool installed push until the stationary board comes in contact with rotating board. This will set the spacing at 3/16 of a inch between the stationary and rotation PCB boards.

4. Tighten the Right side first then the left side.


> Left side upper and lower tighten after right side

5. Replace the left side cover. Reconnect the harness to the stationary board.

### Sync Auto Dry

If a moisture detection board is replaced or becomes unpaired with the control board, a sync is required. Simply align both the stationary and rotating boards on the back of the machine and select Sync Auto Dry. If the sync is successful, the board will display "Auto Dry Sync Successful". Please reference the service manual for troubleshooting guides if the sync is not successful.



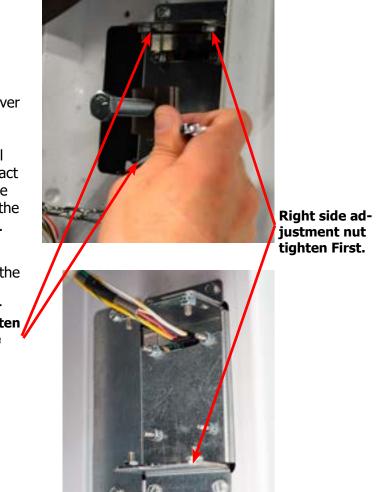

#### Notes

## **Dryer Trouble Shooting**

#### **DRYER ERROR MESSAGES**

The O-Series dryer control reacts to various abnormal conditions by displaying an Error message. These messages usually contain the "Error" text, and then a general description of the message. Below is a listing of Error messages separated by each potential displayed message in bold face. Each is followed by:

- Condition that creates the displayed message on the control ٠
- Action that the control takes responding to the condition •

• chine back to normal operation.

The actual displayed message on the control may contain the general description listed below and additional details (such as number or additional text). However, the condition, action or exit qualities of the error message should be the same for all variations.

| <b>OPERATION IN PROGRESS</b>  |  |  |
|---|--|--|
| This error occurs when the another operation is ending  |  |  |
| When detected, the contro<br>There is no delay in the ac<br>the current operation while<br>operation is complete, the<br>respond to user input norm |  |  |
| The error will be reset auto  |  |  |
| Once cycle is ended and th cycle.   |  |  |
| POWER LOSS  |  |  |
| This error occurs when the power.   |  |  |
| When detected, the contro<br>no delay in the action once  |  |  |
| The machine will not start<br>the condition is no longer<br>still will not start and the E<br>prompt is followed to Rese                            |  |  |
| Test incoming Voltage. Mal<br>transformer make sure vol   |  |  |
|   |  |  |

Exit is the method the user (or the control) should use to bring the ma

e user is attempting to start a machine operation while ۱g.

ol does not respond to user input on the buttons. ction once the criteria are met. The control will finish le displaying "OPERATION IN PROGRESS". Once the error will no longer be displayed and the control will mally.

tomatically once the current operation is complete.

he Door is opened and closed you ma select the next

e Main Control Board detects a total loss of 24VAC

ol turns off the motor and the heating relay. There is the criteria are met.

and the Error Code will continue to be displayed until present. Once the condition is removed, the machine Error Code will continue to be displayed until the et the Error and return the machine to Idle Mode.

ake sure on correct Transformer tap. Test step down Itage within range.

| BROWN              | OUT   |
|--------------------|---|
| Condition          | This error occurs when the Main Control Board detects less then 21VAC at the 24VAC input.   |
| Control<br>Action  | When detected, the control turns off the motor and the heating relay. There is no delay in the action once the criteria are met.  |
| Exit               | The machine will not start and the Error Code will continue to be displayed until<br>the condition is no longer present. Once the condition is removed, the machine<br>still will not start and the Error Code will continue to be displayed until the prompt<br>is followed to Reset the Error and return the machine to Idle Mode.  |
| Customer<br>Action | Test Incoming Power make sure Transfomer is on the correct tap. The controls transformer is located inside the control trough and steps a range of 208 to 240 volts down to 115 volts. There are two terminals on the controls transformer for the primary (incoming) power. Use the terminal marked "208V" for power supplies between 200 and 219 volts. Use the terminal marked "230V" for power supplies between 220 and 240 volts. Inspect Control board, visually inspect Resister R185, (located nest to AC Input connector.) if this resistor appears burnt replace the control board after voltage issue to the machine is corrected. |
| TEMP SE            | NSOR SHORT  |
| Condition          | This error occurs when the control detects a short circuit from the temperature sensor.   |
| Control<br>Action  | When detected, the control turns off the motor and the heating relay. There is no delay in the action once the criteria are met.  |
| Exit               | The machine will not start and the Error Code will continue to be displayed until<br>the condition is no longer present. Once the condition is removed, the machine<br>still will not start and the Error Code will continue to be displayed until the prompt<br>is followed to Reset the Error and return the machine to Idle Mode.  |
| Customer<br>Action | Inspect temp probe wires. Ohm test temp probe 10K Ohms at room temp.  |
| TEMP SE            | NSOR OPEN   |
| Condition          | This error occurs when the control detects an open circuit from the temperature sensor.   |
| Control<br>Action  | When detected, the control turns off the motor and the heating relay. There is no delay in the action once the criteria are met.  |
| Exit               | The machine will not start and the Error Code will continue to be displayed until<br>the condition is no longer present. Once the condition is removed, the machine<br>still will not start and the Error Code will continue to be displayed until the prompt<br>is followed to Reset the Error and return the machine to Idle Mode.  |
| Customer<br>Action | Inspect temp probe wires. Ohm test temp probe 10K Ohms at room temp.  |
| Customer<br>Action | Inspect temp probe wires. Ohm test temp probe 10K Ohms at room temp.  |

| NO HEAT            | <b>FRISE</b>   |
|--------------------|--|
| Condition          | This error occurs when the contro  |
| Control<br>Action  | When detected there is a delay of<br>active, the control will display the<br>normal Cycle Progress screen at a<br>ing relay will also be turned off. C                             |
| Exit               | The Error Code will continue to be<br>and the control is returned to Idle  |
| Customer<br>Action | Test Safty's, High Limit, air flov   |
| HEAT RI            | SE OUT OF RANGE  |
| Condition          | This error occurs when the contro<br>greater than 220 degrees F (or 10   |
| Control<br>Action  | When detected, the control will di<br>alternating with the normal Cycle<br>seconds off. The heating relay wil<br>continue normally. There is no de                                 |
| Exit               | The Error Code will continue to be<br>and the control is returned to Idle  |
| Customer<br>Action | Inspect temp probe and connection temp.  |
| NO PRO             | X SENSOR OUTPUT  |
| Condition          | This error occurs when the machi imity sensor(s) when the cylinder   |
| Control<br>Action  | When detected, there is a short d control turns off the motor and th   |
| Exit               | The machine will not start and the the prompt is followed to Reset the Mode.   |
| Customer<br>Action | Inspect gap on sensor. Update fin  |
| PROX SE            | NSOR OUT OF RANGE  |
| Condition          | This error occurs when the machi<br>sensor(s) that does not fall in the<br>dryer model running at normal sp<br>sees output from the proximity se<br>when the control has commanded |
| Control<br>Action  | When detected, there is a short d control turns off the motor and th   |
| Exit               | The machine will not start and the the prompt is followed to Reset the Mode.   |
| Customer<br>Action | Inspect gap on sensor. Update firr   |
|                    |  |

ol detects that the temperature is not increasing.

of 15 minutes before the error is active. Once e "NO HEAT RISE" prompt, alternating with the a rate of 5 seconds on, 5 seconds off. The heat-Otherwise the cycle will continue normally.

be displayed until the in-progress cycle is stopped le Mode. It will then reset automatically.

w switch, and overtemp thermostat.

ol detects that the operating temperature is .04 degrees C).

display the "HEAT RISE OUT OF RANGE" prompt, e Progress screen at a rate of 5 seconds on, 5 vill also be turned off. Otherwise the cycle will delay in the action once the criteria are met.

be displayed until the in-progress cycle is stopped le Mode. It will then reset automatically.

tions. Ohm test temp probe 10K Ohms at room

nine control does not detect output from the proxr has been commanded to turn.

delay before the error is active. When active, the heating relay.

he Error Code will continue to be displayed until the Error Code and return the Machine to Idle

rmware to latest rev.

nine control sees output from the proximity e acceptable range for the particular washer or peeds. It also occurs when the machine control ensor that implies the tumbler is still turning ed it to stop.

delay before the error is active. When active, the heating relay.

ne Error Code will continue to be displayed until the Error Code and return the Machine to Idle

rmware to latest rev.

| CONTRO             |   |
|--------------------|---|
|                    | LBOARD  |
| Condition          | This error occurs when the Main Control Board cannot command the input and outputs of the control system as required by the cycle programming.  |
| Control<br>Action  | When detected, the control turns off the motor and the heating relay. There is no delay in the action once the criteria are met.  |
| Exit               | The machine will not start and the Error Code will continue to be displayed until<br>the prompt is followed to Reset the Error Code and return the Machine to Idle<br>Mode. If the prompt to Reset is not available, power must be cycled to the ma-<br>chine to reset the error.                       |
| Customer<br>Action |   |
| GRAPHI             | CS BOARD  |
| Condition          | This error occurs when the Graphics Board cannot command the Main Control board as required by the cycle programming.   |
| Control<br>Action  | When detected, the control turns off the motor and the heating relay. There is no delay in the action once the criteria are met.  |
| Exit               | The machine will not start and the Error Code will continue to be displayed until<br>the prompt is followed to Reset the Error Code and return the Machine to Idle<br>Mode. If the prompt to Reset is not available, power must be cycled to the ma-<br>chine to reset the error.                       |
| Customer<br>Action |   |
| MODEL J            | IUMPER MISSING  |
| Condition          | This error occurs when there is no connection to Ground (Pin 7) on the Model Jumper Header.   |
| Control<br>Action  | When detected, the control turns off the motor and the heating relay. There is no delay in the action once the criteria are met. The machine control checks for this condition when power is cycled and before starting every machine cycle.  |
| Exit               | The machine will not start and the Error Code will continue to be displayed until<br>the condition no longer exists and the prompt is followed to Reset the Error Code<br>and return the Machine to Idle Mode.  |
| Customer<br>Action | Inspect and reseat Model Jumper harness at J6. Preform Soft reset holding down<br>both Reset button and Button 1 on the control board. release reset button con-<br>tinue to hold button 1 until display appears.   |
| MODEL J            | IUMPER CHANGED  |
| Condition          | This error occurs when the jumper connections to Ground (Pin 7) on the Model Jumper Header have changed since the last control check.   |
| Control<br>Action  | When detected, the control turns off the motor and the heating relay. There is no delay in the action once the criteria are met. The machine control checks for this condition when power is cycled and before starting every machine cycle.  |
| Exit               | The machine will not start and the Error Code will continue to be displayed until<br>the condition no longer exists and the prompt is followed to Reset the Error Code<br>and return the Machine to Idle Mode.  |
| Customer<br>Action | If someone has been doing repairs on the washer, check for the correct size drive.<br>Inspect and reseat Model Jumper harness at J6. Preform Soft reset holding down<br>both Reset button and Button 1 on the control board. release reset button con-<br>tinue to hold button 1 until display appears. |

| MODEL 1            | UMPER / DRIVE SIZ  |
|--------------------|--|
|                    | -  |
| Condition          | This error occurs when the ju<br>Jumper Header do not match    |
|                    | •  |
| Control            | When detected, the control to                                  |
| Action             | delay in the action once the o                                 |
|                    | condition when power is cycle                                  |
| Exit               | The machine will not start an                                  |
|                    | the condition no longer exists<br>and return the Machine to Id |
| <u> </u>           |  |
| Customer<br>Action | If someone has been doing re                                   |
| ACTION             | Inspect and reseat Model Jun<br>both Reset button and Buttor   |
|                    | tinue to hold button 1 until di                                |
| MODEL 1            | UMPER / DRIVE PAR  |
|                    | -  |
| Condition          | This error occurs when the ju<br>Jumper Header do not match    |
| Control            | When detected, the control to                                  |
| Action             | delay in the action once the o                                 |
|                    | condition when power is cycle                                  |
| Exit               | The machine will not start an                                  |
|                    | the condition no longer exists                                 |
|                    | and return the Machine to Id                                   |
| Customer           | If VFD replaced varify correct                                 |
| Action             | Jumper on J6. Preform Soft r                                   |
|                    | on the control board. release                                  |
|                    | appears.   |
| NON-DE             | XTER DRIVE   |
| Condition          | This error occurs when a non                                   |
| Control            | When detected, the control to                                  |
| Action             | delay in the action once the o                                 |
|                    | condition when power is cycle                                  |
| Exit               | The machine will not start an                                  |
|                    | the condition no longer exists                                 |
|                    | and return the Machine to Id                                   |
| Customer           | Install or replace OEM VFD.                                    |
| Action             |  |
| <b>DRIVE O</b>     | VERLOAD  |
| Condition          | This error occurs when the co                                  |
|                    | enced an overload condition.                                   |
| Control            | When detected, the control to                                  |
| Action             | delay in the action once the o                                 |
| Exit               | The machine will not start an                                  |
|                    | the condition no longer exists                                 |
|                    | and return the Machine to Id                                   |
| Customer           |  |
| Action             |  |
|                    |  |
|                    | l  |
|                    |  |

#### Ε

jumper connections to Ground (Pin 7) on the Model th the VFD size code.

turns off the motor and the heating relay. There is no criteria are met. The machine control checks for this led and before starting every machine cycle.

nd the Error Code will continue to be displayed until ts and the prompt is followed to Reset the Error Code dle Mode.

repairs on the washer, check for the correct size drive. Imper harness at J6. Preform Soft reset holding down on 1 on the control board. release reset button condisplay appears.

#### RAMETER

jumper connections to Ground (Pin 7) on the Model the VFD parameters being used.

turns off the motor and the heating relay. There is no criteria are met. The machine control checks for this cled and before starting every machine cycle.

nd the Error Code will continue to be displayed until ts and the prompt is followed to Reset the Error Code dle Mode.

ct P/N, if control board replaced, make sure Model reset holding down both Reset button and Button 1 e reset button continue to hold button 1 until display

n-Dexter VFD is installed in the machine.

turns off the motor and the heating relay. There is no criteria are met. The machine control checks for this cled and before starting every machine cycle.

nd the Error Code will continue to be displayed until ts and the prompt is followed to Reset the Error Code dle Mode.

control receives a message that the drive has experi-

turns off the motor and the heating relay. There is no criteria are met.

nd the Error Code will continue to be displayed until ts and the prompt is followed to Reset the Error Code dle Mode.

|                    | VERCURRENT  |  |  |
|--------------------|---|--|--|
| Condition          | This error occurs when the control receives a message that the drive has experi-  |  |  |
| condition          | enced an over current condition.  |  |  |
| Control<br>Action  | When detected, the control turns off the motor and the heating relay. There is no delay in the action once the criteria are met.  |  |  |
| Exit               | The machine will not start and the Error Code will continue to be displayed until<br>the condition no longer exists and the prompt is followed to Reset the Error Code<br>and return the Machine to Idle Mode.  |  |  |
| Customer<br>Action | Step 1: Check to make sure the Dryer cylinder turns freely by hand. If it<br>turns freely, continue to step 2. If it does not, remove the belt and see if<br>the motor turns freely by hand. If the motor turns freely, then check for<br>obstructions in the cylinder or check the bearings. If the motor does not<br>turn freely, replace the motor.<br>Step 2: Check the motor wires for a short circuit between leads. If there<br>are motor leads that have conductors touching, separate them and insulate<br>them. If the wires are broken, splice them together or replace the motor.<br>Step 3: Check braking resistors to see if they measure the correct resis-<br>tance. If a resistor does not measure the proper value, replace it. |  |  |
| <b>DRIVE G</b>     | DRIVE GROUND FAULT  |  |  |
| Condition          | This error occurs when the control receives a message that the drive has experi-<br>enced a ground fault condition.   |  |  |
| Control<br>Action  | When detected, the control turns off the motor and the heating relay. There is no delay in the action once the criteria are met.  |  |  |
| Exit               | The machine will not start and the Error Code will continue to be displayed until<br>the condition no longer exists and the prompt is followed to Reset the Error Code<br>and return the Machine to Idle Mode.  |  |  |
| Customer<br>Action | Inspect Door switch harnesses, replace loading door and lint door switches. In-<br>spect motor harnesses for damage.  |  |  |
| DRIVE L            | OW VOLTAGE  |  |  |
| Condition          | This error occurs when the control receives a message that the drive has experi-<br>enced a low voltage condition.  |  |  |
| Control<br>Action  | When detected, the control turns off the motor and the heating relay. There is no delay in the action once the criteria are met.  |  |  |
| Exit               | The machine will not start and the Error Code will continue to be displayed until<br>the condition no longer exists and the prompt is followed to Reset the Error Code<br>and return the Machine to Idle Mode.  |  |  |
| Customer<br>Action | Measure incoming line voltage at VFD, . Turn the<br>power off to the washer. Check the wiing connections<br>to the drive and motor. If no problem is observed, turn<br>on power to the washer and test. If voltage correct replace VFD  |  |  |

| <b>DRIVE I</b>     | NTERNAL   |
|--------------------|---|
| Condition          | This error occurs when the co<br>enced an internal error.   |
| Control<br>Action  | When detected, the control tu<br>delay in the action once the c   |
| Exit               | The machine will not start and<br>the condition no longer exists<br>and return the Machine to Idl   |
| Customer<br>Action | Turn the power off to the w<br>the washer. If problem reap  |
| DRIVE E            | XCEPTION  |
| Condition          | This error occurs when the co<br>an exception code.   |
| Control<br>Action  | When detected, the control tu<br>delay in the action once the c   |
| Exit               | The machine will not start and<br>the condition no longer exists<br>and return the Machine to Idl   |
| Customer<br>Action |   |
| AUTODR             | Y OOR LOW   |
| Condition          | This error occurs when the m<br>(secondary) board that is out-  |
| Control<br>Action  | When detected there is a dela<br>tive, the control will display the<br>drying stage will end. The new<br>displayed alternating with the<br>stage. |
| Exit               | The Error Code will continue t<br>control is returned to Idle mo  |
| Customer<br>Action |   |

control receives a message that the drive has experi-

turns off the motor and the heating relay. There is no criteria are met.

nd the Error Code will continue to be displayed until is and the prompt is followed to Reset the Error Code file Mode.

washer. Wait one minute. Turn the power on to appears, contact your Dexter representative.

control receives a message that the drive has logged

turns off the motor and the heating relay. There is no criteria are met.

nd the Error Code will continue to be displayed until is and the prompt is followed to Reset the Error Code file Mode.

nachine control sees output from the RMC sensor t-of-range at 0V or lower.

lay of 5 minutes before the error is active. Once acthe "AUTODRY OOR LOW" prompt and the current ext stage will begin and the error will continue to be e Cycle Progress screen during the remainder of the

to be displayed until the cycle is stopped and the ode.

| DRIVE CO            | OMMUNICATION  |
|---------------------|---|
| Condition           | This error occurs the control cannot communicate with the VFD.  |
| Control Ac-<br>tion | When detected, the control turns off the motor and the heating relay. There is no delay in the action once the criteria are met   |
| Exit                | The machine will not start and the Error Code will continue to be displayed until<br>the condition no longer exists and the prompt is followed to Reset the Error Code<br>and return the Machine to Idle Mode.  |
| Customer<br>Action  | Inspect Drive code before powering down. Inspect Data communication Cable between Drive and control board. replace Data cable.  |
| DRIVE EN            | IABLE   |
| Condition           | This error occurs when the control sees a message that the VFD Enable circuit is not closed.  |
| Control Ac-<br>tion | When detected, the control turns off the motor and the heating relay. There is no delay in the action once the criteria are met.  |
| Exit                | The machine will not start and the Error Code will continue to be displayed until<br>the condition no longer exists and the prompt is followed to Reset the Error Code<br>and return the Machine to Idle Mode.  |
| Customer<br>Action  | Inspect yellow wires to Drive DCM & MI6   |
| OUT OF S            | ERVICE  |
| Condition           | This error occurs when the user has designated that the machine control should be made inoperable.  |
| Control Ac-<br>tion | When detected, the control turns off the motor and the heating relay. There is no delay in the action once the criteria are met.  |
| Exit                | The machine will not start and the Error Code will continue to be displayed the user changes the Out of Service state.  |
| Customer<br>Action  | The User will have to go into management Settings to put back in service.   |
| AUTODRY             | COMMUNICATION 1   |
| Condition           | This error occurs when the machine control does not detect CAN communication from the RMC stationary (primary) board.   |
| Control Ac-<br>tion | When detected, there is a delay of 30 seconds before the error is active. When active, the control will display the "AUTODRY COMMUNICATION 1" prompt and the current drying stage will end. AutoDry Communication Error 1 will alternate on the display for 5 seconds on, then 5 seconds off continuously until the end of the drying cycle which continues as normal. The error occurs within 5 seconds of a CAN communication malfunction. Eventually, if CAN communications are missing for 5 minutes, AutoDry communication Error 2 will be displayed |
| Exit                | The Error Code will continue to be displayed until the cycle is stopped and the control is returned to Idle mode.   |
| Customer<br>Action  | Check harness between control and stationary board for dammage, if yes re-<br>place. Check the distance between the RMC stationary and rotating boards to<br>ensure a 3/16" gap between them. Re-syncronise RMC Boards. Next Test for<br>Voltage on CAN connector, Green is ground, Red 12Vdc, Yellow 24Vdc.  |

| AUTODRY COMMUNICATION |   |
|-----------------------|---|
| Condition             | AutoDry Communication Error<br>communication between the<br>nication Error 2 can also be c<br>and rotating boards. See RM<br>not typical unless a new RMC                                   |
| Control<br>Action     | When the RMC stationary bo-<br>rotating board and fails, it wi<br>municating, AutoDry Commu<br>If the CAN bus is not function<br>stationary board and the con<br>appear after AutoDry Commu |
| Exit                  | The Error Code will continue control is returned to Idle mo   |
| Customer<br>Action    | Inspect harness between cor<br>place. Check the distance be<br>sure a 3/16" gap between th<br>on CAN connector, Green is g  |
| AUTODR                | Y COMMUNICATION   |
| Condition             | AutoDry Communication Erro<br>mitted between the RMC stat<br>ted, but likely the charging co<br>far apart to sufficiently power<br>ing from the sensor strip.                               |
| Control<br>Action     | When detected, there is a de<br>active, the control will display<br>the current drying stage will<br>continue to be displayed alte<br>remainder of the stage.                               |
|                       |   |
| Exit                  | The Error Code will continue control is returned to Idle mo   |

#### 2

or 2 is caused when there is a fault in the wireless e RMC stationary and rotating board. AutoDry Commucaused by a loss of sync between the RMC stationary IC Sync slides for more information. A loss of sync is C stationary or rotating board has been installed.

bard tries to send/receive communication to/from the vill reboot. After 5 minutes of failed attempts of comunication Error 2 is displayed.

oning to allow communication between the RMC ntrol board, then AutoDry Communication Error 2 will nunication Error 1 has been displayed.

e to be displayed until the cycle is stopped and the ode.

ontrol and stationary board for dammage, if yes reetween the RMC stationary and rotating boards to enhem. Re-syncronise RMC Boards. Next Test for Voltage ground, Red 12Vdc, Yellow 24Vdc.

#### 3

or 3 is caused by 5 minutes of faulty data being transationary and rotating boards. Data is being transmitcoils in the RMC stationary and rotating boards are too er the RMC rotating board and collect a voltage read-

elay of 30 seconds before the error is active. When ay the "AUTODRY COMMUNICATION 3" prompt and l end. The next stage will begin and the error will ernating with the Cycle Progress screen during the

e to be displayed until the cycle is stopped and the node.

the RMC stationary and rotating boards to ensure a ee Service Procedures

|                    | MPERATURE DETECTED   |
|--------------------|--|
| Condition          | This error occurs when an overheat condition has been detected at the OHP sen-<br>sor  |
| Control<br>Action  | When detected there is a calculated delay before the error is active. Once active, the control turns off the heating relays, the control buzzer is turned on, and the alarm relay closes. After 5 seconds, tumbler rotation may occur. If the dryer is equipped with a Fire Suppression system, water may be injected into the dryer cylinder. |
| Exit               | The Error Code will continue to be displayed until the condition is no longer pres-<br>ent and the mechanical Reset button is pressed on the Main Control board.   |
| Customer<br>Action | If a true overheat has not occured, Inspect for restricted exhaust Inspect Har-<br>ness connection. Ohm Test Overheat temp probe 10K.  |
| <b>OVERHE</b>      | AT SENSOR SHORT  |
| Condition          | This error occurs when the control detects a short circuit from the overheat tem-<br>perature sensor.  |
| Control<br>Action  | When detected, the control turns off the motor and the heating relay. There is no delay in the action once the criteria are met.   |
| Exit               | The machine will not start and the Error Code will continue to be displayed until<br>the condition is no longer present. Once the condition is removed, the machine<br>still will not start and the Error Code will continue to be displayed until the<br>prompt is followed to Reset the Error and return the machine to Idle Mode.           |
| Customer<br>Action | Inspect Harness connection. Ohm Test temp probe 10K  |
| OVERHE             | AT SENSOR OPEN   |
| Condition          | This error occurs when the control detects an open circuit from the overheat temperature sensor.   |
| Control<br>Action  | When detected, the control turns off the motor and the heating relay. There is no delay in the action once the criteria are met.   |
| Exit               | The machine will not start and the Error Code will continue to be displayed until<br>the condition is no longer present. Once the condition is removed, the machine<br>still will not start and the Error Code will continue to be displayed until the<br>prompt is followed to Reset the Error and return the machine to Idle Mode.           |
| Customer<br>Action | Inspect Harness connection. Ohm Test temp probe 10K  |

| <b>Close Do</b>    | or  |
|--------------------|---|
| Condition          | This Error occures when the cont<br>Lint compartment door circurcit is  |
| Control<br>Action  | When detected, the control will n<br>Door"will stay present untill the c  |
| Exit               | When detected will not start unti   |
| Customer<br>Action | Inspect Door switched and wiring gauging lint door switch.  |
| Control I          | Board Error 11  |
| Condition          | Model jumper not Selected or de   |
| Control<br>Action  | Error will display and cycle will st  |
| Exit               | The machine will not start and th<br>the condition no longer exists and<br>and return the Machine to Idle M   |
| Customer<br>Action | Inspect Model Jumper on Relay b<br>Inspect I2C harness between cor<br>12VO_SW LED make sure ilumina<br>11.4 or above). Inspect harnesse<br>switch). |
| <b>Control I</b>   | Board Error 66  |
| Condition          | Model jumper not Selected or de   |
| Control<br>Action  | Error will display and cycle will st  |
| Exit               | The machine will not start and th<br>the condition no longer exists and<br>and return the Machine to Idle M   |
| Customer<br>Action | Inspect Model Jumper on Relay b<br>Inspect I2C harness between cor<br>12VO_SW LED make sure ilumina<br>11.4 or above). Inspect harnesse<br>switch). |
| <b>Control I</b>   | Board Error 68  |
| Condition          | Model jumper not Selected or de   |
| Control<br>Action  | Error will display and cycle will st  |
| Exit               | The machine will not start and the condition no longer exists and and return the Machine to Idle M  |
| Customer<br>Action | Inspect Model Jumper on Relay b<br>Inspect I2C harness between cor<br>12VO_SW LED make sure ilumina   |

rol detects that either the loading door or the s not closed

not allow the cycle to start. the display "Close circuit is closed

circuict is closed.

. Inspect lint door paddle make sure fully en-

tected. Relay Board or control board.

op.

he Error Code will continue to be displayed until d the prompt is followed to Reset the Error Code lode.

board (P3) make sure connected and present. ntrol (Relay Exp.)and relay board (P1). Inspect for ated. If not test 12Vdc power supply, (must be es if pinched of damaged (loading door and lint

tected. Relay Board or control board.

op.

ne Error Code will continue to be displayed until d the prompt is followed to Reset the Error Code lode.

board (P3) make sure connected and present. ntrol (Relay Exp.)and relay board (P1). Inspect for ated. If not test 12Vdc power supply, (must be es if pinched of damaged (loading door and lint

tected. Relay Board or control board.


op.

ne Error Code will continue to be displayed until d the prompt is followed to Reset the Error Code lode.


board (P3) make sure connected and present. ntrol (Relay Exp.)and relay board (P1). Inspect for ated. If not test 12Vdc power supply, (must be es if pinched of damaged (loading door and lint


| Control I          | Board Error 82   |
|--------------------|--|
| Condition          | Model jumper not Selected or detected. Relay Board or control board.   |
| Control<br>Action  | Error will display and cycle will stop.  |
| Exit               | The machine will not start and the Error Code will continue to be displayed until<br>the condition no longer exists and the prompt is followed to Reset the Error Code<br>and return the Machine to Idle Mode.   |
| Customer<br>Action | Inspect Model Jumper on Relay board (P3) make sure connected and present.<br>Inspect I2C harness between control (Relay Exp.)and relay board (P1). Inspect for<br>12VO_SW LED make sure iluminated. If not test 12Vdc power supply, (must be<br>11.4 or above). Inspect harnesses if pinched of damaged (loading door and lint<br>switch). |


# Wiring Schematic

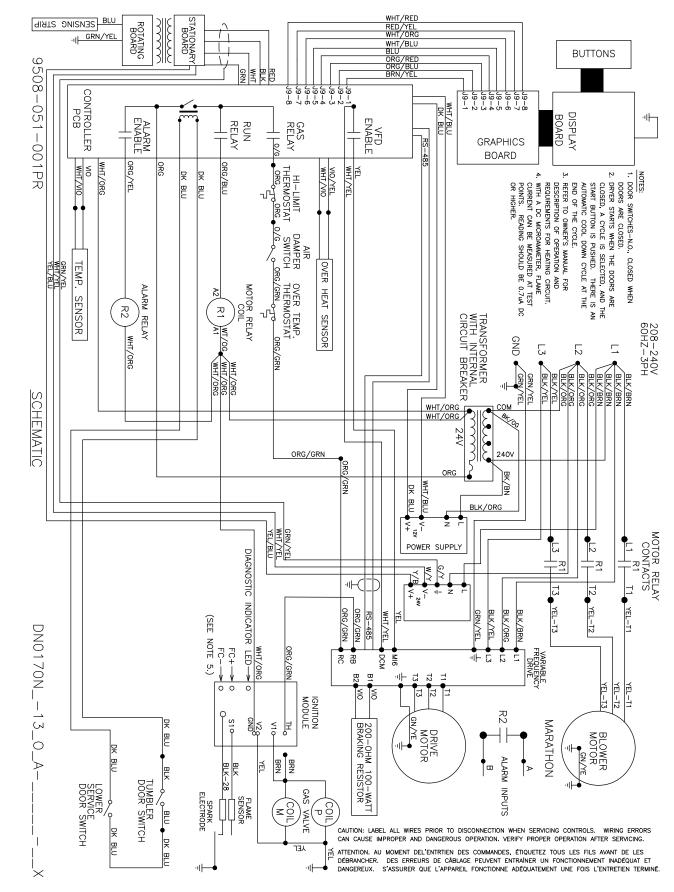


#### Wiring Diagram

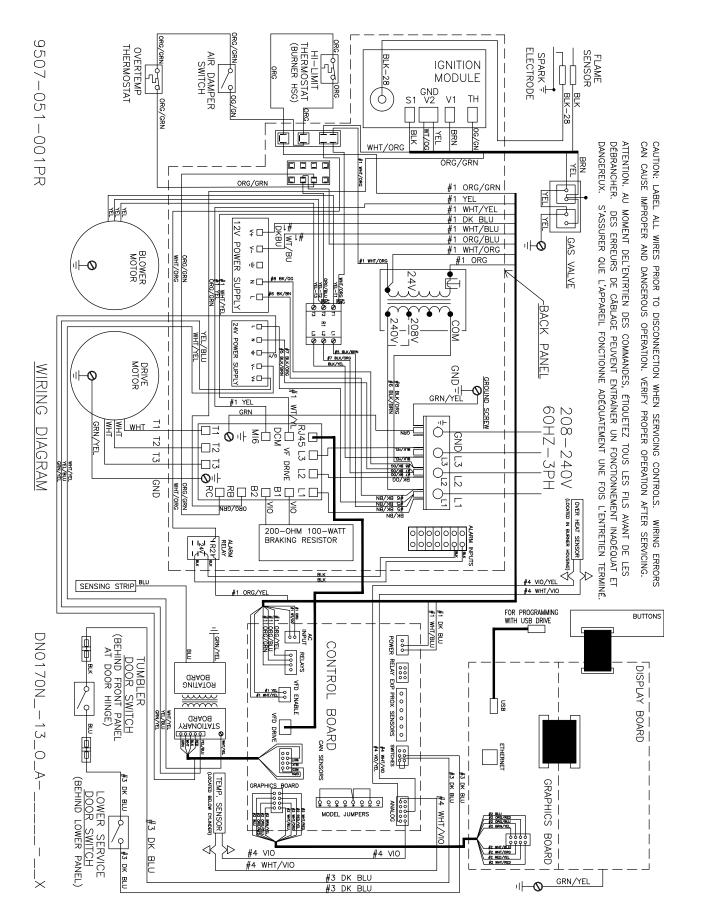

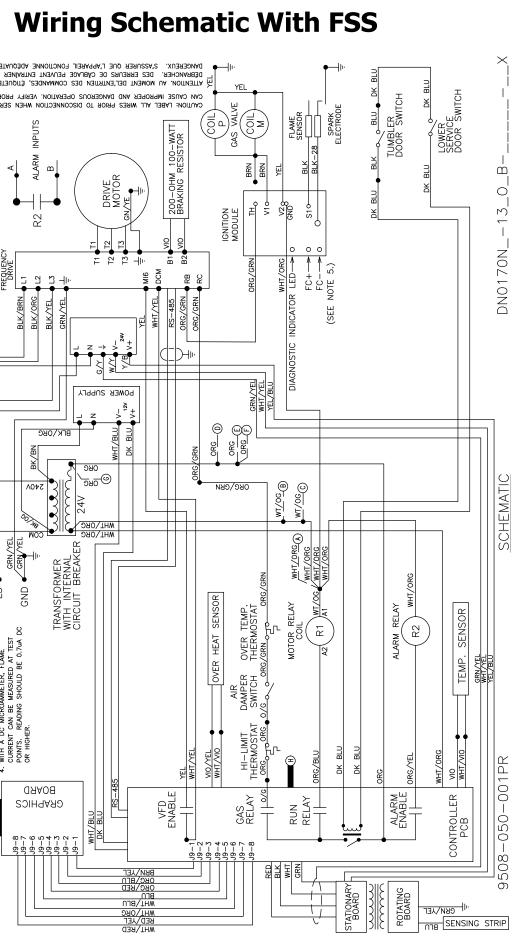

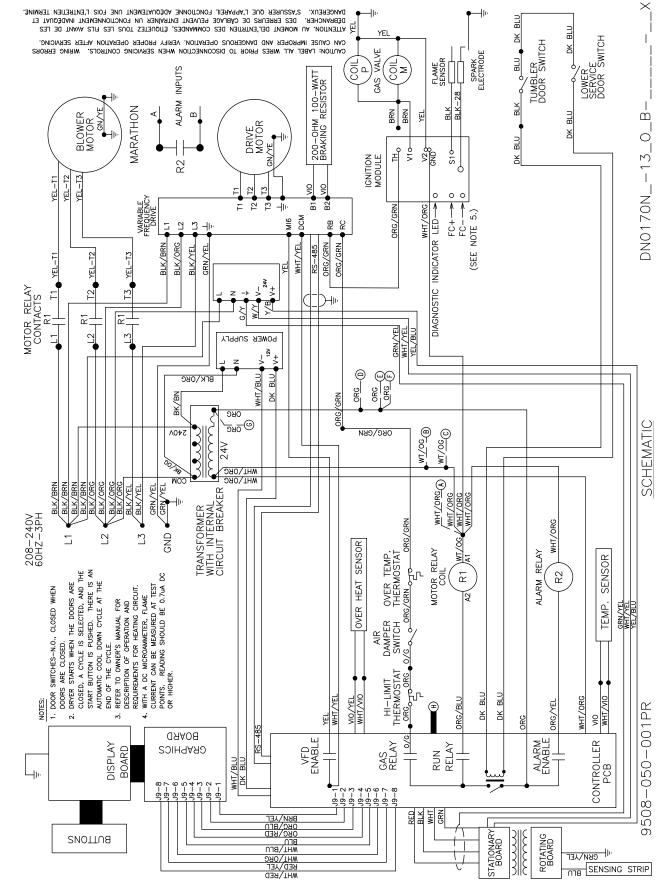

#### Wiring Diagram With FSS

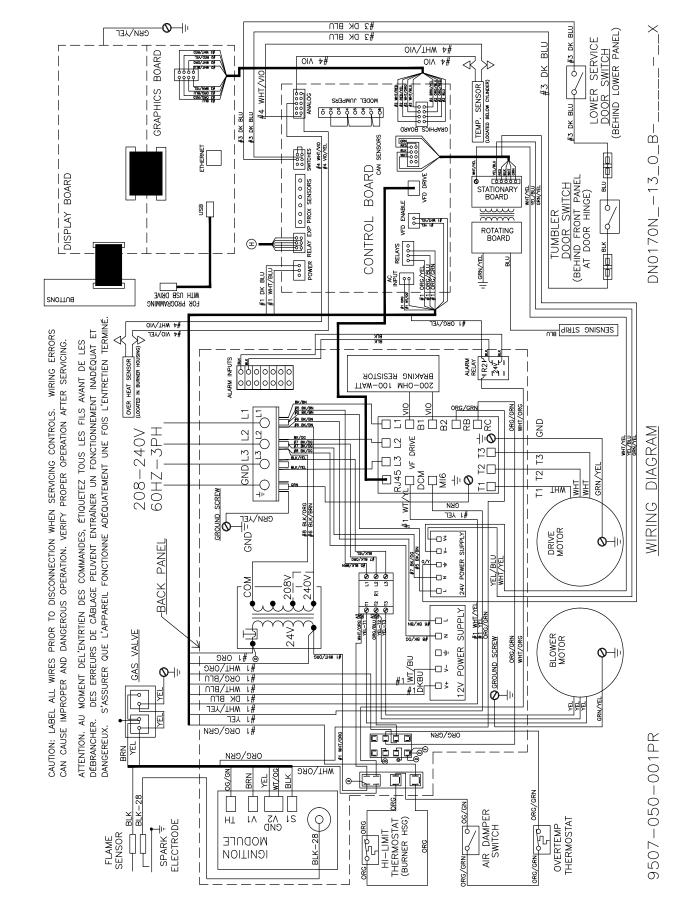

#### Notes

| <br> |
|------|
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |

## Kits, Assemblies, & Common Parts

| Description               | Part Number  |
|---------------------------|--------------|
| Kit – Add Water Option    | 9732-358-005 |
| Temperature Probe         | 9501-004-004 |
| Controls                  | 9799-027-001 |
| Overtemp Thermostat       | 9576-207-006 |
| Lint Screen Assembly      | 9822-034-001 |
| Door Switch (Round)       | 9539-492-001 |
| Door Switch (Square)      | 9539-501-001 |
| Ignition Control Assembly | 9857-182-001 |
| Electrode Assembly        | 9875-002-003 |
| Hi-Limit Thermostat       | 9576-203-002 |
| Relay                     | 5192-285-004 |
| Transformer               | 8711-007-002 |
| Airflow Switch            | 9539-461-009 |
| Door Handle               | 9244-093-001 |
| Spider/Trunnion           | 9568-020-001 |
| Motor Belt                | 9040-076-008 |
| Tumbler Belt              | 9040-082-001 |
| Gap Tool                  | 8545-065-001 |


DN0170NE-13E01\_



# Section 5: Dryer Parts Data

## **Dryer Cabinet Front Panel**


| Key | Description  | T-170        |    |
|-----|--|--------------|----|
| *   | Loading Door Compleate Wht/Brushed SS/Blk (#1-#9)                        | 9960-331-003 | 1  |
| 1   | Door Assy, Loading (Ring only) Brushed SS                                | 9960-329-001 | 1  |
| 1   | Door Assy, Loading (Ring & only) Brushed Blk (after serial D1.22290.005) | 9960-329-004 | 1  |
| 2   | Glass, Door  | 9212-002-006 | 1  |
| *   | Adhesive-Door Glass, 10.3 oz. tube (24-Hour Cure Time)                   | 8561-138-002 | 1  |
| 3   | Plate Assy, Hinge (Wht)  | 9982-398-003 | 1  |
| 4   | Screw Hinge to Door Ring, Torx-?, 1/4-20x1/2ss                           | 9545-015-018 | 5  |
| *   | Nut, Hinge to Door Ring, 1/4-20UNC, 2B                                   | 8640-414-006 | 5  |
| 5   | Gasket, Door Outer Rim (Black)   | 9206-420-007 | 1  |
| 6   | Handle, Loading Door   | 9244-093-001 | 1  |
| *   | Screw, Handle  | 9545-018-017 | 2  |
| 7   | Stud Door Catch 7/8"   | 9531-033-002 | 1  |
| 8   | Nut-Hex, #10-32  | 8640-413-001 | 1  |
| 9   | Nut, Acorn   | 8640-413-003 | 1  |
| *   | Catch, Loading Door  | 9086-015-002 | 2  |
| *   | Rivet  | 9491-009-004 | 2  |
| 10  | Strap, Hinge (Black)   | 9966-023-002 | 1  |
| *   | Chanel AssyHinge back up   | 9947-054-001 | 2  |
| *   | Switch-Door (Square)   | 9539-501-001 | 1  |
| *   | Harness-Loading Door Switch  | 9627-948-001 | 1  |
| *   | Conduit-Door Switch  | 6068-028-001 | 1  |
| *   | Screw-10AB x 3/8   | 9545-008-024 | 2  |
| *   | Screw-Phillips-Counter sink, 10-32x1/2, Strap to hinge plate             | 9545-012-028 | 4  |
| *   | Screw-Phillips-, 10-32x1/2 Chrome, strap to hinge plate                  | 9545-012-003 | 2  |
| 11  | Screw-Special, Hinge to Door   | 9545-052-001 | 1  |
| *   | Nut-Allen, 1/4-20  | 8640-439-001 | 1  |
| 12  | Washer-Fiber/Plastic   | 8641-436-003 | 1  |
| 13  | Front Panel Assy (Wht)   | 9989-694-002 | 1  |
|     | Insulation-Front Panel   | 9277-066-001 | 1  |
| 14  | Screw-Phillips, 10Bx1 3/4  | 9545-008-014 | 8  |
| 15  | Washer-Finish  | 8641-585-001 | 8  |
| *   | Nut-Spring   | 8640-399-001 | 8  |
| 16  | Screw-Torx, 10AB x 1/2", White "T-20"                                    | 9545-008-030 | 14 |
| *   | Fiber Washer, (attached to baffle)                                       | 8641-436-006 | 8  |
| 17  | Screw-Torx, 10AB x 3/4", White "T20"                                     | 9545-008-035 | 8  |
| 18  | Label-Warning  | 8502-753-001 | 1  |
| 19  | Plug-Front Panel, Optional Door Switch Location                          | 9456-055-001 | 1  |
| 20  | Handle-Lower Front Panel   | 9244-095-002 | 1  |
| *   | Screw-10B x 3/8, Black   | 9545-008-010 | 6  |
| *   | Plug-2" (behind Control Box)   | 9456-041-009 | 1  |
| 21  | Nameplate - Dexter Dryer Black   | 9412-257-001 | 1  |
| 22  | Control Box (Box only)   | 9041-107-002 | 1  |
| 23  | Overlay control box  | 9435-057-001 | 1  |
| 24  | Button Control, 2.0, OPL   | 9035-063-001 | 1  |

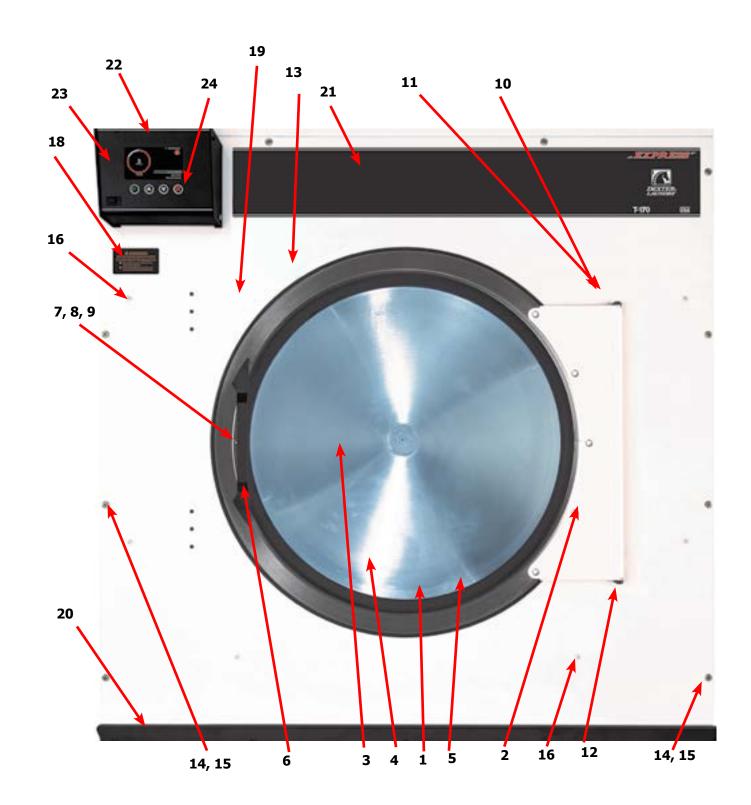


# **Dryer Cabinet Front Panel**

## **Dryer Cabinet Group Continued**


| Key | Description                                  | T-170        | QTY |
|-----|--|--------------|-----|
| 1   | Door Assy-Upper, OPL (Wht)                   | 9960-328-004 | 1   |
| 2   | Screw-Phillips, 10Bx1 3/4                    | 9545-008-014 | 4   |
| 3   | Washer-Finish                                | 8641-585-001 | 4   |
| *   | Nut-Spring                                   | 8640-399-001 | 4   |
| 4   | Bracket-Upper Service Door (pivot)           | 9029-224-001 | 2   |
| 5   | Rivet, 3/16 Low Profile                      | 9491-009-001 | 2   |
| 6   | Screw  | 9545-012-020 | 4   |
| *   | Nut  | 8640-413-002 | 4   |
| 7   | Box-Control Front, Black                     | 9041-107-002 | 1   |
| 8   | Screw-10ABx3/8 (Box mounting to Front Panel) | 9545-008-024 | 4   |
| 9   | Screw-10-32 x 1/2, Chrome                    | 9545-012-003 | 2   |
| 10  | Nut-Elastic Stop, #10-32                     | 8640-413-004 | 2   |
| 11  | Plate Assembly-Meter, Black                  | 9982-394-002 | 1   |
| 12  | Overlay control box                          | 9435-057-001 | 1   |
| 13  | Button Control, 2.0, OPL                     | 9435-057-001 | 1   |
| *   | Nut-Elastic Stop, #10-32                     | 8640-413-004 | 2   |
| 14  | Window, Display-w/gasket                     | 9635-021-002 | 1   |
| 15  | Display Control                              | 9857-230-002 | 1   |
| *   | Nut, #6-32                                   | 8640-411-003 | 4   |
| 16  | Screw, #10-32 x1/2 Green                     | 9545-008-027 | 1   |
| 17  | Lock Washer #10                              | 8641-582-006 | 1   |
| 18  | Wire, Green/Yellow, 12"                      | 8220-060-001 | 1   |
| 19  | Cable USB                                    | 9806-024-001 | 1   |
| 20  | Cap USB                                      | 0935-141-001 | 1   |
| 21  | Screw Torx-6BSD x 1/2, BLK, "T10"            | 9545-031-009 | 2   |
| 22  | Harness-Display Control                      | 9627-922-001 | 1   |
| 23  | Plug-2″                                      | 9456-041-009 | 1   |
| 24  | PCB Assy-Main Control Board                  | 9799-027-001 | 1   |

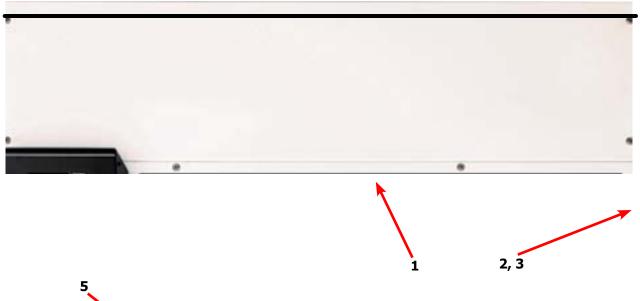


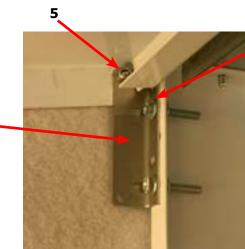

Δ

24

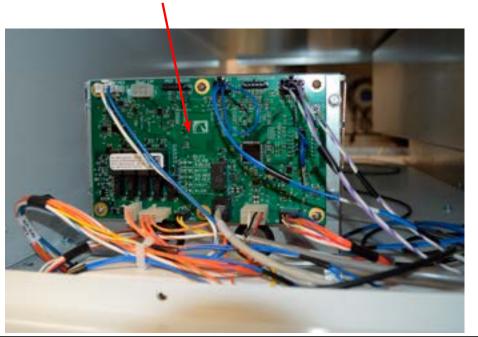

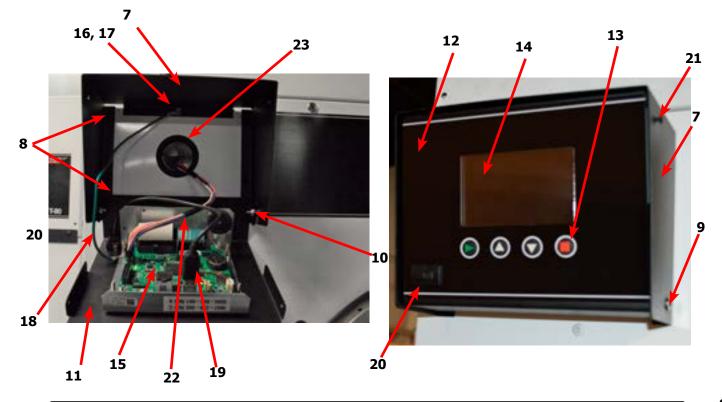


# **Dryer Cabinet Group Continued**

| Key | Description                                    | T-170        | QTY |
|-----|--|--------------|-----|
| 1   | Panel-Lower Front, LH                          | 9444-019-004 | 1   |
| *   | Screw-5/16, 10ABx3/8                           | 9545-008-024 | 6   |
| 2   | Trim-Lower Kick, Black                         | 9578-104-002 | 1   |
| 3   | Screw-Phollips, 10Bx3/8, Black                 | 9545-008-010 | 2   |
| *   | Assembly-Door-Lower Service, OPL, Wht (4-9)    | 9960-332-002 | 1   |
| 4   | Door-Lower Service, OPL, Wht                   | 9108-150-002 | 1   |
| 5   | Reinforcement-Lower Service Door               | 9489-055-001 | 1   |
| 6   | Rivit-Blind, 1/8 Low Profile                   | 9491-009-004 | 10  |
| 7   | Screw-Phollips, 10Bx3/4, White                 | 9545-008-035 | 4   |
| 8   | Bracket-Lower Door switch                      | 9029-226-001 | 1   |
| 9   | Rivit-Blind, 1/8 Low Profile                   | 9491-009-004 | 2   |
| 10  | Trim-Lower Kick, Black                         | 9578-103-002 | 1   |
| *   | Screw-Phollips, 10Bx3/8, Black                 | 9545-008-010 | 4   |
| 11  | Strap Assy-Hinge, lower service Door (Door)    | 9966-021-001 | 1   |
| 12  | Hinge-Door, Lower                              | 9243-084-002 | 1   |
| *   | Screw-5/16, 10-32x3/8                          | 9545-012-015 | 4   |
| 13  | Panel-Lower Front, LR                          | 9444-019-003 | 1   |
| *   | Screw-5/16, 10ABx3/8                           | 9545-008-024 | 6   |
| 14  | Trim-Lower Kick, Black                         | 9578-104-002 | 1   |
| *   | Screw-Phollips, 10Bx3/8, Black                 | 9545-008-010 | 2   |
| *   | Strap Assy-Hinge, lower service Door (Cabinet) | 9966-022-001 | 1   |
| *   | Screw-5/16, 10-32x3/8                          | 9545-012-015 | 4   |
| 15  | Switch-Door (Square)                           | 9539-501-001 | 1   |
| 16  | Handle, Turn-Door, Lower Service OPL           | 9244-084-002 | 1   |
| *   | Screen Assy, Lint                              | 9822-034-001 | 1   |
| *   | Footing Foot                                   | 9188-016-001 | 4   |

 -FRONT VIEW - ALL



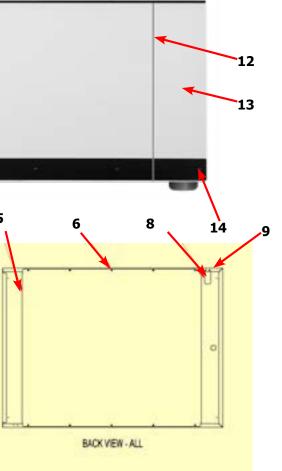


Δ

# Dryer Cabinet Group Continued

| Key | Description                                   | T-170        | QTY |
|-----|---|--------------|-----|
| 1   | Panel AssyUpper Right                         | 9989-691-003 | 1   |
| *   | Screw, #10ABx1/2                              | 9545-008-024 | 2   |
| 2   | Insulation-Right Upper, Burner Area           | 9277-059-001 | 1   |
| 3   | Panel AssyUpper Left                          | 9989-691-004 | 1   |
| *   | Screw, #10ABx1/2                              | 9545-008-024 | 2   |
| 4   | Insulation Tumbler Area, Right (Front & Back) | 9277-051-005 | 2   |
| 4   | Insulation Tumbler Area, Right (Center)       | 9277-051-006 | 1   |
| 5   | Insulation Tumbler Area, Left (Front & Back)  | 9277-051-005 | 2   |
| 5   | Insulation Tumbler Area, Left (Center)        | 9277-051-006 | 1   |
| *   | Switch-Door Closure (Square)                  | 9539-501-001 | 2   |
| *   | Screen Assy, Lint                             | 9822-034-001 | 1   |
| *   | Lint Hood Assembly                            | 9834-013-001 | 1   |
| 7   | Lint Hood, Top                                | 9240-050-001 | 1   |
| *   | Lint Hood, Left Hand Side                     | 9240-051-001 | 1   |
| *   | Lint Hood, Right Hand Side                    | 9240-051-002 | 1   |
| 8   | Lint Hood, Bottom                             | 9058-031-001 | 1   |
| 9   | Lint Hood, Angle                              | 9003-377-001 | 1   |
| 10  | Screw,- 10ABx3/8                              | 9545-008-024 | 21  |
| 11  | Hinge-Door, Lower                             | 9243-084-002 | 1   |
| *   | Screw-10ABx3/8                                | 9545-008-024 | 5   |
| 12  | Impeller, w/set screws                        | 9278-046-001 | 1   |
| 13  | Harness -Temp Probe                           | 9627-917-002 | 1   |
| 14  | Wire Nut, #71B                                | 8640-276-005 | 2   |
| 15  | Temp Probe                                    | 9501-004-004 | 1   |
| 16  | Screw-Phillips, 8Bx1/4                        | 9545-045-005 | 1   |
| 17  | Bracket, Temp Probe                           | 9029-111-001 | 1   |
| 18  | Screw, 8AB x 3/8                              | 9545-045-008 | 2   |
| 19  | Trim-Edge, Lint Hood                          | 9578-092-003 | 2   |


#### 120Lb. Temp Probe

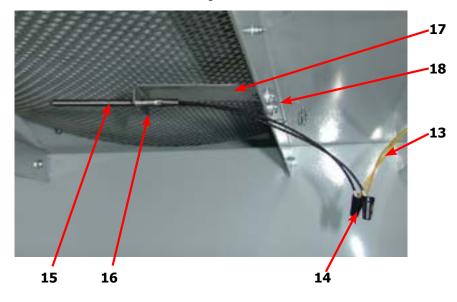




## Dryer Modular Cabinet Group 170lb. (After Serial D1.23290.027)


| Key | Description                          | T-170        | QTY |
|-----|--------------------------------------|--------------|-----|
| 1   | Cabinet Base Assembly                | 9945-171-001 | 1   |
| *   | Lower Back Panel Assembly            | 9989-741-002 | 1   |
| 2   | Lower Cabinet RH Side Panel          | 9444-122-003 | 1   |
| 3   | Lower Cabinet LH Side Panel          | 9444-122-004 | 1   |
| *   | Impeller Front Assembly              | 9989-742-001 | 1   |
| 4   | Lower Cabinet Front Channel          | 9081-227-001 | 1   |
| *   | Base Front to Back Channel           | 9081-228-001 | 2   |
| *   | Base Air Ramp Channel                | 9081-229-001 | 1   |
| *   | Upper Back Panel Assembly            | 9989-693-001 | 1   |
| 5   | RH Middle Side Panel Assembly        | 9989-691-003 | 1   |
| 6   | LH Middle Side Panel Assembly        | 9989-691-004 | 1   |
| 7   | Cabinet Top Cover                    | 9825-063-001 | 1   |
| 8   | Baffle                               | 9049-136-001 | 4   |
| *   | Baffle Stiffener Angle               | 9003-332-002 | 2   |
| *   | Baffle Angle                         | 9003-388-001 | 2   |
| *   | Baffle Deflector                     | 9114-056-001 | 2   |
| 9   | RH Upper Side Panel Assembly         | 9989-696-003 | 1   |
| 10  | LH Upper Side Panel Assembly         | 9989-697-002 | 1   |
| *   | Cabinet Top Deck Assembly            | 9989-763-001 | 1   |
| *   | 10abx3/8 Screw                       | 9545-008-024 | 108 |
| *   | 3/16 Blind Rivet                     | 9491-009-001 | 142 |
| *   | Wht 3/16 Blind Rivet                 | 9491-009-005 | 62  |
| *   | Hex kep Nut 1/4-20unc, 2b            | 8640-414-006 | 10  |
| *   | Upper Service Door Assembly, Wht/Blk | 9960-361-001 | 1   |
| *   | Upper Service Door Assembly, Wht/Blu | 9960-361-002 | 1   |
| *   | Upper Service Door Assembly, SS/Blk  | 9960-361-003 | 1   |
| *   | Upper Service Door Assembly, SS/Blu  | 9960-361-004 | 1   |
| *   | Screw                                | 9545-008-014 | 12  |
| *   | Finish Washer                        | 8641-585-001 | 12  |

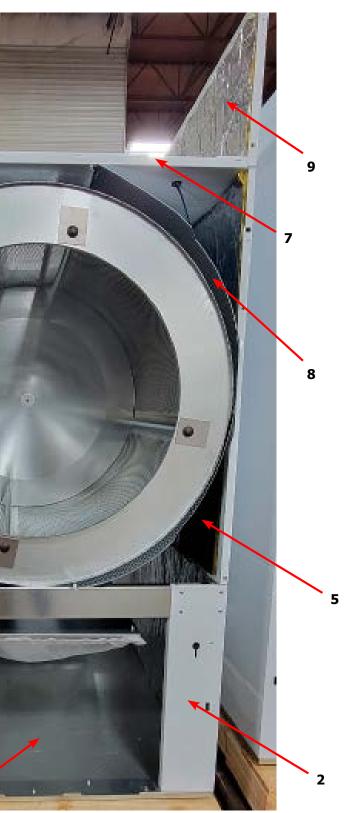

## Dryer Rear View 170Lb Reversing

| Key | Description                      | T-170        | QTY |
|-----|----------------------------------|--------------|-----|
| 1   | Pulley, Driven                   | 9453-173-004 | 1   |
| 2   | Tolerance Ring                   | 9487-234-004 | 1   |
| 3   | Washer -Flat                     | 8641-581-032 | 1   |
| 4   | LockWasher - IntTooth, 1″        | 8641-582-018 | 1   |
| 5   | Screw, 5/8-11 x 1 1/2            | 9545-060-001 | 1   |
| 6   | Belt-Driven                      | 9040-082-001 | 2   |
| *   | Impeller, 5" x 16"               | 9278-046-001 | 1   |
| 7   | Plate Assembly-Impeller          | 9982-399-002 | 1   |
| 8   | Nut-Wiz Lock, 5/16-18            | 8640-400-003 | 6   |
| *   | Gasket-Impeller Housing          | 9206-428-002 | 1   |
| 9   | Motor-Blower                     | 9376-337-001 | 1   |
| *   | Screw, 5/16-18 x 5/8             | 9545-014-004 | 4   |
| *   | Nut-Wiz Lock, 5/16-18            | 8640-400-003 | 4   |
| 12  | Thermostat-Overtemp              | 9576-207-006 | 1   |
| *   | Screw-10AB x 3/8                 | 9545-008-006 | 2   |
| 14  | Pulley, Intermediate, w/Bearings | 9908-055-001 | 1   |
| *   | Bearings                         | 9036-159-011 | 2   |
| *   | Spacer-Bearings                  | 9538-186-001 | 1   |
| *   | Ring-Retaining, Internal         | 9487-238-006 | 1   |
| 15  | Washer-Flat                      | 8641-581-039 | 1   |
| 16  | Nut, 5/8-11                      | 8640-425-002 | 1   |
| 17  | Belt, Motor                      | 9040-076-008 | 1   |
| 18  | Motor, Drive                     | 9376-319-001 | 1   |
| 19  | Pulley-Motor                     | 9453-191-001 | 1   |
| 20  | Bushing, Motor -Support          | 9053-074-002 | 2   |
| 21  | Rod-Motor Mounting, Black        | 9497-222-008 | 1   |
| 22  | Collar-Shaft, w/Set Screws       | 9076-052-002 | 1   |
| 23  | Chain-Belt tension               | 9099-012-004 | 1   |
| *   | Hook-S Type                      | 9248-022-002 | 1   |
| 24  | Spring, Belt Tension             | 9534-151-000 | 1   |

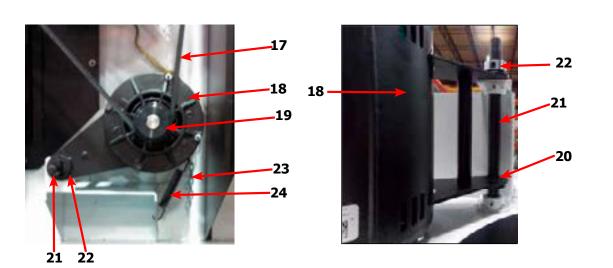

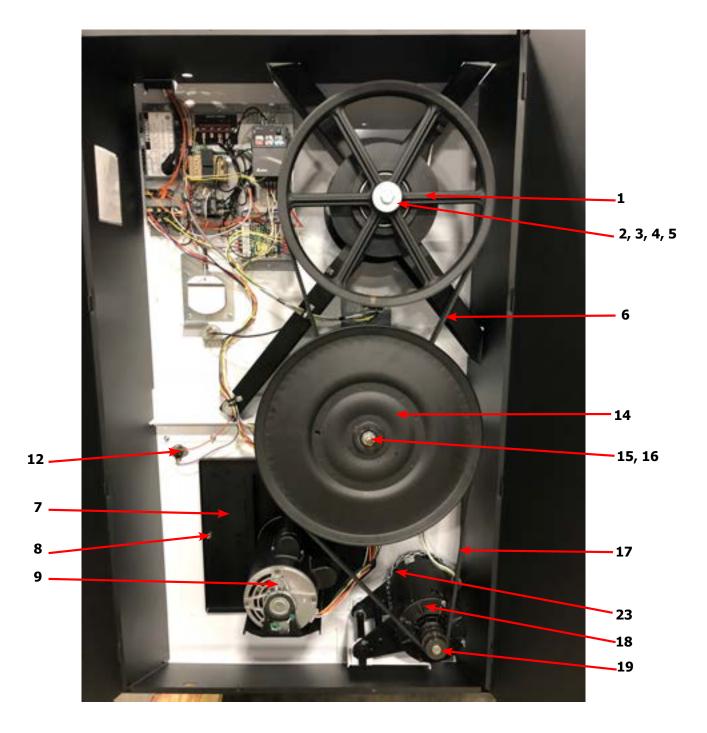



#### **Dryer Rear View 170Lb Reversing**


## Dryer Rear View 170Lb Reversing Continued

## Dryer Rear View 170Lb Reversing Continued

| Кеу | Description                          | T-170        | QTY |
|-----|--------------------------------------|--------------|-----|
| 6   | Plate Assembly-Intermediate, Tension | 9982-378-002 | 1   |
| 7   | Rod-Intermediate, Pivot              | 9497-230-002 | 1   |
| 8   | Collar, Locking                      | 9076-060-001 | 1   |
| 9   | Bolt, 1/2-13 x 1 1/2                 | 9545-017-001 | 2   |
| 10  | Thermostat-Overtemp                  | 9576-207-006 | 1   |
| 11  | Screw-10AB x 3/8                     | 9545-008-006 | 2   |
| *   | Impeller, 5" x 16"                   | 9278-046-001 | 1   |
| 12  | Plate Assembly-Impeller              | 9982-399-002 | 1   |
| 13  | Nut-Wiz Lock, 5/16-18                | 8640-400-003 | 6   |
| *   | Gasket-Impeller Housing              | 9206-428-002 | 1   |
| 14  | Motor-Blower                         | 9376-337-001 | 1   |
| 15  | Screw, 5/16-18 x 5/8                 | 9545-014-004 | 4   |
| 16  | Nut-Wiz Lock, 5/16-18                | 8640-400-003 | 4   |
| 17  | Motor, Drive                         | 9376-319-001 | 1   |
| 18  | Pulley-Motor                         | 9453-191-001 | 1   |
| *   | Bushing, Motor -Support              | 9053-074-002 | 2   |
| 19  | Rod-Motor Mounting, Black            | 9497-222-008 | 1   |
| 20  | Collar-Shaft, w/Set Screws           | 9076-052-002 | 1   |
| 21  | Chain-Belt tension                   | 9099-012-004 | 1   |
| *   | Hook-S Type                          | 9248-022-002 | 1   |
| *   | Spring, Belt Tension                 | 9534-151-000 | 1   |

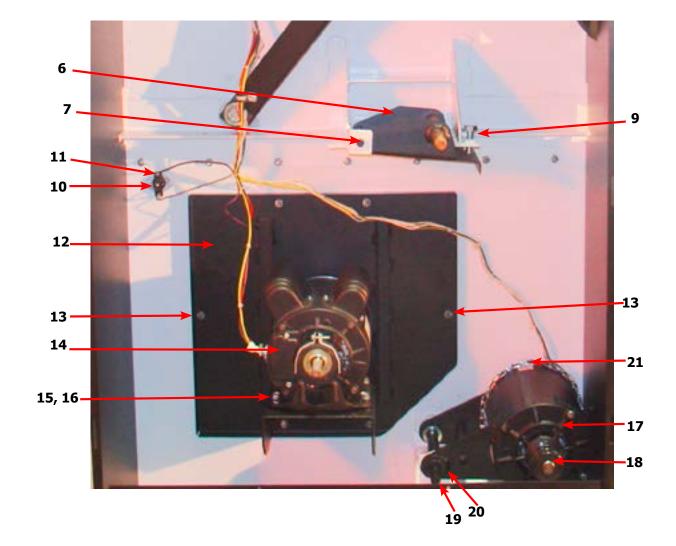


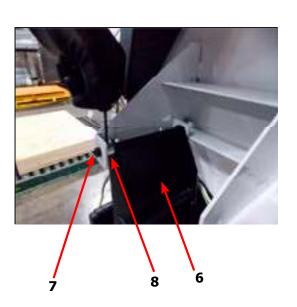

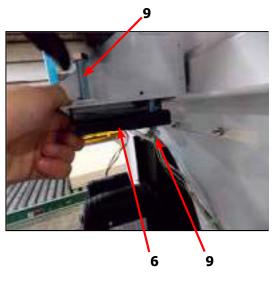


# Dryer Rear View-Guard & Exhaust

| Key | Description                    | T-170        | QTY |
|-----|--------------------------------|--------------|-----|
| 1   | Cover Cabinet                  | 9074-        | 1   |
| *   | Screw-5/16, 10ABx3/8           | 9545-008-024 | 16  |
| *   | Screws-10-16 x 1/2             | 9545-008-003 | 3   |
| *   | Guard-Side, Right              | 9208-156-002 | 1   |
| *   | Screw-Torx T20, 10B x 3/8, BLK | 9545-008-034 | 7   |
| 3   | Guard-Side, Left               | 9208-157-002 | 1   |
| *   | Screw-Torx T20, 10B x 3/8, BLK | 9545-008-034 | 8   |
| 4   | Guard-Top                      | 9208-155-002 | 1   |
| *   | Screw-Torx T20, 10B x 3/8, BLK | 9545-008-034 | 11  |
| 5   | Guard-Bottom                   | 9208-158-002 | 1   |
| *   | Screw-Torx T20, 10B x 3/8, BLK | 9545-008-034 | 6   |
| 6   | Guard-Wires                    | 9208-115-002 | 1   |
| *   | Screw-Torx T20, 10B x 3/8, BLK | 9545-008-034 | 2   |
| 7   | Guard-Door, Right              | 9208-159-004 | 1   |
| *   | Screw-Torx T20, 10B x 3/8, BLK | 9545-008-034 | 6   |
| 8   | Guard-Door, Left               | 9208-159-003 | 1   |
| 9   | Screw-Torx T20, 10B x 3/8, BLK | 9545-008-034 | 4   |
| *   | Nut-Spring, U-type             | 8640-399-001 | 4   |
| *   | Booklet-Owners                 | 8514-291-001 | 1   |
| 10  | Diagram                        | 9507-051-001 |     |
| 11  | Label-Warning & Notice         | 8502-763-001 | 1   |
| 12  | Label-Instructions             | 8502-645-001 | 1   |
| 13  | Decal-Lighting & Clearance     | 8527-151-001 | 1   |
| 14  | Label-High Voltage             | 8502-614-004 | 1   |

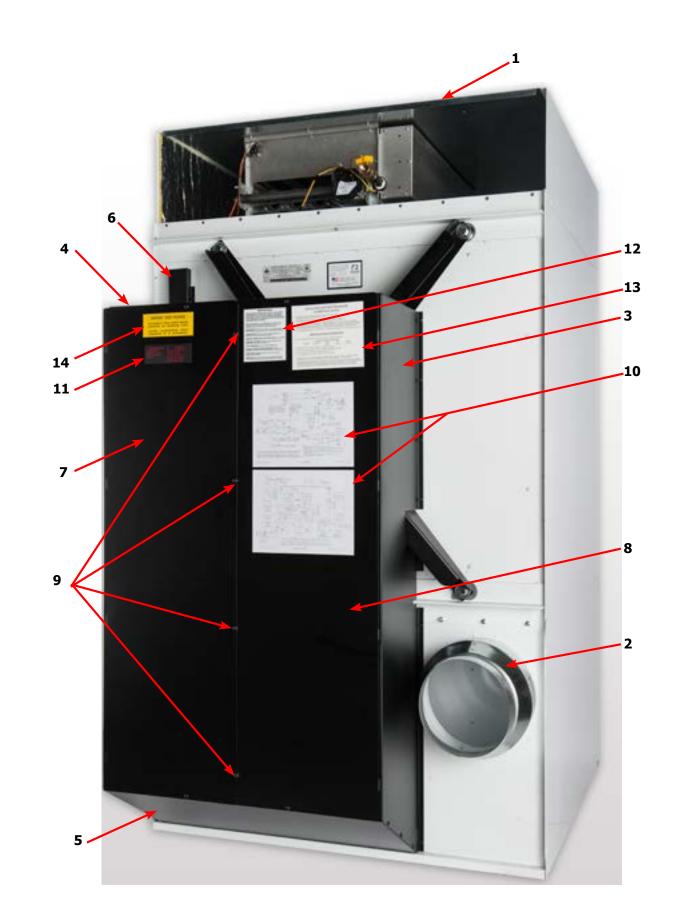


# Dryer Rear View-Bearing Housing 170Lb

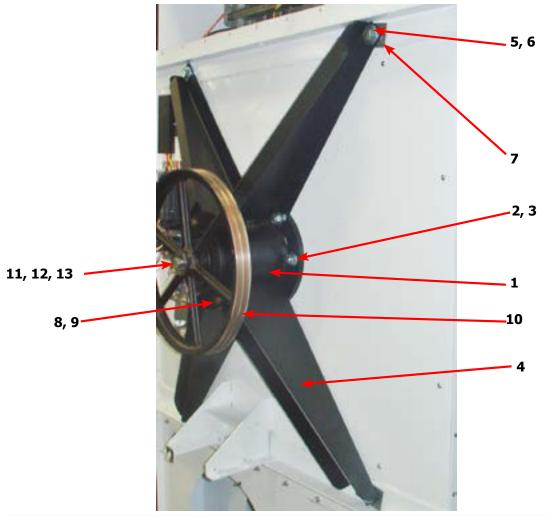

| Key | Description  | T-170        | QTY |
|-----|--|--------------|-----|
|     | Bearing Housing Complete Assy (Includes bearings & Spacer) | 9803-231-001 | 1   |
| 1   | Housing, Bearing   | 9241-208-002 | 1   |
| *   | Ring, Retaining-Internal                                   | 9487-238-004 | 1   |
| *   | Bearing, Ball, Front                                       | 9036-159-006 | 1   |
| *   | Spacer, Bearing  | 9538-190-001 | 1   |
| *   | Bearing, Ball, Rear  | 9036-159-005 | 1   |
| *   | Washer, Flat   | 8641-581-040 | 6   |
| 2   | Screw-5/8"-11 x 1 1/2"                                     | 9545-060-001 | 6   |
| 3   | Nut-Whizlock, 5/8" x 11                                    | 8640-425-001 | 6   |
| 4   | Arm-Support Housing  | 9001-068-002 | 4   |
| 5   | Screw-5/8-11 x 1 1/2                                       | 9545-060-001 | 4   |
| 6   | Washer, Flat 5/8"  | 8641-581-038 | 4   |
| 7   | Shim   | 9552-045-001 | AR  |
| 8   | Screw-7/16"-14 x 1 1/2"                                    | 9545-059-003 | 4   |
| 9   | Nut-Whizlock, 7/16"  | 8640-416-005 | 4   |
| *   | Tolerance Ring   | 9487-234-004 | 1   |
| 10  | Pulley Driven  | 9453-173-004 | 1   |
| 11  | Washer, Flat 5/8" x 2 1/4"                                 | 8641-581-032 | 1   |
| 12  | Lock Washer Spring, 1/2                                    | 8641-582-018 | 1   |
| 13  | Screw, 5/8-11 x 1 1/2"                                     | 9545-060-001 | 1   |


#### Dryer Tumbler Group 170Lb

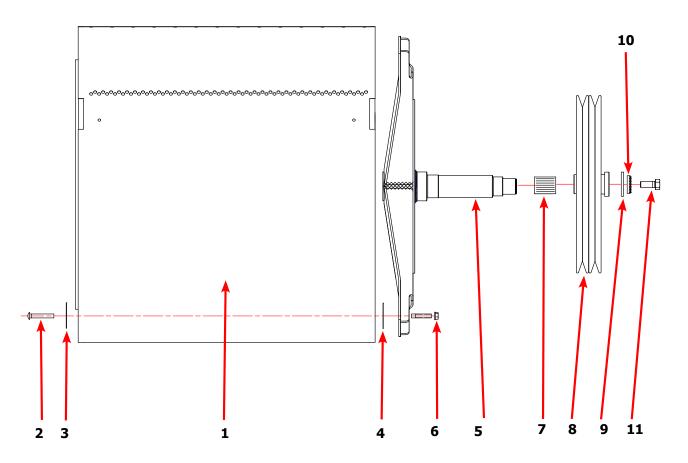



| Key | Description                           | T-170        | QTY |
|-----|---------------------------------------|--------------|-----|
| *   | Tumbler Assy Complete W/Spider (GALV) | 9848-162-002 | 1   |
| 1   | Tumbler Assy (Galvanized)             | 9848-161-002 | 1   |
| 2   | Rod, Tumbler                          | 9497-226-004 | 4   |
| 3   | Plate support, Tie Rod                | 9452-805-001 | 4   |
| 4   | Shim                                  | 9552-013-003 | AR  |
| 5   | Spider Assy                           | 9568-020-001 | 1   |
| 6   | Nut, Wiz Lock                         | 8640-417-005 | 4   |
| 7   | Tolerance Ring                        | 9487-234-004 | 1   |
| 8   | Pulley, Driven                        | 9453-173-004 | 1   |
| 9   | Washer -Flat                          | 8641-581-032 | 1   |
| 10  | LockWasher - IntTooth, 1"             | 8641-582-018 | 1   |
| 11  | Screw, 5/8-11 x 1 1/2                 | 9545-060-001 | 1   |


#### **RMC Parts**

| Key | Description                    | T-170        | QTY |
|-----|--------------------------------|--------------|-----|
| 1   | Strip-sensing,moisture         | 9558-034-001 | 1   |
| *   | Rivet-blind,3/16steel          | 9491-009-001 | 6   |
| 2   | Controlsassy-rotatingpcb,rmc   | 9857-248-001 | 1   |
| *   | Screw-hxwshrundrcuthd,10abx3/8 | 9545-008-024 | 2   |
| 3   | Wiringharness-rmc,sensor,      | 9627-941-003 | 1   |
| 4   | Conduit-rmcwires,              | 6068-055-001 | 1   |
| *   | Screw-hxwshrundrcuthd,10abx3/8 | 9545-008-024 | 2   |
| 5   | Grommet-3/16id                 | 9209-037-002 | 1   |
| 6   | Screw-hxwsrhdsl,10-32ttx1/2grn | 9545-008-027 | 1   |
| *   | Lockwasher-exttooth,#10        | 8641-582-006 | 1   |
| 7   | Bracketassy-cabinet,RMC        | 9985-204-001 | 2   |
| *   | Screw-hxwshdsl,10bx1/4         | 9545-008-001 | 4   |
| 8   | Controlsassy-stationarypcb,RMC | 9857-247-001 | 1   |
| *   | Nut-hexkeps,#10-32unf,2b       | 8640-413-002 | 2   |
| 9   | Wiringharn-RMC,can/pwr,        | 9627-940-003 | 1   |
| 10  | Cover-service,RMC              | 9074-385-001 | 1   |
| *   | Screw-hxwshdsl,10bx1/4         | 9545-008-001 | 2   |

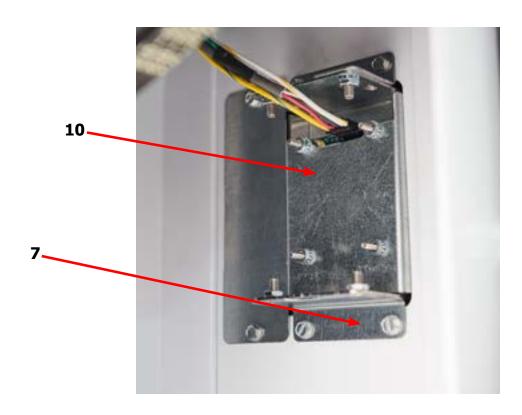

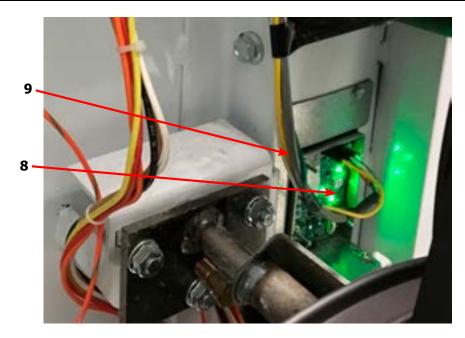


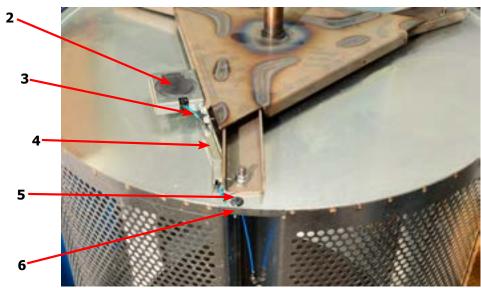


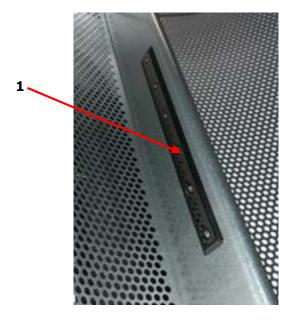


#### Water Suppression Parts

| Key | Description                     | T-170        | QTY |
|-----|---------------------------------|--------------|-----|
| *   | FSS Kit                         | 9732-358-005 | 1   |
| 1   | Nozzleassy-firesuppression      | 9872-004-001 | 1   |
| *   | Screw-hxwshrundrcuthd,10abx3/8  | 9545-008-024 | 3   |
| 2   | Tube-nozzle,inlet               | 9574-262-001 | 1   |
| 3   | Bushing-support                 | 9053-083-001 | 1   |
| *   | Screw-hxwshrundrcuthd,10abx3/8  | 9545-008-024 | 1   |
| 4   | Fitting-adapt,3/8nptto1/2hose   | 8615-115-001 | 1   |
| 5   | Valve-water,24v,epdm(nsf)       | 9379-183-013 | 1   |
| 6   | Wireasy-jumper,org/brn,120-6    | 8220-161-003 | 1   |
| 7   | Wireasy-jumper,wht/org,60"-6"   | 8220-090-019 | 1   |
| 8   | Screw-hxwshrhdundct,#10bx1/2    | 9545-008-026 | 2   |
| 9   | Hose-water,3"                   | 9242-453-031 | 2   |
| 10  | Fitting-y,1/2                   | 8615-119-001 | 1   |
| 11  | Hose-water,"                    | 9242-453-034 | 1   |
| *   | Clamp-hose,worm,1in             | 8654-117-015 | 6   |
| *   | Clamp-cable                     | 8654-061-001 | 2   |
| *   | Screw-hxwshrundrcuthd,10abx3/8  | 9545-008-024 | 2   |
| 12  | Guard-water valve               | 9208-145-001 | 1   |
| *   | Screw-hxwshrundrcuthd,10abx3/8  | 9545-008-024 | 2   |
| 13  | Thermostat-fss                  | 9576-212-001 | 1   |
| *   | Screw-hxwshdsltd,8bx1/2         | 9545-045-002 | 2   |
|     | Wireasy-jumper,org,77"          | 8220-162-002 | 1   |
| 14  | Pcbassy-relay                   | 9799-028-001 | 1   |
| *   | Screw-hxwshrundrcuthd, #10Bx1/2 | 9545-008-026 | 2   |
| 15  | Wireasy-jumper,v2.0,relay pcb   | 8220-159-006 | 1   |
| 16  | Wiringharness-cntrl/relay,v2.0  | 9627-921-001 | 1   |
| 17  | Switch-momentary,n.o.           | 9539-500-001 | 1   |
| *   | Wireasy-org, 75"                | 8220-108-016 | 1   |
| 18  | Wiringharness-relaypowerboard   | 9628-006-002 | 1   |
| *   | Wireasy-jumper,wht/org,5"       | 8220-161-002 | 1   |
| *   | Wireasy-org,11"                 | 8220-108-014 | 1   |
| 19  | Bracket-mtg,ohp sensor          | 9029-315-001 |     |
| *   | Screw-hxwshrundrcuthd,10abx3/8  | 9545-008-024 |     |

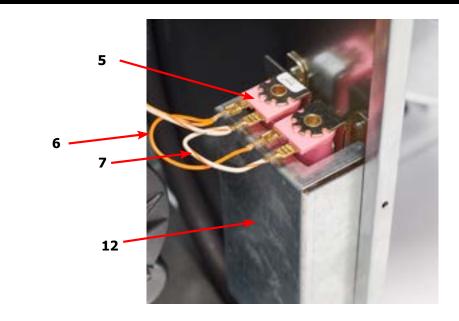


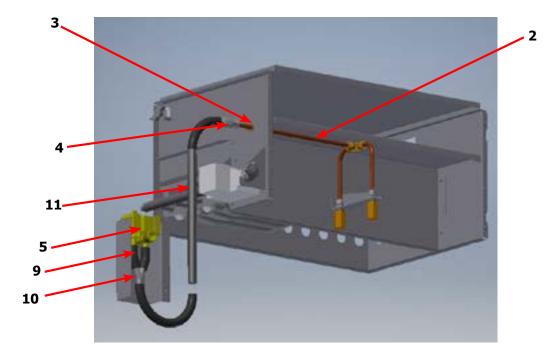

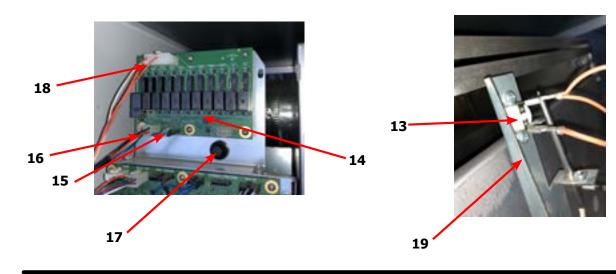

# **Dryer Burner Housing Group 170Lb**


| Key | Description                           | T-170        | QTY |
|-----|---------------------------------------|--------------|-----|
| *   | Housing Assembly, Burner              | 9803-232-001 | 1   |
| 1   | Screw, 10ABx3/8                       | 9545-008-024 | 55  |
| 2   | Bracket-Support, Gas Valve            | 9029-329-001 | 1   |
| 3   | Side-Extention Baffle, Burner Housing | 9551-076-001 | 2   |
| 4   | Burner, Main                          | 9048-022-001 | 3   |
| 5   | Baffle-Burner Housing, Extension      | 9049-128-001 | 1   |
| 6   | Panel-Burner Housing, Front           | 9444-026-001 | 1   |
| 7   | Panel-Burner Housing, Back            | 9444-025-001 | 1   |
| 8   | Panel-Burner Housing, Side Left       | 9551-075-001 | 1   |
| 9   | Baffle-Center, Burner                 | 9049-127-001 | 1   |
| 10  | Panel-Burner Housing, Side Right      | 9551-077-001 | 1   |
| 11  | Channel-Burner Housing, Right         | 9081-199-001 | 1   |
| 12  | Bracket-Manifold                      | 9029-328-001 | 1   |
| 13  | Bracket-Support, Burner, Front        | 9029-330-001 | 1   |
| 14  | Bracket-Support, Burner, Rear         | 9029-331-001 | 1   |
| 15  | Control Assy,Gas Valve                | 9857-193-001 | 1   |
| 16  | Manifold Assy                         | 9381-016-001 | 1   |
| 17  | Top Assembly, Burner Housing          | 9961-162-001 | 1   |
| 18  | Screw, 10Bx1/4                        | 9545-008-001 | 18  |
| *   | Orfice-Natural, #13                   | 9425-069-028 | 3   |
| *   | Orfice-LP, #34                        | 9425-069-029 | 3   |
| *   | Kit, LP Conversion                    | 9732-102-052 | 1   |
| 19  | Thermostat-HI-Limit                   | 9576-203-002 | 1   |
| 20  | Electrode-Ignition                    | 9875-002-003 | 1   |
| 21  | Bracket-Igniter                       | 9029-243-001 | 1   |
| 22  | Elbow-1" Street, Black                | 8615-104-046 | 1   |

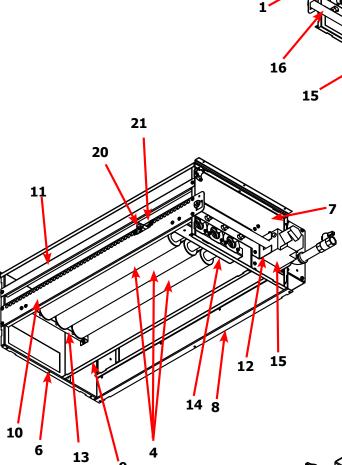


ġ

19

24

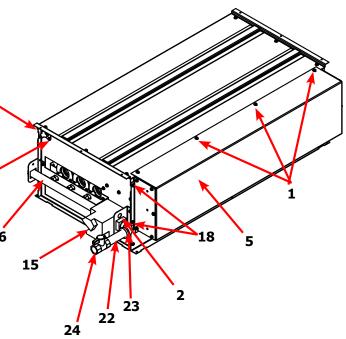

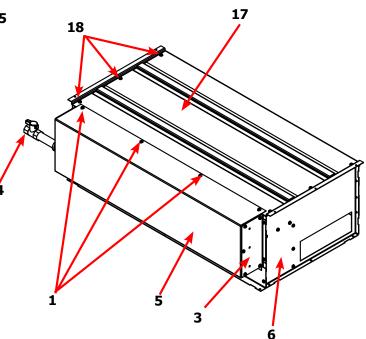


| 1<br>16<br>15<br>17 |          | 3 5     |         |       |
|---------------------|----------|---------|---------|-------|
|                     | 14 13 12 | 27 30 2 | 3 25 24 | 32 31 |

| Key | Description                        | T-170        | QTY |
|-----|------------------------------------|--------------|-----|
| *   | Control Assembly, (1 thru 28)      | 9857-270-001 |     |
| 1   | Channel-Controls                   | 9081-191-001 | 1   |
| 2   | Screw, 5/16-10B-3/8                | 9545-008-026 | 6   |
| 3   | Strip-Marker, Terminal             | 9558-029-006 | 1   |
| 4   | Terminal Block Assy-Power, 4Pole   | 9897-035-001 | 1   |
| 5   | Screw, 5/16-10AB-3/8               | 9545-008-024 | 2   |
| 11  | Transformer, Control               | 8711-007-002 | 1   |
| 12  | Screw, 5/16-10AB-3/8               | 9545-008-024 | 2   |
| 13  | Relay-Motor, 30Amp, 24VAC          | 5192-295-011 | 1   |
| 14  | Screw, 5/16-10AB-3/8               | 9545-008-024 | 2   |
| 15  | Control Assy, Ignition (Module)    | 9857-182-001 | 1   |
| 16  | Screw-8Bx3/4"                      | 9545-045-007 | 2   |
| *   | Harness, Ignition Module           | 9627-867-013 | 1   |
| 17  | Wire Assy- High Voltage Lead       | 9631-403-005 | 1   |
| 20  | Drive-VD Inverter, 1HP, 208-240VAC | 9375-032-021 | 1   |
| PS  | Key Pad, Delta E-Drive             | 9150-044-001 | 1   |
| 21  | Screw-#10B x 1/2                   | 9545-008-026 | 4   |
| 22  | Wire Assy-Green, 18"               | 8220-092-006 | 1   |
| 23  | Resistor-Dynamic Breaking, 2000HM  | 9483-004-002 | 1   |
| 24  | Screw-5/16, 10ABx3/8               | 9545-008-024 | 2   |
| 25  | Wire Assy, Violet 24"              | 8220-118-003 | 2   |
| 27  | Relay, 24VAC                       | 5192-285-004 | 1   |
| 28  | Screw, 6B x 3/8                    | 9545-031-003 | 4   |
| *   | Stand off                          | 9527-007-001 | 7   |
| 30  | Elecperiph - Power Supply, 12V     | 9150-054-001 | 1   |
| *   | Screw - pnhdcr, 6AB x 3/4          | 9150-054-001 | 2   |
| 31  | Elecperiph - Power Supply, 24VDC   | 9150-057-001 | 1   |
| *   | Screw - pnhdcrsems, #4-40 x 3/16   | 9545-020-009 | 2   |
| 32  | Data Cable                         | 9806-023-002 | 1   |
| 33  | Terminal Block                     | 9897-039-001 | 1   |
| *   | Screw - pnhdcr, 6AB x 3/4          | 9545-031-010 | 2   |

# **Dryer Rear View-Control Box**

## **Dryer Air Flow Switch Assembly**

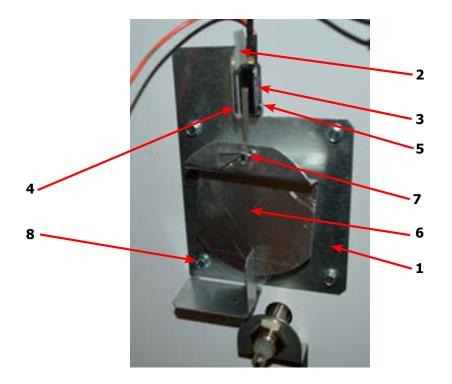


| Key | Description              | T-120        | QTY |
|-----|--------------------------|--------------|-----|
| *   | Air Flow switch Assy     | 9801-098-001 | 1   |
| 1   | Bracket-Airflow switch   | 9029-200-001 | 1   |
| 2   | Shield-Switch            | 9550-169-003 | 1   |
| 3   | Switch-Micro             | 9539-461-009 | 1   |
| 4   | Nut-Twin, 4-40           | 8640-401-001 | 1   |
| 5   | Screw625, 4-40           | 9545-020-001 | 2   |
| 6   | Actuator-Air Flow Switch | 9008-007-001 | 1   |
| 7   | Pin-Cotter, .09375x.75   | 9451-169-002 | 1   |
| 8   | Screw, 10ABx3/8          | 9545-008-024 | 4   |

## Notes

| <br> |
|------|
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
| <br> |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
| <br> |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
|      |
| <br> |
| <br> |
|      |
|      |
|      |
|      |
|      |

Ш COM  $\bigcirc$ 24V DN0170N . ояо∕тн₩  $\odot$ 24V WHT/ORG WHT/ORG MT/OG VALVE WATER VALVE  $\square$ ЭЯΟ ORG DISK ORG ос\ви 0 THERMAL FAILSAFE CIRCUIT TEST ORG/BRN ДΠ SCHEMATIC Ó Ó Z 0 овс/вки овс/вви → UI-1 RED UI-2 WHT UI-3 BLK 12VDC UI-4 BLU 12VDC UI-4 BLU 11-5 GRN 12VDC UI-6 ORG HHHHHH ОЯО∕тнм • 0KG 9508-050-001PR

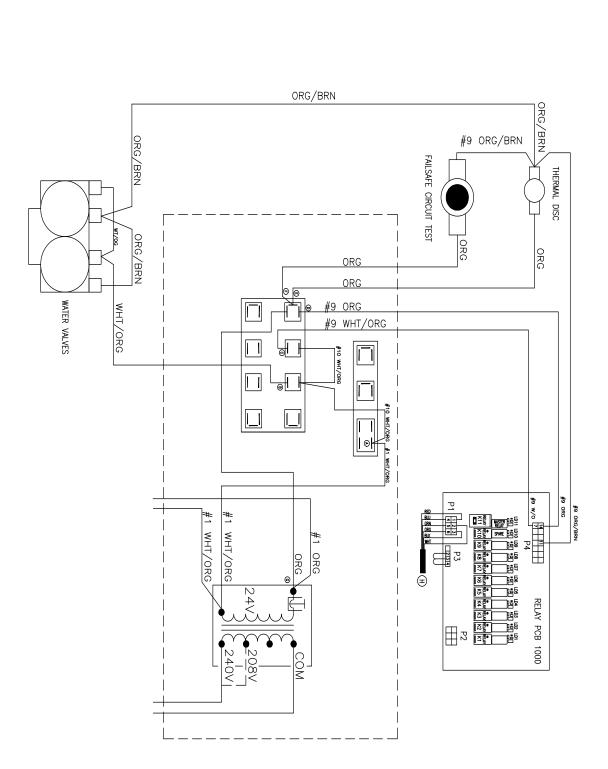

9507-050-001PR <u>WIR</u>

Ľ

SHEET

FROM

WIRING OF THE FSS SYSTEM USING THE SAME TRANSFORMER AND TERMINAL BLOCK FROM SHEET 1


WIRING DIAGRAM

DN0170N\_-13\_0\_B-\_\_\_\_X

121





#### WHT/REI RED/YEL WHT/OR AIRTE ONISNAS BLO ROTATING BOARD TATIONARY BOARD 11 WHT/BLU BLU BUTTONS ORG/RE ORG/BL BRN/YEI 9508 GR H BLK CONTROLLER PCB J9-8 J9-8 J9-6 J9-5 J9-3 J9-3 J9-1 19-1 -051 DISPLAY ALARM VFD GAS RELAY Ą GRAPHICS -001PR BOARD VIO WHT/VIO HI-LIMIT THERMOSTAT VIO/YEL WHT/VIO YEL WHT/YEI Ņ - | z DOOR S DOORS DRYER CLOSED START E START E AUTOMA END OF REFER REFER REFER 몓 R ٦ĽĂ SWI ARL AIR DAMPER SWITCH Ĩ. I THE DOORS ARE SELECTED, AND T JSHED. THERE IS WN CYCLE AT THE TEMP 9 WHT/YEL ED AT TEST BE 0.7uA OVER TEMP. THERMOSTAT ≥ MOT SENSOR R2 R1 TRANSFORMER WITH INTERNAL CIRCUIT BREAKER SENSOR RELAY RELAY 208-240V 60HZ-3PH GND $\Box$ 5 2 WHI SCHEMATIC 퉷 WHT/ORG COM of oc WHT/ORG ٨ ORG/GRN 240\ BLK/ORG ż F < + 12V GRN/YEL WHT/YEL YEL/BLU MOTOR RELAY CONTACTS Ē, POWER SUPPLY L I Ж (SEE 12 DN0170N\_ /ORC R LED-DRG/GR - L L L RC MI6 DCN <u>v v</u> 000 臣 년 년 R2 13\_0 S10 200-OHM 100-WATT BRAKING RESISTOR MARATHON BLOWER MOTOR ≥ 문 문 TUMBLER DOOR SWITCH LOWER SERVICE DOOR SW FLAME SPARK (≤8 BLC CAUTION: LABEL ALL WIRES PRIOR TO DISCONNECTION WHEN SERVICING CONTROLS. WIRING ERRORS Ę CAN CAUSE IMPROPER AND DANGEROUS OPERATION. VERIFY PROPER OPERATION AFTER SERVICING. ATTENTION. AU MOMENT DEL'ENTRTIEN DES COMMANDES, ÉTIQUETEZ TOUS LES FILS AVANT DE LES DÉBRANCHER. DES ERREURS DE CÀBLAGE PEUVENT ENTRAÎNER UN FONCTIONNEMENT INADÉQUAT ET DANGEREUX. S'ASSURER QUE L'APPAREIL FONCTIONNE ADÉQUATEMENT UNE FOIS L'ENTRETIEN TERMINÉ

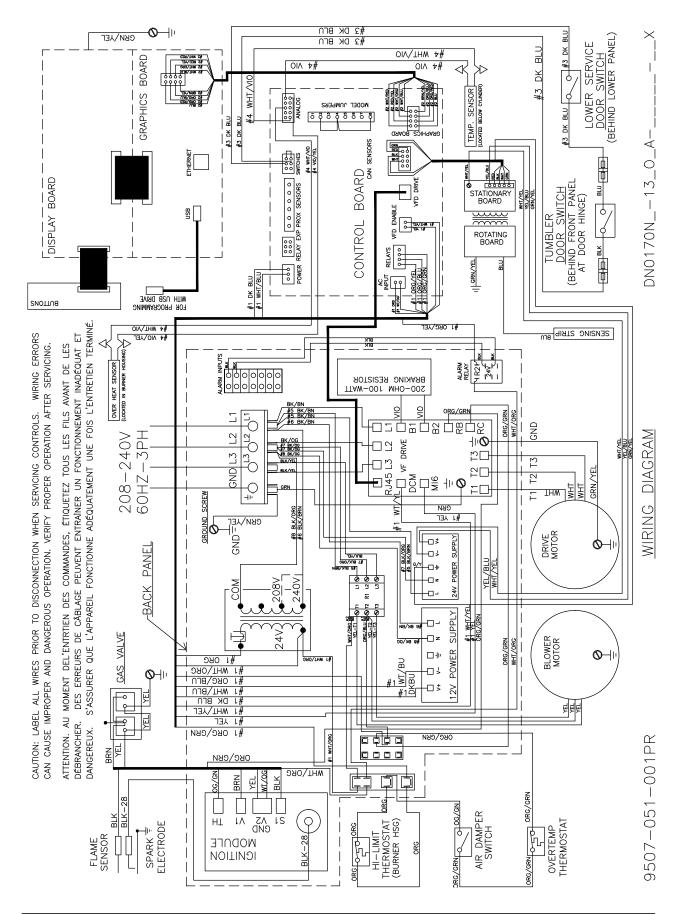

# Wiring Diagram

Part # 8533-123-001 11/23

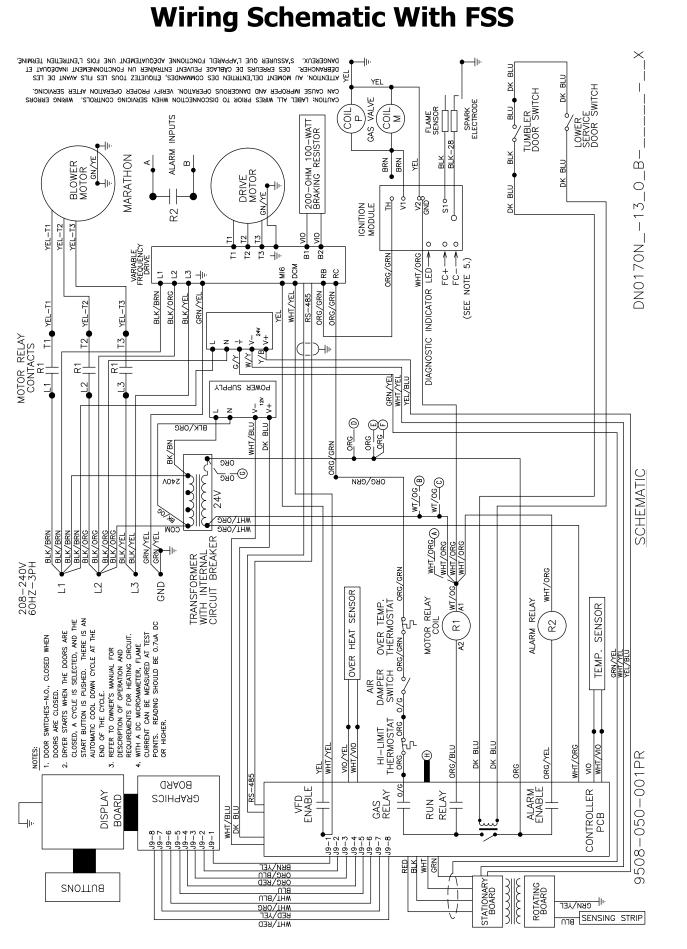

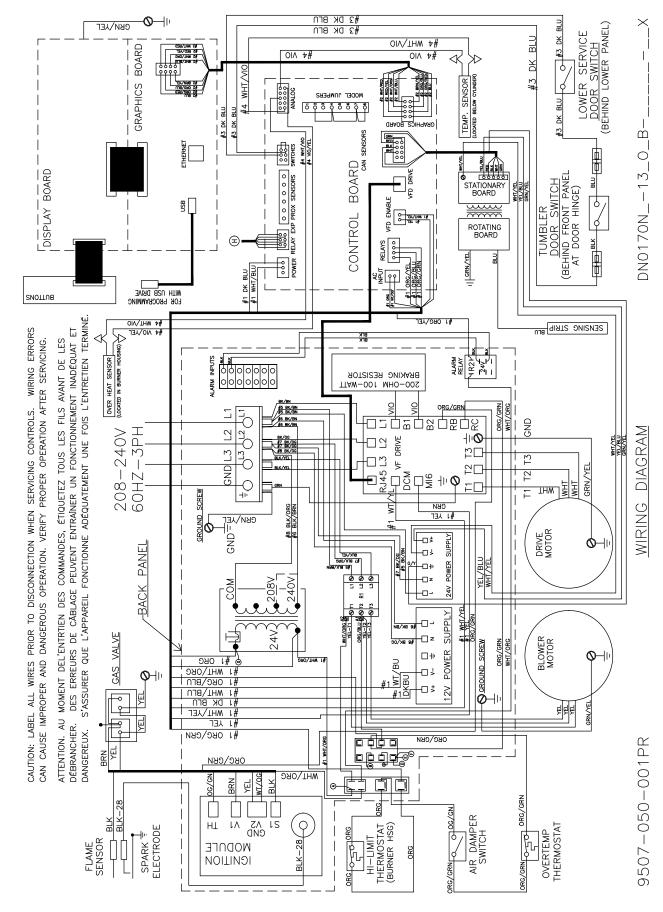

#### 124 Part # 8533-123-001 11/23



DN0170NE-39A01\_

# **Section 6:** 50Hz Dryer Parts Data

| Notes |
|-------|
|       |
|       |
|       |
|       |
|       |
|       |
|       |
|       |
|       |
|       |
|       |
|       |
|       |
|       |
|       |
|       |
|       |

# Section 7:

# Maintenance Schedule

#### Preventative Maintenance

#### Daily

- Step 1: Clean the lint screen free of lint and other debris. Use a soft brush and Hot water if necessary.
- Step 2: Check the lint screen for tears. Replace if necessary.
- **Step 3:** Clean lint from the lint screen compartment.
- **Step 4:** Inspect felt seal on lint screen assembly, replace if needed.

#### Monthly

- **Step 1:** Remove lint accumulation from the end bells of the motor.
- **Step 2:** Remove lint accumulation from front control area.
- **Step 3:** Remove lint and dirt accumulation from the top of the dryer and all areas above, below, and around the burners and burner housing. Failure to keep this portion of the dryer clean can lead to a build-up of lint creating a fire hazard.
- Step 4: Remove and clean coin acceptors. (Vended Models Only)

#### Quarterly

- **Step 1:** Check the belts for looseness, wear, or fraying.
- Step 2: Inspect the gasket of the door glass for excessive wear.
- **Step 3:** Check tightness of all fasteners holding parts to support channel.
- **Step 4:** Check tightness of all set screws.
- **Step 5:** Remove the air flow switch assembly and check the tumbler thru-bolts for tightness.
- **Step 6:** Apply a few drops of oil to pivot pins and the tension arms where in contact with each other.

#### **Semi-Annually**

- **Step 1:** Remove and clean the main burners.
- Step 2: Remove all orifices and examine for dirt and hole obstruction.
- **Step 3:** Remove all lint accumulation. Remove the front panel and the lint screen housing and remove lint accumulation.

#### Annually

- **Step 1:** Check the intermediate pulley bearings for wear.
- **Step 2:** Check and remove any lint accumulation from the exhaust system including recirculation chambers if applicable.
- **Step 3:** Grease the bearings and the shaft of the intermediate pulley. Use an Alemite grease gun and Molykote BR2-S grease. (Where applicable)